








Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Sound	 Sound / Title
 Vol+	 Vol+
 Vol-	 Vol-
 +10	 Guide / EPG / -/--
 Up	 Up
 Left	 Left

Original	Rechange
 Ent	 OK
 Right	 Right
 Down	 Down
 Function	 Smart / List
 Return	 Back / Return
 <I Slow	 CH- / Page-
 Slow I>	 CH+ / Page+
 Pause	 Pause / Step / Freeze
 Prev / Preset-	 I<< / Preset-
 Next / Preset+	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 << / Tuning-	 << / Tune-
 >> / Tuning+	 >> / Tune+
 Angle	 Info / Angle
 Audio	 Audio / Lang I/II
 Clear	 Exit / Cancel / Clear





	Original	Recharge		Original	Recharge
	 Memory	 Fav / Marker / PC			
	 Disp	 Display / Media			
	 Menu	 Menu / Home			
	 Goto	 Text / Goto			
	 Setup	 Setup / OPT /			
	 Zoom	 Zoom / Size			
	 Subtitle	 Subtitle / EQ			
	 FM Mode / Repeat A-B	 Yellow / YouTube / Repeat			
	 Band / Repeat	 Green / APP / Repeat			

	Original	Recharge

