



Original		Rechange		Original		Rechange	
	Power		Power		Recall		Back / Return
	Input		AV / Input / RDS		Del	+	Shift + Exit / Cancel / Clear
	Sleep		Sleep / Timer		Subtitle		Subtitle / EQ
	Nicam		Audio / Lang I/II		EPG		Guide / EPG / -/--
	P.Mode		Picture / Format		Red		Red / Netflix / Search
	S.Mode		Sound / Title		Green		Green / APP / Repeat
	1		1		Yellow		Yellow / YouTube / Repeat
	2		2		Blue		Blue / Prime Video / Random
	3		3		Mute		Mute / Dimmer
	4		4		Up		Up
	5		5		Info		Info / Angle
	6		6		Left		Left
	7		7		OK / CH List		OK
	8		8		Right		Right
	9		9		Menu		Menu / Home
	-/--	+	Shift + Guide / EPG / -/--		Down		Down
	0		0		Exit		Exit / Cancel / Clear





Original	Recharge	Original	Recharge
 Vol+	 Vol+	 << / TV/Radio	 TV/Radio /
 Home	 D.Menu / Top	 >> / Hold	 >> / Tune+
 CH+	 CH+ / Page+	 >> / Hold	 Shift + Stop /
 Vol-	 Vol-	 Stop / Reveal	 Stop / Hold
 Browser	 Smart / List	 I<< / Size	 I<< / Preset-
 CH-	 CH- / Page-	 >>I / Index	 >>I / Preset+
 Rec	 Rec / Rec Mode		
 Fav / Goto	 Fav / Marker / PC		
 Fav / Goto	 Shift + Text /		
 T.Shift	 Setup / OPT /		
 PVR List	 Display / Media		
 S.Page	 Eject / Surround		
 Zoom	 Zoom / Size		
 Play/Pause / TTX	 Pause / Step / Freeze		
 Play/Pause / TTX	 Text / Goto		
 Play/Pause / TTX	 Play / Slow		
 << / TV/Radio	 << / Tune-		

