
 

 

 






 
 
 
 
 
 




 


 
 


 
 
 
 






 
 






 














 




 
 















 
 
 
 
 
 





Original	Recharge	Original	Recharge
Power		Power	
Mute		Mute	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Audio		Dual	
Recall		Back	
Tv Menu		Menu	
Source		AV	
ChList		List	
Exit		Exit	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
Ok		Ok	
Vol+		Vol +	
Vol-		Vol -	
Sound		Shift + Dual	
Pic		Shift + Format	
Ch+		Ch +	
Ch-		Ch -	
Sleep		Sleep	
Aspect		Format	
Freeze		Eject	
Tv/Radio		TV/R	
Text		Text	

 




 



 



Original	Recharge	Original	Recharge
Epg	 Guide	I<<	 I<<
Fav	 Pre Ch	>>I	 >>I
Info	 Info	Play	 Play
Red	 Red	Pause	 Pause
Green	 Green	Stop	 Stop
Yellow	 Yellow	Rec/Rep	 Rec
Blue	 Blue		
Reveal	 Media		
Hold	 D. Menu		
Index	 +  Shift + Info		
Subpage	 +  Shift + AV		
List	 Smart		
Mix	 Options		
Subtitle	 Subt		
Size	 3D		
<<	 <<		
>>	 >>		



Original	Recharge	Original	Recharge
Power		Vol+	
Mute		Vol-	
[I]/Menu		CH+	
Exit		CH-	
Source		Up	
1		Down	
2		Right	
3		Left	
4		OK	
5		Recall	
6		Info	
7		EPG	
8		Freeze	
9		Red	
0		Green	
Subtitle		Yellow	
Text		Blue	



Original	Recharge	Original	Recharge
Audio	 Dual		
I<</[≡+]	 I<<		
>>I/[≡..]	 >>I		
[≡i]	 Smart		
Play	 Play		
Pause	 Pause		
Stop	 Stop		
REP/Rec	 Rec		
<</[≡o]	 <<		
>>/[≡?]	 >>		
FAV	 Pre Ch		

