





Original	Rechange	Original	Rechange
 Power	 Power	 Green / Sleep	 Green
 Mute	 Mute	 Green / Sleep	 Sleep
 1	 1	 Yellow / Q.View	 Yellow
 2	 2	 Blue / List	 Blue
 3	 3	 Blue / List	 List
 4	 4	 Up / PR+	 Up
 5	 5	 Up / PR+	 Ch +
 6	 6	 Down / PR-	 Down
 7	 7	 Down / PR-	 Ch -
 8	 8	 Right / Vol+	 Right
 9	 9	 Right / Vol+	 Vol +
 0	 0	 Left / Vol-	 Left
 Menu	 Menu	 OK	 Ok
 TV / AV	 AV	 PSM	 Format
 Red / I/II	 Red	 SSM	 Shift + Dual
 Red / I/II	 Dual	 PC/*	 Smart
 Left / Vol-	 Vol -	 ARC/*	 Media

Original	Rechange	Original	Rechange
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 Play	 Play	 Pause	 Pause
 Stop	 Stop	 Fast Forward	 Fast Forward
 Fast Reverse	 Fast Reverse	 SOUND	 AD
 DISC NAV	 DISC NAV	 SETTINGS	 SETTINGS
 LIST	 LIST	 OPT	 OPT
 DUAL	 DUAL	 ECO	 ECO
 SEARCH	 SEARCH	 3D	 3D
 PICTURE	 PICTURE	 TIMER	 TIMER
 SLEEP	 SLEEP	 AV	 AV
 TV/R	 TV/R	 E-MANUAL	 E-MANUAL
 FORMAT	 FORMAT	 REPEAT	 REPEAT
 ZOOM	 ZOOM	 TEXT	 TEXT
 D.MENU	 D.MENU	 UP	 UP
 TOP MENU	 TOP MENU	 DISPLAY	 DISPLAY
 MENU	 MENU	 INFO	 INFO
 OK	 OK	 OK	 OK
 LEFT	 LEFT	 LEFT	 LEFT
 RIGHT	 RIGHT	 RIGHT	 RIGHT
 UP	 UP	 UP	 UP
 DOWN	 DOWN	 DOWN	 DOWN
 CH +	 CH +	 CH +	 CH +
 CH -	 CH -	 CH -	 CH -
 VOL +	 VOL +	 VOL +	 VOL +
 VOL -	 VOL -	 VOL -	 VOL -
 HOME	 HOME	 HOME	 HOME
 SMART	 SMART	 SMART	 SMART
 APP	 APP	 APP	 APP
 MEDIA	 MEDIA	 MEDIA	 MEDIA
 1	 1	 1	 1
 2	 2	 2	 2
 3	 3	 3	 3
 4	 4	 4	 4
 5	 5	 5	 5
 6	 6	 6	 6
 7	 7	 7	 7
 8	 8	 8	 8
 9	 9	 9	 9
 0	 0	 0	 0
GUIDE	GUIDE	GUIDE	GUIDE
A	A	A	A
B	B	B	B
C	C	C	C
D	D	D	D
Mandis SHOP	Mandis SHOP	Mandis SHOP	Mandis SHOP
www.mandis.tv	www.mandis.tv	www.mandis.tv	www.mandis.tv



