



Original		Rechange		Original		Rechange	
	Power		Power		Blue		Blue
	DTV/VCR		Smart		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Mute		Mute
	6		6		Pause		Pause
	7		7		CH+		Ch +
	8		8		CH-		Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	Menu		Menu		Favorite		Shift + Pre Ch
	Exit		Exit		Recall		Pre Ch
	Red		Red		Lang		Dual
	Green		Green		Info		Info
	Yellow		Yellow		EPG		Guide





	Original	Recharge	Original	Recharge
	Tv/Radio			
	Audio			
	TTX			
	Subtitle			

