



Original	Recharge	Original	Recharge
Power	Power	Left	Left
DTV/VCR	Smart	Rec List	List
Mute	Mute	Favorite	Pre Ch
Menu	Menu	Game	Media
Info	Info	Recall	Back
EPG	Guide	1	1
Play	Play	2	2
Pause	Pause	3	3
Exit	Exit	4	4
OK	Ok	5	5
Up	Up	6	6
CH+	Ch +	7	7
CH-	Ch -	8	8
Down	Down	9	9
Right	Right	0	0
Vol+	Vol +	Tv/Radio	TV/R
Vol-	Vol -	Audio	Dual





Original		Recharge		Original		Recharge	
	Subtitle		Subt				
	Text		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Record		Rec				
	Stop		Stop				
	<<		<<				
	>>		>>				

