






 










 


 





 





| Original | Recharge | Original | Recharge |
|----------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
|  Power |  Power |  9 |  9 |
|  Sleep |  Sleep / Timer |  EPG |  Guide / EPG / -/- |
|  Screen |  Picture / Format |  0 |  0 |
|  Presets |  Setup / OPT / |  Swap |  Fav / Marker / PC |
|  TV/Radio / |  TV/Radio / |  Photo/Music/Movi |  D.Menu / Top |
|  FAV |  Shift + Fav / Marker / PC |  World |  Smart / List |
|  Lang |  Audio / Lang I/II |  Source |  AV / Input / RDS |
|  Subtitle |  Subtitle / EQ |  Menu |  Menu / Home |
|  TXT |  Text / Goto |  Up |  Up |
|  1 |  1 |  Left |  Left |
|  2 |  2 |  OK |  OK |
|  3 |  3 |  Right |  Right |
|  4 |  4 |  Down |  Down |
|  5 |  5 |  C |  Exit / Cancel / Clear |
|  6 |  6 |  Disp. |  Display / Media |
|  7 |  7 |  Search Mode |  Shift + Red / Netflix / |
|  8 |  8 |  Return |  Back / Return |





| Original | | Recharge | | Original | | Recharge | |
|-------------------------------------------------------------------------------------|----------------|-------------------------------------------------------------------------------------|------------------------|-------------------------------------------------------------------------------------|-------------|-------------------------------------------------------------------------------------|-----------------------------|
|  | CH+ |  | CH+ / Page+ |  | Yellow/Root |  | Yellow / YouTube / Repeat |
|  | Info |  | Info / Angle |  | Blue/Title |  | Blue / Prime Video / Random |
|  | Vol+ |  | Vol+ | | | | |
|  | CH- |  | CH- / Page- | | | | |
|  | Mute |  | Mute / Dimmer | | | | |
|  | Vol- |  | Vol- | | | | |
|  | Rec |  | Rec / Rec Mode | | | | |
|  | Pause |  | Pause / Step / Freeze | | | | |
|  | I<< |  | I<< / Preset- | | | | |
|  | >>I |  | >>I / Preset+ | | | | |
|  | << |  | << / Tune- | | | | |
|  | Play |  | Play / Slow | | | | |
|  | Stop |  | Stop / Hold | | | | |
|  | >> |  | >> / Tune+ | | | | |
|  | Red/↑/Zoom |  | Red / Netflix / Search | | | | |
|  | Red/↑/Zoom |  | Zoom / Size | | | | |
|  | Green/↓/Repeat |  | Green / APP / Repeat | | | | |

