



Original	Recharge
Power	Power
Mute	Mute / Dimmer
PIP-	Shift + CH- /
PIP	Zoom / Size
PIP+	Shift + CH+ /
Wide	Picture / Format
Swap	Smart / List
Lang(AD)	Audio / Lang I/II
Timers	Sleep / Timer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Recharge
9	9
Text	Text / Goto
0	0
AV	AV / Input / RDS
i	Info / Angle
Vol+	Vol+
Tv/Radio	TV/Radio /
PR+	CH+ / Page+
Vol-	Vol-
FAV	Fav / Marker / PC
PR-	CH- / Page-
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Guide	Guide / EPG / -/-
Up	Up





Original	Recharge
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Back/P<P	 Back / Return
 Subtitle	 Subtitle / EQ
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 LIB	 Setup / OPT /
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode

Original	Recharge

