










 







 

 

 



 







 



 



 



 

 





 



 



 


 
 




Original	Rechange	Original	Rechange
 Power MD	 Power	 Right	 Right
 TV	 TV/R	 Left	 Left
 CD	 Yellow	 Enter	 Ok
 DVD	 Blue	 Menu	 D. Menu
 Tuner/Band	 Green	 Display	 Info
 Tape	 Red	 Top Menu/Disc/Deck	 Menu
 VCR	 Smart	 1 MD	 1
 MD	 Media	 2 MD	 2
 Vol+	 Vol +	 3 MD	 3
 Vol-	 Vol -	 4 MD	 4
 Muting	 Mute	 5 MD	 5
 Stop MD	 Stop	 6 MD	 6
 Play MD	 Play	 7 MD	 7
 <</>> MD	 <<	 8 MD	 8
 >>/>> MD	 >>	 9 MD	 9
 Up	 Up	 0 MD	 0
 Down	 Down	 >10/-/- MD	 Guide














 


 
 
 


 





 











 





 

 

 

 








Original	Recharge
Tv/AV	AV
Stereo	Dual
Surround	Options
SFC	Subt
Test	Back
Delay	Format
Level	3D
+	Ch +
-	Ch -
Power TV	Shift + Power
Tv Vol Up	Shift + Vol +
Tv Vol Down	Shift + Vol -
1 Tv	Shift + 1
2 Tv	Shift + 2
3 Tv	Shift + 3
4 Tv	Shift + 4
5 Tv	Shift + 5

Original	Recharge
6 Tv	Shift + 6
7 Tv	Shift + 7
8 Tv	Shift + 8
9 Tv	Shift + 9
0 Tv	Shift + 0
>10/-/- Tv	Shift + Guide





Original		Rechange		Original		Rechange	
	Power DVD		Power		Right		Right
	TV		TV/R		Left		Left
	VCR		Smart		Enter		Ok
	Tuner/Band		Green		Stereo		Dual
	Tape		Red		Surround		Options
	MD		Media		SFC		Subt
	CD		Yellow		Test		Back
	DVD		Blue		Delay		Format
	Play DVD		Play		Level		3D
	I<</<< DVD		<<		+		Ch +
	Stop DVD		Stop		-		Ch -
	>>/>>I DVD		>>		1 DVD		1
	Top Menu/Disc/Deck		Menu		2 DVD		2
	Display		Info		3 DVD		3
	Menu		D. Menu		4 DVD		4
	Up		Up		5 DVD		5
	Down		Down		6 DVD		6






 





 





 









 













 





















 








Original	Rechange
 Power CD	 Power
 TV	 TV/R
 VCR	 Smart
 CD	 Yellow
 DVD	 Blue
 Tape	 Red
 MD	 Media
 Tuner/Band	 Green
 Stop CD	 Stop
 I<</<< CD	 <<
 >>/>>I CD	 >>
 Play CD	 Play
 Menu	 D. Menu
 Display	 Info
 Top Menu/Disc/Deck	 Menu
 Up	 Up
 Down	 Down

Original	Rechange
 Right	 Right
 Left	 Left
 Enter	 Ok
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
 +	 Ch +
 -	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Muting	 Mute
 Power Tape	 Shift + Power
 Stop Tape	 Shift + Stop
 Play Tape	 Shift + Play





Original		Rechange		Original		Rechange	
	Power VCR		Power		6 VCR		6
	VCR		Smart		7 VCR		7
	Tape		Red		8 VCR		8
	TV		TV/R		9 VCR		9
	CD		Yellow		0 VCR		0
	DVD		Blue		>10/-/- VCR		Guide
	Tuner/Band		Green		Direct Tuning/Disc Enter		Text
	MD		Media		Vol+		Vol +
	Stop		Stop		Vol-		Vol -
	I<</<<		<<		Muting		Mute
	>>/>>I		>>		Up		Up
	Play		Play		Down		Down
	1 VCR		1		Right		Right
	2 VCR		2		Left		Left
	3 VCR		3		Enter		Ok
	4 VCR		4		Top Menu/Disc/Deck		Menu
	5 VCR		5		Display		Info



