



| Original | | Rechange | | Original | | Rechange | |
|---|---------------|---|---------|---|-------------|---|------------------|
|  | TV |  | TV/R |  | Tv/AV |  | AV |
|  | CD |  | Yellow |  | Pro Logic |  | Media |
|  | DVD |  | Blue |  | Center- |  | Shift + Ch - |
|  | Tuner/Band |  | Green |  | Center+ |  | Shift + Ch + |
|  | Tape |  | Red |  | Test |  | Back |
|  | VCR |  | Smart |  | Surround + |  | Ch + |
|  | Vol+ |  | Vol + |  | Surround - |  | Ch - |
|  | Vol- |  | Vol - |  | Power TV |  | Power |
|  | Muting |  | Mute |  | Tv Vol Up |  | Shift + Vol + |
|  | Up |  | Up |  | Tv Vol Down |  | Shift + Vol - |
|  | Down |  | Down |  | 1 Tv |  | 1 |
|  | Right |  | Right |  | 2 Tv |  | 2 |
|  | Left |  | Left |  | 3 Tv |  | 3 |
|  | Select |  | Ok |  | 4 Tv |  | 4 |
|  | Menu |  | D. Menu |  | 5 Tv |  | 5 |
|  | Display |  | Info |  | 6 Tv |  | 6 |
|  | Disc/Deck 1/2 |  | Menu |  | 7 Tv |  | 7 |






 

 



 


















 









| | Original | Recharge | | Original | Recharge |
|--|-----------|----------|-------|----------|----------|
| | 8 Tv | | 8 | | |
| | 9 Tv | | 9 | | |
| | 0 Tv | | 0 | | |
| | >10/-- Tv | | Guide | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |













| Original | Recharge | Original | Recharge |
|---|---|--|--|
|  Power DVD |  Power |  Left |  Left |
|  TV |  TV/R |  Select |  Ok |
|  VCR |  Smart |  Test |  Back |
|  Tuner/Band |  Green |  Pro Logic |  Media |
|  Tape |  Red |  Center- |  Shift + Ch - |
|  CD |  Yellow |  Center+ |  Shift + Ch + |
|  DVD |  Blue |  Surround + |  Ch + |
|  Play DVD |  Play |  Surround - |  Ch - |
|  I<</<< DVD |  << |  1 DVD |  1 |
|  Stop DVD |  Stop |  2 DVD |  2 |
|  >>/>>I DVD |  >> |  3 DVD |  3 |
|  Disc/Deck 1/2 |  Menu |  4 DVD |  4 |
|  Display |  Info |  5 DVD |  5 |
|  Menu |  D. Menu |  6 DVD |  6 |
|  Up |  Up |  7 DVD |  7 |
|  Down |  Down |  8 DVD |  8 |
|  Right |  Right |  9 DVD |  9 |





| Original | Recharge | | |
|--|--------------------|--|-------|
| 0 | 0 DVD |  0 | 0 |
| $\geq 10 / - / -$ | $> 10 / - / -$ DVD |  GUIDE | Guide |
|  VOL + | Vol+ |  + VOL | Vol + |
|  - VO | Vol- |  VOL - | Vol - |
|  MUTING | Muting |  MUTE | Mute |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | Recharge |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | Rechange | Original | Rechange |
|---|---|---|---|
|  Power CD |  Power |  Left |  Left |
|  TV |  TV/R |  Select |  Ok |
|  VCR |  Smart |  Test |  Back |
|  CD |  Yellow |  Pro Logic |  Media |
|  DVD |  Blue |  Center- |  Shift + Ch - |
|  Tape |  Red |  Center+ |  Shift + Ch + |
|  Tuner/Band |  Green |  Surround + |  Ch + |
|  Stop CD |  Stop |  Surround - |  Ch - |
|  I<</<< CD |  << |  Vol+ |  Vol + |
|  >>/>>I CD |  >> |  Vol- |  Vol - |
|  Play CD |  Play |  Muting |  Mute |
|  Menu |  D. Menu |  Power Tape |  Shift + Power |
|  Display |  Info |  Stop Tape |  Shift + Stop |
|  Disc/Deck 1/2 |  Menu |  Play Tape |  Shift + Play |
|  Up |  Up |  I<</<< Tape |  Shift + << |
|  Down |  Down |  >>/>>I Tape |  Shift + >> |
|  Right |  Right |  Disc/Deck 1/2 |  Shift + Menu |



Tape

 


 





 

 



 


 
 
 




 









 





















 
 











| | Original | Recharge | | Recharge |
|---|--------------------------|---|-------------|----------|
|  | 1 CD-Tape |  | 1 | 1 |
|  | 2 CD-Tape |  | 2 | 2 |
|  | 3 CD-Tape |  | 3 | 3 |
|  | 4 CD-Tape |  | 4 | 4 |
|  | 5 CD-Tape |  | 5 | 5 |
|  | 6 CD-Tape |  | 6 | 6 |
|  | 7 CD-Tape |  | 7 | 7 |
|  | 8 CD-Tape |  | 8 | 8 |
|  | 9 CD-Tape |  | 9 | 9 |
|  | 0 CD-Tape |  | 0 | 0 |
|  | >10/-/- CD-Tape |  | GUIDE | Guide |
|  | Direct Tuning/Disc Enter |  | REPEAT TEXT | Text |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

| | Original | | Recharge |
|--|----------|--|----------|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Original | Rechange | Original | Rechange |
|--|--|--|---|
|  Power VCR |  Power |  7 VCR |  7 |
|  VCR |  Smart |  8 VCR |  8 |
|  Tape |  Red |  9 VCR |  9 |
|  TV |  TV/R |  0 VCR |  0 |
|  CD |  Yellow |  >10/-/- VCR |  Guide |
|  DVD |  Blue |  Direct Tuning/Disc Enter |  Text |
|  Tuner/Band |  Green |  Vol+ |  Vol + |
|  Stop |  Stop |  Vol- |  Vol - |
|  I<</<< |  << |  Muting |  Mute |
|  >>/>>I |  >> |  Up |  Up |
|  Play |  Play |  Down |  Down |
|  1 VCR |  1 |  Right |  Right |
|  2 VCR |  2 |  Left |  Left |
|  3 VCR |  3 |  Select |  Ok |
|  4 VCR |  4 |  Disc/Deck 1/2 |  Menu |
|  5 VCR |  5 |  Display |  Info |
|  6 VCR |  6 |  Menu |  D. Menu |





| Original | | Recharge | | Original | | Recharge | |
|----------|------------------|----------|---------------|----------|---------|----------|---------------|
| | Test | | Back | | >10/-/- | | Shift + Guide |
| | Pro Logic | | Media | | | | |
| | Center- | | Shift + Ch - | | | | |
| | Center+ | | Shift + Ch + | | | | |
| | Surround + | | Ch + | | | | |
| | Surround - | | Ch - | | | | |
| | Power Tuner/Band | | Shift + Power | | | | |
| | 1 Tuner/Band | | Shift + 1 | | | | |
| | 2 Tuner/Band | | Shift + 2 | | | | |
| | 3 Tuner/Band | | Shift + 3 | | | | |
| | 4 Tuner/Band | | Shift + 4 | | | | |
| | 5 Tuner/Band | | Shift + 5 | | | | |
| | 6 Tuner/Band | | Shift + 6 | | | | |
| | 7 Tuner/Band | | Shift + 7 | | | | |
| | 8 Tuner/Band | | Shift + 8 | | | | |
| | 9 Tuner/Band | | Shift + 9 | | | | |
| | 0 Tuner/Band | | Shift + 0 | | | | |

