

 






 









 



 


 






 






 

 
 

 










Original	Recharge	Original	Recharge
 Power TV	 Power	 Test	 Text
 Home Theater	 Media	 Delay	 Format
 Home Theater	 Smart	 Level	 3D
 Tape	 Red	 -	 Ch -
 CD	 Yellow	 +	 Ch +
 Tuner/Band	 Green	 1 Tv	 1
 DVD	 Blue	 2 Tv	 2
 Up	 Up	 3 Tv	 3
 Left	 Left	 4 Tv	 4
 Select	 Ok	 5 Tv	 5
 Right	 Right	 6 Tv	 6
 Down	 Down	 7 Tv	 7
 Display	 Info	 8 Tv	 8
 Menu	 Menu	 9 Tv	 9
 Stereo	 Dual	 0 Tv	 0
 Surround	 Subt	 >10 Tv	 Guide
 SFC	 Options	 CH-	 Shift + Ch -



 




 
 

 
 

 














 



 





 


 



Original	Recharge
CH+	Shift + Ch +
Tv/Video	AV
Disc/Deck 1/2	D. Menu
Muting	Mute
Vol-	Vol -
Vol+	Vol +

Original	Recharge





Original	Recharge	Original	Recharge
 Power DVD	 Power	 Menu	 Menu
 Home Theater	 Media	 Stereo	 Dual
 Home Theater	 Smart	 Surround	 Subt
 Tape	 Red	 SFC	 Options
 CD	 Yellow	 Test	 Text
 Tuner/Band	 Green	 Delay	 Format
 DVD	 Blue	 Level	 3D
 Play DVD	 Play	 -	 Ch -
 I<</<< DVD	 <<	 +	 Ch +
 Stop DVD	 Stop	 1 DVD	 1
 >>/>>I DVD	 >>	 2 DVD	 2
 Up	 Up	 3 DVD	 3
 Left	 Left	 4 DVD	 4
 Select	 Ok	 5 DVD	 5
 Right	 Right	 6 DVD	 6
 Down	 Down	 7 DVD	 7
 Display	 Info	 8 DVD	 8






Original	Rechange
 9 DVD	 9
 0 DVD	 0
 >10 DVD	 Guide
 CH-	 Shift + Ch -
 CH+	 Shift + Ch +
 Disc/Deck 1/2	 List
 Muting	 Mute
 Vol-	 Vol -
 Vol+	 Vol +

Original	Rechange



 
 



 



 



Original	Recharge
 Power CD	 Power
 Power Tape	 Shift + Power
 Home Theater	 Media
 Home Theater	 Smart
 Tape	 Red
 CD	 Yellow
 Tuner/Band	 Green
 DVD	 Blue
 Play Tape	 Shift + Play
 Play CD	 Play
 I<</<< Tape	 Shift + <<
 I<</<< CD	 <<
 Stop Tape	 Shift + Stop
 Stop CD	 Stop
 >>/>>I Tape	 Shift + >>
 >>/>>I CD	 >>
 Up	 Up

Original	Recharge
 Left	 Left
 Select	 Ok
 Right	 Right
 Down	 Down
 Display	 Info
 Menu	 Menu
 Stereo	 Dual
 Surround	 Subt
 SFC	 Options
 Test	 Text
 Delay	 Format
 Level	 3D
 -	 Ch -
 +	 Ch +
 Direct Tuning/Disc Enter	 D. Menu
 1 CD-Tape	 1
 2 CD-Tape	 2







Original		Recharge		Original		Recharge	
	3 CD-Tape		3				
	4 CD-Tape		4				
	5 CD-Tape		5				
	6 CD-Tape		6				
	7 CD-Tape		7				
	8 CD-Tape		8				
	9 CD-Tape		9				
	0 CD-Tape		0				
	>10 CD-Tape		Guide				
	CH-		Shift + Ch -				
	CH+		Shift + Ch +				
	Disc/Deck 1/2		List				
	Disc/Deck 1/2		Shift + List				
	Muting		Mute				
	Vol-		Vol -				
	Vol+		Vol +				





Original	Recharge	Original	Recharge
 Power VCR	 Power	 Display	 Info
 Power Tuner/Band	 Shift + Power	 Menu	 Menu
 Home Theater	 Media	 Stereo	 Dual
 Home Theater	 Smart	 Surround	 Subt
 Tape	 Red	 SFC	 Options
 CD	 Yellow	 Test	 Text
 Tuner/Band	 Green	 Delay	 Format
 DVD	 Blue	 Level	 3D
 Play	 Play	 -	 Ch -
 I<</<<	 <<	 +	 Ch +
 Stop	 Stop	 Direct Tuning/Disc Enter	 D. Menu
 >>/>>I	 >>	 1 VCR	 1
 Up	 Up	 1 Tuner/Band	 Shift + 1
 Left	 Left	 2 VCR	 2
 Select	 Ok	 >10 VCR	 Guide
 Right	 Right	 2 Tuner/Band	 Shift + 2
 Down	 Down	 3 VCR	 3





Original	Rechange
3 3 Tuner/Band	SHIFT + 3 Shift + 3
4 4 VCR	4 4
4 4 Tuner/Band	SHIFT + 4 Shift + 4
5 5 VCR	5 5
5 5 Tuner/Band	SHIFT + 5 Shift + 5
6 6 VCR	6 6
6 6 Tuner/Band	SHIFT + 6 Shift + 6
7 7 VCR	7 7
7 7 Tuner/Band	SHIFT + 7 Shift + 7
8 8 VCR	8 8
8 8 Tuner/Band	SHIFT + 8 Shift + 8
9 9 VCR	9 9
9 9 Tuner/Band	SHIFT + 9 Shift + 9
0 0 VCR	0 0
0 0 Tuner/Band	SHIFT + 0 Shift + 0
CH- CH-	SHIFT + CH- Shift + Ch -
CH+ CH+	SHIFT + CH+ Shift + Ch +

Original	Rechange
DISC/DECK 1/2 Disc/Deck 1/2	DISC NAV LIST List
MUTING Muting	MUTE Mute
- VOL Vol-	VOL - Vol -
VOL + Vol+	+ VOL Vol +
>10	SHIFT + GUIDE Shift + Guide

