



 



 





















































































 



 

 

 








 
 

 


 






















Original	Rechange	Original	Rechange
 Power Receiver	 Power	 3 Stereo	 Audio / Lang I/II
 Power Audio	 Red / Netflix / Search	 Test	 Text / Goto
 Power TV	 Blue / Prime Video / Random	 CH Select	 Setup / OPT /
 Power VCR	 Shift + Red / Netflix /	 Help	 Info / Angle
 Power VDP	 Yellow / YouTube / Repeat	 Disc	 Smart / List
 Power CD	 Green / APP / Repeat	 Disc Enter	 Display / Media
 Power TAPE	 Shift + Green / APP /	 TV / AV	 AV / Input / RDS
 TUNER	 Shift + 6	 TUNER 1	 1
 CD	 Shift + 3	 TUNER 2	 2
 TAPE	 Shift + 5	 TUNER 3	 3
 TV	 Shift + 1	 Direct Tuning	 Menu / Home
 VDP / VDP 6CH	 Shift + 2	 TV Vol+	 Shift + Vol+
 VCR 1	 Shift + 4	 TUNER 4	 4
 VCR 2	 Shift + 7	 TUNER 5	 5
 CH Level-	 CH- / Page-	 TUNER 6	 6
 CH Level+	 CH+ / Page+	 TUNER >=10	 Guide / EPG / -/-
 Surround	 Eject / Surround	 TV Vol-	 Shift + Vol-























 

 







Original	Recharge	Original	Recharge
 Power Receiver	 Power	 3 Stereo	 Audio / Lang I/II
 Power Audio	 Red / Netflix / Search	 Test	 Text / Goto
 Power TV	 Blue / Prime Video / Random	 CH Select	 Setup / OPT /
 Power VCR	 Shift + Red / Netflix /	 Help	 Info / Angle
 Power VDP	 Yellow / YouTube / Repeat	 Disc	 Smart / List
 Power CD	 Green / APP / Repeat	 Disc Enter	 Display / Media
 Power TAPE	 Shift + Green / APP /	 TV / AV	 AV / Input / RDS
 TUNER	 Shift + 6	 CD 1	 1
 CD	 Shift + 3	 CD 2	 2
 TAPE	 Shift + 5	 CD 3	 3
 TV	 Shift + 1	 Direct Tuning	 Menu / Home
 VDP / VDP 6CH	 Shift + 2	 TV Vol+	 Shift + Vol+
 VCR1	 Shift + 4	 CD 4	 4
 VCR 2	 Shift + 7	 CD 5	 5
 CH Level-	 CH- / Page-	 CD 6	 6
 CH Level+	 CH+ / Page+	 CD ≥=10	 Guide / EPG / -/-
 Surround	 Eject / Surround	 TV Vol-	 Shift + Vol-





	Original	Rechange	Original	Rechange
	CD 7	 7		
	CD 8	 8		
	CD 9	 9		
	CD 0	 0		
	CD I<<	 I<< / Preset-		
	CD >>I	 >>I / Preset+		
	CD <<	 << / Tune-		
	CD >>	 >> / Tune+		
	CD Pause	 Pause / Step / Freeze		
	CD Stop	 Stop / Hold		
	CD Play	 Play / Slow		
	Muting	 Mute / Dimmer		
	Volume-	 Vol-		
	Volume+	 Vol+		























 



 





Original	Recharge	Original	Recharge
Power Receiver	Power	3 Stereo	Audio / Lang I/II
Power Audio	Red / Netflix / Search	Test	Text / Goto
Power TV	Blue / Prime Video / Random	CH Select	Setup / OPT /
Power VCR	Shift + Red / Netflix /	Help	Info / Angle
Power VDP	Yellow / YouTube / Repeat	Disc	Smart / List
Power CD	Green / APP / Repeat	Disc Enter	Display / Media
Power TAPE	Shift + Green / APP /	TV / AV	AV / Input / RDS
TUNER	Shift + 6	VDP 1	1
CD	Shift + 3	VDP 2	2
TAPE	Shift + 5	VDP 3	3
TV	Shift + 1	Direct Tuning	Menu / Home
VDP / VDP 6CH	Shift + 2	TV Vol+	Shift + Vol+
VCR1	Shift + 4	VDP 4	4
VCR 2	Shift + 7	VDP 5	5
CH Level-	CH- / Page-	VDP 6	6
CH Level+	CH+ / Page+	VDP >=10	Guide / EPG / -/-
Surround	Eject / Surround	TV Vol-	Shift + Vol-





 



 































































	Original	Rechange	Original	Rechange
	VDP 7	 7		
	VDP 8	 8		
	VDP 9	 9		
	VDP 0	 0		
	VDP I<<	 I<< / Preset-		
	VDP >>I	 >>I / Preset+		
	VDP <<	 << / Tune-		
	VDP >>	 >> / Tune+		
	VDP Pause	 Pause / Step / Freeze		
	VDP Stop	 Stop / Hold		
	VDP Play	 Play / Slow		
	Muting	 Mute / Dimmer		
	Volume-	 Vol-		
	Volume+	 Vol+		





Original	Rechange	Original	Rechange
 Power Receiver	 Power	 3 Stereo	 Audio / Lang I/II
 Power Audio	 Red / Netflix / Search	 Test	 Text / Goto
 Power TV	 Blue / Prime Video / Random	 CH Select	 Setup / OPT /
 Power VCR	 Shift + Red / Netflix /	 Help	 Info / Angle
 Power VDP	 Yellow / YouTube / Repeat	 Disc	 Smart / List
 Power CD	 Green / APP / Repeat	 Disc Enter	 Display / Media
 Power TAPE	 Shift + Green / APP /	 TV / AV	 AV / Input / RDS
 TUNER	 Shift + 6	 VCR 1 1	 1
 CD	 Shift + 3	 VCR 1 2	 2
 TAPE	 Shift + 5	 VCR 1 3	 3
 TV	 Shift + 1	 Direct Tuning	 Menu / Home
 VDP / VDP 6CH	 Shift + 2	 TV Vol+	 Shift + Vol+
 VCR1	 Shift + 4	 VCR 1 4	 4
 VCR 2	 Shift + 7	 VCR 1 5	 5
 CH Level-	 CH- / Page-	 VCR 1 6	 6
 CH Level+	 CH+ / Page+	 VCR 1 ≥=10	 Guide / EPG / -/-
 Surround	 Eject / Surround	 TV Vol-	 Shift + Vol-





	Original	Rechange	Original	Rechange
	VCR 1 7	7		
	VCR 1 8	8		
	VCR 1 9	9		
	VCR 1 0	0		
	VCR 1 <<	<< / Tune-		
	VCR 1 >>	>> / Tune+		
	VCR 1 Pause	Pause / Step / Freeze		
	VCR 1 Stop	Stop / Hold		
	VCR 1 Play	Play / Slow		
	Muting	Mute / Dimmer		
	Volume-	Vol-		
	Volume+	Vol+		

