



| Original  |          | Recharge  |                           | Original  |                  | Recharge  |                         |
|---|----------|---|---------------------------|---|------------------|---|-------------------------|
|    | Power    |    | Power                     |    | 9                |    | 9                       |
|    | Sleep    |    | Sleep / Timer             |    | EPG              |    | Guide / EPG / -/-       |
|    | Screen   |    | Picture / Format          |    | 0                |    | 0                       |
|    | Presets  |    | Setup / OPT /             |    | Swap             |    | Fav / Marker / PC       |
|    | ↔        |    | TV/Radio /                |    | Photo/Music/Movi |    | D.Menu / Top            |
|    | FAV      |    | Shift + Fav / Marker / PC |    | World            |    | Smart / List            |
|    | Lang     |    | Audio / Lang I/II         |    | Source           |    | AV / Input / RDS        |
|    | Subtitle |    | Subtitle / EQ             |    | Menu             |    | Menu / Home             |
|    | TXT      |    | Text / Goto               |    | Up               |    | Up                      |
|   | 1        |   | 1                         |   | Left             |   | Left                    |
|  | 2        |  | 2                         |  | OK               |  | OK                      |
|  | 3        |  | 3                         |  | Right            |  | Right                   |
|  | 4        |  | 4                         |  | Down             |  | Down                    |
|  | 5        |  | 5                         |  | C                |  | Exit / Cancel / Clear   |
|  | 6        |  | 6                         |  | Disp.            |  | Display / Media         |
|  | 7        |  | 7                         |  | Search Mode      |  | Shift + Red / Netflix / |
|  | 8        |  | 8                         |  | Return           |  | Back / Return           |





|  | Original       | Recharge               |  | Original    | Recharge                    |
|--|----------------|------------------------|--|-------------|-----------------------------|
|  | CH+            | CH+ / Page+            |  | Yellow/Root | Yellow / YouTube / Repeat   |
|  | Info           | INFO / Angle           |  | Blue/Title  | Blue / Prime Video / Random |
|  | Vol+           | Vol+                   |  |             |                             |
|  | CH-            | CH- / Page-            |  |             |                             |
|  | Mute           | Mute / Dimmer          |  |             |                             |
|  | Vol-           | Vol-                   |  |             |                             |
|  | Rec            | Rec / Rec Mode         |  |             |                             |
|  | Pause          | Pause / Step / Freeze  |  |             |                             |
|  | I<<            | I<< / Preset-          |  |             |                             |
|  | >>I            | >>I / Preset+          |  |             |                             |
|  | <<             | << / Tune-             |  |             |                             |
|  | Play           | Play / Slow            |  |             |                             |
|  | Stop           | Stop / Hold            |  |             |                             |
|  | >>             | >> / Tune+             |  |             |                             |
|  | Red/↑/Zoom     | Red / Netflix / Search |  |             |                             |
|  | Red/↑/Zoom     | Zoom / Size            |  |             |                             |
|  | Green/↓/Repeat | Green / APP / Repeat   |  |             |                             |

