

 










 


 
 
 



 
 

 

 

 


 
 


 








 
 
 






 

 




 

 
 
 
 
 


Original	Rechange	Original	Rechange
On/Off	 Power	Volume+	 Vol +
Mute	 Mute	Chan.Up	 Ch +
Reveal	 Pause	Volume-	 Vol -
Txt Stop	 Stop	Chan.Down	 Ch -
Info	 Rec	1	 1
Menu video	 D. Menu	2	 2
Text	 Text	3	 3
TV/AV	 AV	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
Display	 Info	7	 7
Menu Left	 Left	8	 8
OK Enter	 Ok	9	 9
Menu Right	 Right	Guide -/-- 1.	 Guide
Menu Off	 Exit	0/10	 0
Menu Down	 Down	2.Fav P/C 2.	 Pre Ch
Back	 Back	Red	 Red



Original	Recharge	Original	Recharge
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
Tone-	 +  Shift + Stop		
Contrast+	 +  Shift + Ch +		
Contrast-	 +  Shift + Ch -		
Surround	 +  Shift + Red		
Nicam/Mono	 +  Shift + Green		
Level L	 +  Shift + Yellow		
Level R/Woofers	 +  Shift + Blue		



Original	Recharge	Original	Recharge
PWR On/Off	 Power	Volume+	 Vol +
Mute	 Mute	CH/Page+	 Ch +
Opt?	 Pause	Volume-	 Vol -
App	 Stop	CH/Page-	 Ch -
Info	 Rec	1. ?	 1
Video	 D. Menu	2abc	 2
Text	 Text	3def	 3
TV/SAT	 AV	4ghi	 4
Menu	 Menu	5jkl	 5
Menu Up	 Up	6mno	 6
Display	 Info	7pqrm	 7
Menu Left	 Left	8tuv	 8
OK Enter	 Ok	9wxyz	 9
Menu Right	 Right	Guide Pilote	 Guide
Exit	 Exit	0/10	 0
Menu Down	 Down	FAV Pref.	 Pre Ch
Back	 Back	Red	 Red



Original	Recharge	Original	Recharge
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
Freeze	 +  Shift + Stop		
	 +  Shift + Ch +		
	 +  Shift + Ch -		
East	 +  Shift + Red		
Lang./Rewind	 +  Shift + Green		
H/V Play	 +  Shift + Yellow		
LNB F.Forward	 +  Shift + Blue		

