



Original		Rechange		Original		Rechange	
	Standby		Power		9		9
	Mute		Mute / Dimmer		Music/Movie/Phot		Sound / Title
	Fav		Fav / Marker / PC		0/AV		0
	World		Smart / List		Info		Info / Angle
	TV/Radio		TV/Radio /		Vol+		Vol+
	Text		Text / Goto		P↔P		Zoom / Size
	Mail		Display / Media		P+		CH+ / Page+
	Lib		D.Menu / Top		Vol-		Vol-
	Timers		Sleep / Timer		Opt		Setup / OPT /
	1		1		P-		CH- / Page-
	2		2		Red		Red / Netflix / Search
	3		3		Green		Green / APP / Repeat
	4		4		Yellow		Yellow / YouTube / Repeat
	5		5		Blue		Blue / Prime Video / Random
	6		6		EPG		Guide / EPG / -/--
	7		7		Up		Up
	8		8		Exit		Exit / Cancel / Clear





Original		Rechange		Original		Rechange	
	Left		Left				
	OK		OK				
	Right		Right				
	Menu		Menu / Home				
	Down		Down				
	Back		Back / Return				
	Subtitle		Subtitle / EQ				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Audio		Audio / Lang I/II				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				

