
















































Original	Recharge
 Power	 Power
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 TV/SAT	 AV / Input / RDS
 TV/Radio	 TV/Radio /
 Zoom	 Zoom / Size
 List	 Smart / List
 Audio	 Audio / Lang I/II
 EPG	 Guide / EPG / -/--
 Timer	 Sleep / Timer
 Text	 Text / Goto
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 M/P	 Display / Media
 Mute	 Mute / Dimmer

Original	Recharge
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 Recall	 Back / Return
 P+	 >> / Preset+
 P-	 << / Preset-
 FAV	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3
 4	 4





Original		Rechange		Original		Rechange	
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
0	0	HDMI - BAT 0	0				
INFO	Info	ANGLE INFO	Info / Angle				
PAUSE	Pause	STEP - FREEZE II	Pause / Step / Freeze				





Original	Rechange
Power	Power
SAT	Smart / List
Info	Info / Angle
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0 / Zoom	Zoom / Size
0 / Zoom	0
Audio	Audio / Lang I/II
Mute	Mute / Dimmer
Recall	Back / Return

Original	Rechange
FAV	Fav / Marker / PC
Up / CH+	CH+ / Page+
Down / CH-	Down
Up / CH+	Up
Right / Vol+	Right
Right / Vol+	Vol+
Down / CH-	CH- / Page-
Left / Vol-	Vol-
Left / Vol-	Left
OK	OK
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Blue / Pause	Blue / Prime Video / Random
Blue / Pause	Pause / Step / Freeze
Red / Text	Red / Netflix / Search
Red / Text	Text / Goto
Multivideo	Display / Media






 
































 





























Original	Recharge
 Yellow / Subtitle	 Yellow / YouTube / Repeat
 Yellow / Subtitle	 Subtitle / EQ
 TV / AV	 AV / Input / RDS
 Green / P/N	 Green / APP / Repeat
 TV / Radio	 TV/Radio /
 SAT	 +  Shift + 0
 EPG	 Guide / EPG / -/--

Original	Recharge














Original	Rechange	Original	Rechange
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--

Original	Rechange	Original	Rechange
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--





























Original	Recharge	Original	Recharge
0/10	 0		
FAV Pref.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Dec/Pause	 Pause / Step / Freeze		
	 Smart / List		
	 D.Menu / Top		

Original	Recharge





Original	Recharge	Original	Recharge
Power		Power	Power
Mute		Mute / Dimmer	Mute / Dimmer
Pause		Pause / Step / Freeze	Pause / Step / Freeze
Audio		Audio / Lang I/II	Audio / Lang I/II
Zoom		Zoom / Size	Zoom / Size
Timer		Sleep / Timer	Sleep / Timer
Tv/Radio		TV/Radio /	TV/Radio /
Text		Text / Goto	Text / Goto
Tv/SAT		AV / Input / RDS	AV / Input / RDS
Menu		Menu / Home	Menu / Home
Up/CH+		Up	Up
Info		Info / Angle	Info / Angle
Left		Left	Left
OK		OK	OK
Right		Right	Right
Exit		Exit / Cancel / Clear	Exit / Cancel / Clear
Down/CH-		Down	Down

Original	Recharge	Original	Recharge
Recall		Back / Return	Back / Return
Vol+		Vol+	Vol+
List		Smart / List	Smart / List
P+		CH+ / Page+	CH+ / Page+
Vol-		Vol-	Vol-
M/P		Display / Media	Display / Media
P-		CH- / Page-	CH- / Page-
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
EPG		Guide / EPG / -/-	Guide / EPG / -/-





Original	Recharge	Original	Recharge
0/Sleeptimer	0		
FAV	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		

