


 

 
 

 
 


 



 


 
 

 
 


 
 

 




 


 





 


 






	Original	Recharge	Original	Recharge
	Power			Text
	Goto			Dual
	Mute			Media
	Source			3D
	1			Stop
	2			Play
	3			Pause
	4			Format
	5			Options
	6			Up
	7			Down
	8			Right
	9			Left
	0			Ok
	10+			Yellow
	Step			Red
	Subtitle			Green





Original	Rechange
	Blue
	I<<
	>>I
	TV/R
	+  Shift + Text
	Guide
	Info
	<</FAV
	>>/Prot

Original	Rechange

