 

 



 

 

 

 

 

 

 

 







 

 






 





 

 

 





 

 

 













 







 










 






Original	Recharge
 Source	 Shift + AV / Input / RDS
 Power	 Power
 List	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0	 0
 FAV	 Fav / Marker / PC
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home

Original	Recharge
 Up	 Up
 Left/Zoom-	 Left
 OK	 OK
 Right/Zoom+	 Right
 Down	 Down
 Guide	 Guide / EPG / -/--
 Return	 Back / Return
 Info	 Info / Angle
 Vol+	 Vol+
 Presets	 I<< / Preset-
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 PR-	 CH- / Page-
 Red/O) Lang	 Red / Netflix / Search
 Green/Subtitles	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat



 

 

 
 
 

 

 


 

 

 

 

 

 

 

 

 

 

 


 






 



Original	Recharge
 Blue	 Blue / Prime Video / Random
 Violet/Text	 Text / Goto
 Stop Text	 Shift + Stop /
 ??? Text	 Shift + Info / Angle
 Zoom Text	 Zoom / Size
 Media Digital	 Display / Media
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 T-Link	 D.Menu / Top
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze

Original	Recharge





 

 

 







Original	Rechange
 Power	 Power
 List	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0	 0
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Left/Zoom-	 Left

Original	Rechange
 OK	 OK
 Right/Zoom+	 Right
 Down	 Down
 Guide	 Guide / EPG / -/-
 Return	 Back / Return
 Info	 Info / Angle
 Vol+	 Vol+
 Presets	 I<< / Preset-
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 PR-	 CH- / Page-
 Red/O Lang	 Red / Netflix / Search
 Green/Subtitles	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Violet/Text	 Text / Goto





Original		Recharge	
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Original		Recharge	

