 


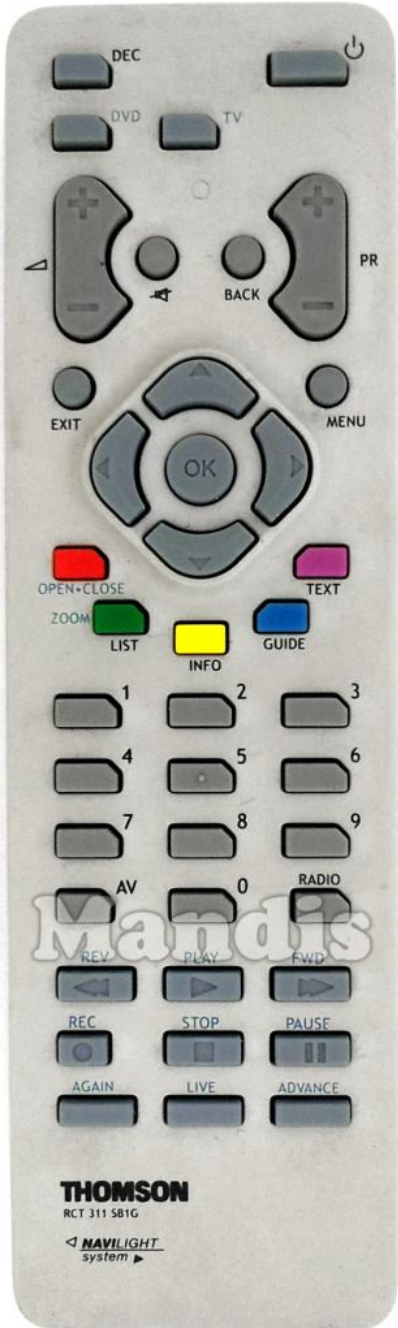







 

 

 

 

 





 











Original		Rechange		Original		Rechange	
	Power		Power		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Down		Down
	Play		Play / Slow		Back		Back / Return
	Pause		Pause / Step / Freeze		Vol+		Vol+
	Stop		Stop / Hold		Live		Smart / List
	Rec		Rec / Rec Mode		PR+		CH+ / Page+
	<<		<< / Tune-		Vol-		Vol-
	>>		>> / Tune+		Advance		Display / Media
	TV		TV/Radio /		PR-		CH- / Page-
	Dec		D.Menu / Top		1		1
	Violet/Text		Text / Goto		2		2
	AV		AV / Input / RDS		3		3
	Menu		Menu / Home		4		4
	Up		Up		5		5
	Left		Left		6		6
	OK		OK		7		7
	Right		Right		8		8





 


Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 TV	 TV/Radio /
 Dec	 D.Menu / Top
 Violet/Text	 Text / Goto
 AV	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right

 




 
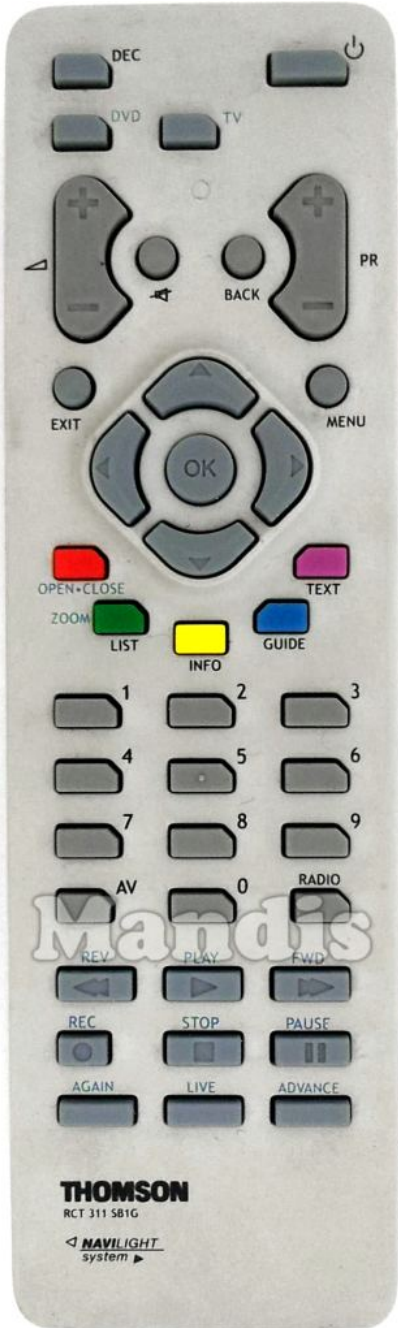 



 









Original	Rechange
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Back	 Back / Return
 Vol+	 Vol+
 Live	 Smart / List
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Advance	 Display / Media
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8







Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 TV	 TV/Radio /
 Dec	 D.Menu / Top
 Violet/Text	 Text / Goto
 AV	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right

Original	Rechange
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Back	 Back / Return
 Vol+	 Vol+
 Live	 Smart / List
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Advance	 Display / Media
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8



