



Original		Recharge		Original		Recharge	
	Power		Power		Pause / Timeshift		Pause / Step / Freeze
	Mute		Mute / Dimmer		Stop		Stop / Hold
	Red / Zoom		Red / Netflix / Search		Rec		Rec / Rec Mode
	Red / Zoom		Zoom / Size		Menu		Menu / Home
	Green / Aspect		Green / APP / Repeat		Up / CH+		Up
	Green / Aspect		Setup / OPT /		Exit		Exit / Cancel / Clear
	Yellow / V-Format		Picture / Format		Left / Vol-		Left
	Yellow / V-Format		Yellow / YouTube / Repeat		OK		OK
	Blue / Timer		Blue / Prime Video / Random		Right / Vol+		Right
	Blue / Timer		Sleep / Timer		Info		Info / Angle
	TTX		Text / Goto		Down / Ch-		Down
	Fav		Fav / Marker / PC		EPG		Guide / EPG / -/-
	<<		<< / Tune-		V+		Vol+
	>>		>> / Tune+		PG+		Shift + CH+ /
	I<<		I<< / Preset-		P+		CH+ / Page+
	>>I		>>I / Preset+		V-		Vol-
	Play		Play / Slow		PG-		Shift + CH- /

Page-





Original		Recharge		Original	Recharge
	P-		CH- / Page-		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	TV/Radio		TV/Radio /		
	0		0		
	Recall		Back / Return		

