









































 











 




 


 



 





Original	Recharge	Original	Recharge
 Open/Close	 Eject / Surround	 0	 0
 Input Select	 AV / Input / RDS	 Clear	 Exit / Cancel / Clear
 HDMI	 Shift + 0	 [i+]/Info	 Info / Angle
 Standby	 Power	 Text	 Text / Goto
 1	 1	 Variable Replay	 Vol+
 2	 2	 Variable Skip	 Vol-
 3	 3	 Guide	 Guide / EPG / -/-
 Prog+	 CH+ / Page+	 Top Menu	 D.Menu / Top
 4	 4	 Disc Menu	 Menu / Home
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 Prog-	 CH- / Page-	 Enter	 OK
 7	 7	 Right	 Right
 8	 8	 Display	 Display / Media
 9	 9	 Down	 Down
 Timer Prog	 Sleep / Timer	 Return	 Back / Return
 Setup	 Setup / OPT /	 Red	 Red / NetfliX / Search





Original	Recharge
Green	Green / APP / Repeat
Yellow/Mode	Yellow / YouTube / Repeat
Blue/Search	Blue / Prime Video / Random
Blue/Search	Shift + Red / Netflix /
<<<	<<< / Tune-
Play	Play / Slow
>>>	>>> / Tune+
I<<<	I<<< / Preset-
Stop	Stop / Hold
>>>I	>>>I / Preset+
Pause	Pause / Step / Freeze
VCR	Shift + 4
HDD	Shift + 7
DVD	Shift + 2
Time Slip	TV/Radio /
Dubbing	Picture / Format
Rec Mode	Shift + Rec / Rec Mode

Original	Recharge
Rec	Rec / Rec Mode
Subtitle	Subtitle / EQ
1.3x/0.8x PLayer	Shift + Play /
O))/Audio	Audio / Lang I/II
Sat Link	Smart / List

