



| Original |              | Rechange |                   | Original |            | Rechange |                        |
|----------|--------------|----------|-------------------|----------|------------|----------|------------------------|
|          | Open / Close |          | Eject / Surround  |          | 8          |          | 8                      |
|          | FL Dimmer    |          | Mute / Dimmer     |          | 9          |          | 9                      |
|          | On / Standby |          | Power             |          | 0          |          | 0                      |
|          | Setup        |          | Setup / OPT /     |          | +10        |          | Guide / EPG / -/-      |
|          | Display      |          | Display / Media   |          | T / Search |          | Red / Netflix / Search |
|          | Zoom         |          | Zoom / Size       |          | Top Menu   |          | D.Menu / Top           |
|          | 3D           |          | Shift + 3         |          | Up         |          | Up                     |
|          | Angle        |          | Info / Angle      |          | Menu       |          | Menu / Home            |
|          | Subtitle     |          | Subtitle / EQ     |          | Left       |          | Left                   |
|          | Audio        |          | Audio / Lang I/II |          | Enter      |          | OK                     |
|          | 1            |          | 1                 |          | Right      |          | Right                  |
|          | 2            |          | 2                 |          | Clear      |          | Exit / Cancel / Clear  |
|          | 3            |          | 3                 |          | Down       |          | Down                   |
|          | 4            |          | 4                 |          | Return     |          | Back / Return          |
|          | 5            |          | 5                 |          | REV        |          | << / Tune-             |
|          | 6            |          | 6                 |          | Play       |          | Play / Slow            |
|          | 7            |          | 7                 |          | FWD        |          | >> / Tune+             |



