

 



 



 



 

 

 

 

 

























 





 



 













Original	Recharge	Original	Recharge
 Power	 Power	 Vol-	 Vol-
 Lang	 Sound / Title	 OK	 OK
 Lang	 Shift + Audio / Lang I/II	 Right	 Right
 Search	 Red / Netflix / Search	 Vol+	 Vol+
 Memory	 D.Menu / Top	 Down	 Down
 Favorite PR	 Fav / Marker / PC	 CH-	 CH- / Page-
 Game	 Picture / Format	 Mute	 Mute / Dimmer
 Teletext	 Text / Goto	 Audio	 Audio / Lang I/II
 Guide	 Shift + Guide / EPG / -/-	 1	 1
 PR List	 Smart / List	 2	 2
 EPG	 Guide / EPG / -/-	 3	 3
 Info	 Info / Angle	 Pause	 Pause / Step / Freeze
 Menu	 Menu / Home	 4	 4
 Exit	 Exit / Cancel / Clear	 5	 5
 Up	 Up	 6	 6
 CH+	 CH+ / Page+	 Tv/Radio	 TV/Radio /
 Left	 Left	 7	 7





Original		Rechange		Original		Rechange	
8	8	8	8				
9	9	9	9				
	Sleep	SLEEP	Sleep / Timer				
0	0	0	0				
P/N	P/N	SETUP	Setup / OPT /				
S	Recall	BACK	Back / Return				
TV/AV	TV/AV	AV INPUT	AV / Input / RDS				
-	-	PRESET-	<< / Preset-				
+	+	PRESET+	>> / Preset+				
+ / -	- / +	SHIFT + 0	Shift + 0				
MODE	Mode	DISPLAY	Display / Media				

