



 

 


 

 



 





 







 


 
 





	Original	Recharge		Original	Recharge
	Power		Power		Exit
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Ok
	5		5		Vol +
	6		6		Vol -
	7		7		Shift + Dual
	8		8		Format
	9		9		Ch +
	0		0		Ch -
	Audio		Dual		Sleep
	Recall		Back		Aspect
	Tv Menu		Menu		Freeze
	Source		AV		USB
	CH List		List		Text





	Original	Rechange		Original	Rechange
	EPG	 GUIDE			I<<
	FAV	 PRE-CH			>>I
	Info	 INFO			Play
	Red	 A			Pause
	Green	 B			Stop
	Yellow	 C			Rec/Rep
	Blue	 D			
	DTV	 TV/R			
	Hold				
	List	 SHIFT + DISC NAV LIST	Shift + List		
	Subpage	 SHIFT + AD SUBT	Shift + Subt		
	Index	 SMART	Smart		
	PVR List	 D.MENU	D. Menu		
	Mix	 SHIFT + ECO 3D	Shift + 3D		
	Subtitle	 AD SUBT	Subt		
	<<		<<		
	>>		>>		

