




 
 

 

 
 
 
 

 








	Original	Rechange		Original	Rechange
POWER			Power	POWER	Power
MENU			Menu	TOP MENU	Menu
TITLE			Title	DISC NAV	List
SETUP			Setup	SETTINGS	Options
ANGLE			Angle	A	Red
REPEAT			Repeat	REPEAT	Text
A-B REPEAT			A-B Repeat	SEARCH	TV/R
SLOW			Slow	FAV	Pre Ch
FILE INFO			File Info	DISPLAY	Info
TIME SEARCH			Time Search	TIMER	AV
Brt. CONT.			Brt. Cont.	B	Green
MEDIA TYPE			Media Type	APP	Media
Up			Up	Up	Up
Down			Down	Down	Down
Right			Right	Right	Right
Left			Left	Left	Left
ENTER			Enter	OK	Ok

	Original	Rechange		Original	Rechange
MAIN PAGE			Main Page	HOME	Smart
PLAY/PAUSE			Play	PLAY MODE	Play
PLAY/PAUSE			Pause	PLAY MODE	Pause
STOP			Stop	PLAY MODE	Stop
REW			<<	PLAY MODE	<<
FF			>>	PLAY MODE	>>
PREV			I<<	PLAY MODE	I<<
NEXT			>>I	PLAY MODE	>>I
VIDEO			Video	PLAY MODE	Yellow
AUDIO			Audio	PLAY MODE	Dual
SUBTITLE			Subtitle	PLAY MODE	Subt
Scr.SIZE			Scr Size	PLAY MODE	Format
VOLUME			Vol+	PLAY MODE	Vol +
VOLUME			Vol-	PLAY MODE	Vol -
MUTE			Mute	PLAY MODE	Mute
1			1	PLAY MODE	1
2			2	PLAY MODE	2



