



Original	Recharge	Original	Recharge
	Power		Power
	Display		Display / Media
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Music		Red / Netflix / Search
	Copy		Info / Angle
	Zoom		Zoom / Size
	Tv System		TV/Radio /
	Browser		D.Menu / Top
	Vol-		Vol-
	Vol+		Vol+
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Time Shift		Sound / Title
	0		0
	Goto		Text / Goto
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold





Original	Recharge
Timer	Sleep / Timer
Pause/Step	Pause / Step / Freeze
I>/Slow	Fav / Marker / PC
I<</Prev	I<< / Preset-
ReclList	Smart / List
←/INS Replay	CH- / Page-
→/CM Skip	CH+ / Page+
>>I/Next	>>I / Preset+
A-B	Yellow / YouTube / Repeat
Subtitle	Subtitle / EQ
Repeat	Green / APP / Repeat
<</FR	<< / Tune-
F1	Blue / Prime Video / Random
Source	AV / Input / RDS
Audio	Audio / Lang I/II
>>/FF	>> / Tune+

Original	Recharge

