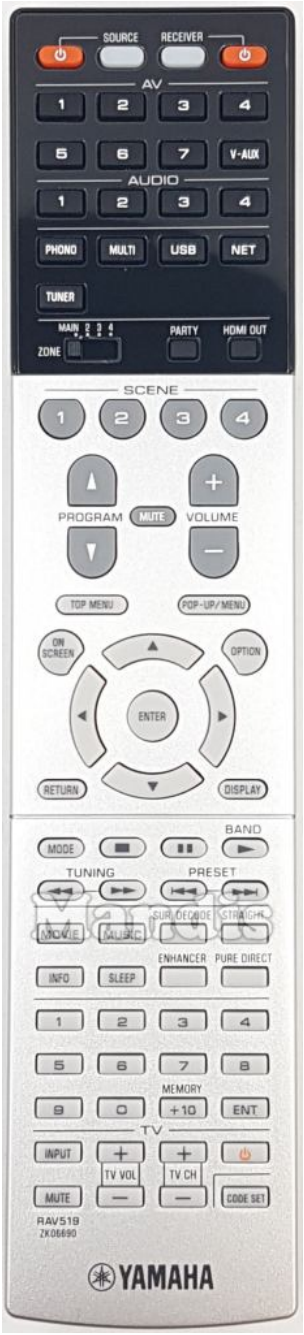


| Original | Replacement |
|---|---|
| Power Receiver | Power |
| Power Source | Shift + Power |
| AV1 | Shift + 1 |
| AV2 | Shift + 2 |
| AV3 | Shift + 3 |
| AV4 | Shift + 4 |
| AV5 | Shift + 5 |
| AV6 | Shift + 6 |
| AV7 | Shift + 7 |
| V-AUX | Shift + 8 |
| Audio 1 | Shift + 9 |
| Audio 2 | Shift + Guide / EPG / -/-- |
| Audio 3 | Shift + 0 |
| Audio 4 | Shift + Fav / Marker / PC |
| Phono | Shift + Red / Netflix / |
| Multi | Shift + Green / APP / |
| USB | Shift + Blue / Prime Video / Random |

| Original | Replacement |
|---|---|
| Net | Shift + Smart / List |
| Tuner | Shift + Yellow / YouTube / |
| Party | Smart / List |
| HDMI Out | AV / Input / RDS |
| Scene 1 | Red / Netflix / Search |
| Scene 2 | Green / APP / Repeat |
| Scene 3 | Yellow / YouTube / Repeat |
| Scene 4 | Blue / Prime Video / Random |
| Program Up | CH+ / Page+ |
| Program Down | CH- / Page- |
| Volume+ | Vol + |
| Volume- | Vol - |
| Mute | Mute / Dimmer |
| Top Menu | D.Menu / Top |
| Pop-Up Menu | Menu / Home |
| On Screen | Zoom / Size |
| Option | Setup / OPT / Tools |

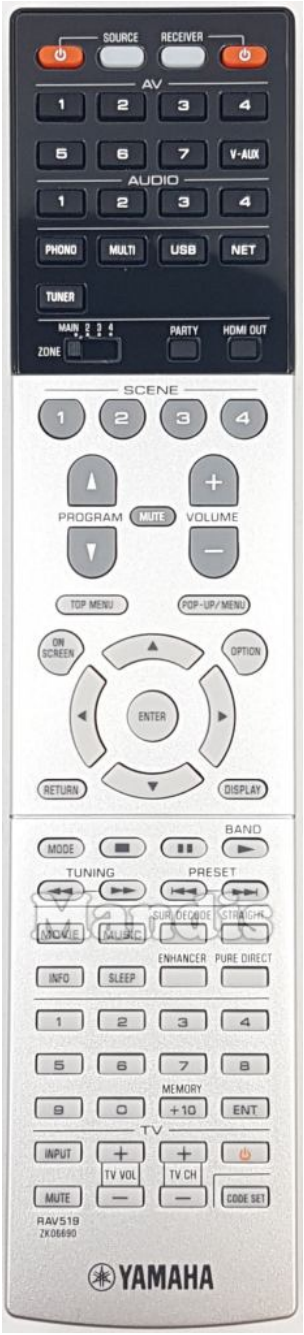


| Original | | Replacement | |
|---|---|---|---|
| RETURN | Return | RETURN BACK | Back / Return |
| DISPLAY | Display | MEDIA DISPLAY | Display / Media |
| | Up | | Up |
| | Down | | Down |
| | Right | | Right |
| | Left | | Left |
| ENTER | Enter | OK | OK |
| MODE | Mode | FORMAT PICTURE | Picture / Format |
| | Stop | HOLD | Stop / Hold |
| | Pause | STEP-FREEZE | Pause / Step / Freeze |
| BAND | Play/Band | SLOW | Play / Slow |
| | << Tuning | TUNE- | << / Tune- |
| | Tuning >> | TUNE+ | >> / Tune+ |
| | I<< Preset | PRESET- | I<< / Preset- |
| | Preset >>I | PRESET+ | >>I / Preset+ |
| MOVIE | Movie | EQ SUBTITLE | Subtitle / EQ |
| MUSIC | Music | LANG I/II AUDIO | Audio / Lang I/II |

| Original | | Replacement | |
|---|---|---|---|
| SUR. DECODE | Sur Decode | SURROUND | Eject / Surround |
| STRAIGHT | Straight | TITLE SOUND | Sound / Title |
| INFO | Info | ANGLE INFO | Info / Angle |
| SLEEP | Sleep | TIMER SLEEP | Sleep / Timer |
| ENHANCER | Enhancer | GOTO TEXT | Text / Goto |
| PURE DIRECT | Pure Direct | PROGRAM TV/RADIO | TV/Radio / |
| 1 | 1 | TV 1 | 1 |
| 2 | 2 | DVD 2 | 2 |
| 3 | 3 | CD-STB 3 | 3 |
| 4 | 4 | VIDEO 4 | 4 |
| 5 | 5 | TAPE 5 | 5 |
| 6 | 6 | TUNER 6 | 6 |
| 7 | 7 | AUX-HDD 7 | 7 |
| 8 | 8 | USB 8 | 8 |
| 9 | 9 | BLUETOOTH 9 | 9 |
| 0 | 0 | HDMI-SAT 0 | 0 |
| MEMORY +10 | +10/Memory | -/-- GUIDE EPG | Guide / EPG / -/-- |

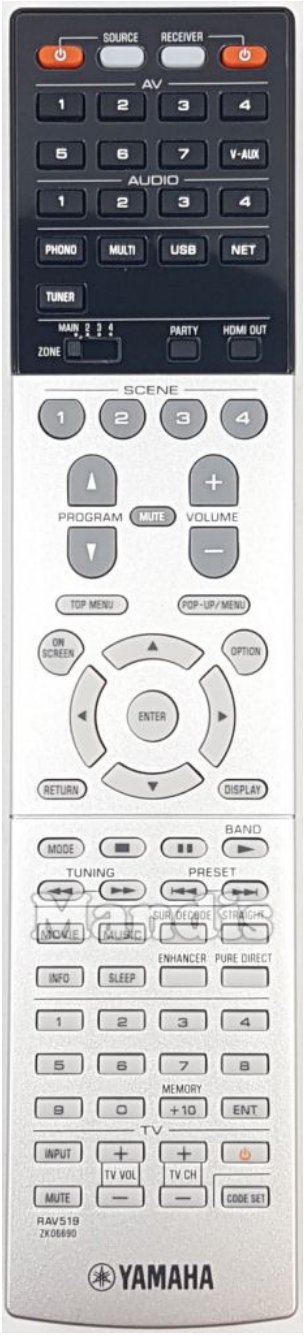


| Original | Replacement | Original | Replacement |
|---|---|---|---|
| ENT. | Fav / Marker / PC | | |

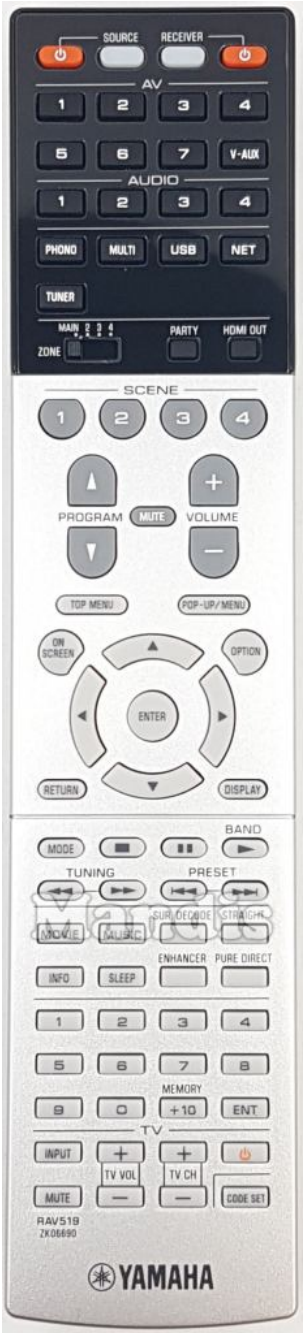


| Original | | Replacement | |
|---|---|---|---|
| | Power Receiver | | Power |
| | Power Source | SHIFT + | Shift + Power |
| 1 | AV1 | SHIFT + TV 1 | Shift + 1 |
| 2 | AV2 | SHIFT + DVD 2 | Shift + 2 |
| 3 | AV3 | SHIFT + CD-STB 3 | Shift + 3 |
| 4 | AV4 | SHIFT + VIDEO 4 | Shift + 4 |
| 5 | AV5 | SHIFT + TAPE 5 | Shift + 5 |
| 6 | AV6 | SHIFT + TUNER 6 | Shift + 6 |
| 7 | AV7 | SHIFT + AUX-HDD 7 | Shift + 7 |
| V-AUX | V-AUX | SHIFT + USB 8 | Shift + 8 |
| 1 | Audio 1 | SHIFT + BLUETOOTH 9 | Shift + 9 |
| 2 | Audio 2 | SHIFT + -/-- GUIDE EPG | Shift + Guide / EPG / -/-- |
| 3 | Audio 3 | SHIFT + HDMI-SAT 0 | Shift + 0 |
| 4 | Audio 4 | SHIFT + PC FAV MARKER | Shift + Fav / Marker / PC |
| PHONO | Phono | SHIFT + NETFLIX SEARCH | Shift + Red / Netflix / |
| NET | Net | SHIFT + LIST SMART | Shift + Smart / List |
| USB | USB | SHIFT + Prime Video RANDOM | Shift + Blue / Prime Video / Random |

| Original | | Replacement | |
|---|---|---|---|
| TUNER | Tuner | SHIFT + YouTube REPEAT A-B | Shift + Yellow / YouTube / |
| PARTY | Party | LIST SMART | Smart / List |
| HDMI OUT | HDMI Out | RDS AV INPUT | AV / Input / RDS |
| 1 | Scene 1 | NETFLIX SEARCH | Red / Netflix / Search |
| 2 | Scene 2 | APP REPEAT | Green / APP / Repeat |
| 3 | Scene 3 | YouTube REPEAT A-B | Yellow / YouTube / Repeat |
| 4 | Scene 4 | Prime Video RANDOM | Blue / Prime Video / Random |
| | Mute | DIMMER MUTE | Mute / Dimmer |
| + VOLUME | Volume+ | + VOL | Vol + |
| VOLUME − | Volume- | VOL − | Vol - |
| POP-UP/MENU | Pop-Up Menu | HOME MENU | Menu / Home |
| TOP MENU | Top Menu | TOP MENU D.MENU | D.Menu / Top |
| OPTION | Option | OPT-TOOLS SETUP | Setup / OPT / |
| DISPLAY | Display | MEDIA DISPLAY | Display / Media |
| RETURN | Return | RETURN BACK | Back / Return |
| ON SCREEN | On Screen | SIZE ZOOM | Zoom / Size |
| | Up | | Up |

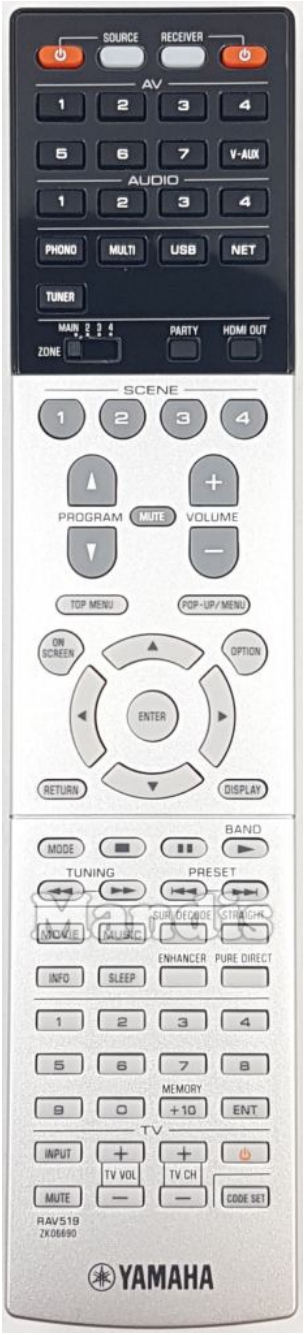


| Original | | Replacement | |
|---|---|---|---|
| | Down | | Down |
| | Right | | Right |
| | Left | | Left |
| ENTER | Enter | OK | OK |
| MODE | Mode | FORMAT PICTURE | Picture / Format |
| | Stop | HOLD | Stop / Hold |
| | Pause | STEP-FREEZE | Pause / Step / Freeze |
| BAND | Play/Band | SLOW | Play / Slow |
| | << Tuning | TUNE- | << / Tune- |
| | Tuning >> | TUNE+ | >> / Tune+ |
| | I<< Preset | PRESET- | I<< / Preset- |
| | Preset >>I | PRESET+ | >>I / Preset+ |
| INFO | Info | ANGLE INFO | Info / Angle |
| SLEEP | Sleep | TIMER SLEEP | Sleep / Timer |
| 1 | 1 | TV 1 | 1 |
| 2 | 2 | DVD 2 | 2 |
| 3 | 3 | CD-STB 3 | 3 |

| Original | | Replacement | |
|---|---|---|---|
| 4 | 4 | VIDEO 4 | 4 |
| 5 | 5 | TAPE 5 | 5 |
| 6 | 6 | TUNER 6 | 6 |
| 7 | 7 | AUX-HDD 7 | 7 |
| 8 | 8 | USB 8 | 8 |
| 9 | 9 | BLUETOOTH 9 | 9 |
| 0 | 0 | HDMI-SAT 0 | 0 |
| MEMORY +10 | +10/Memory | -/-- GUIDE EPG | Guide / EPG / -/-- |
| ENT | ENT | PC FAV MARKER | Fav / Marker / PC |

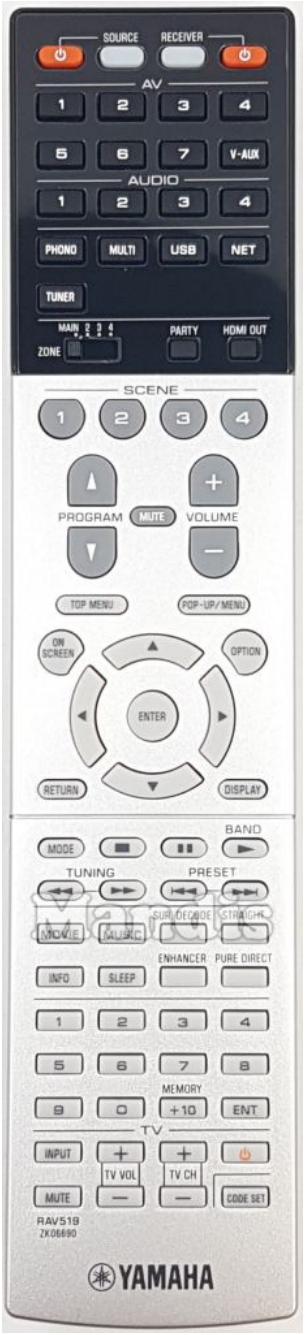


| Original | | Replacement | |
|---|---|---|---|
| | Power Receiver | | Power |
| | Power Source | SHIFT + | Shift + Power |
| 1 | AV1 | SHIFT + TV 1 | Shift + 1 |
| 2 | AV2 | SHIFT + DVD 2 | Shift + 2 |
| 3 | AV3 | SHIFT + CD - STB 3 | Shift + 3 |
| 4 | AV4 | SHIFT + VIDEO 4 | Shift + 4 |
| 5 | AV5 | SHIFT + TAPE 5 | Shift + 5 |
| 6 | AV6 | SHIFT + TUNER 6 | Shift + 6 |
| 7 | AV7 | SHIFT + AUX - HDD 7 | Shift + 7 |
| V-AUX | V-AUX | SHIFT + USB 8 | Shift + 8 |
| 1 | Audio 1 | SHIFT + BLUETOOTH 9 | Shift + 9 |
| 2 | Audio 2 | SHIFT + -/-- GUIDE EPG | Shift + Guide / EPG / -/-- |
| 3 | Audio 3 | SHIFT + HDMI - SAT 0 | Shift + 0 |
| 4 | Audio 4 | SHIFT + PC FAV MARKER | Shift + Fav / Marker / PC |
| PHONO | Phono | SHIFT + NETFLIX SEARCH | Shift + Red / Netflix / |
| USB | USB | SHIFT + Prime Video RANDOM | Shift + Blue / Prime |
| NET | Net | SHIFT + LIST SMART | Shift + Smart / List |

| Original | | Replacement | |
|---|---|---|---|
| TUNER | Tuner | SHIFT + YouTube REPEAT A-B | Shift + Yellow / YouTube / |
| PARTY | Party | LIST SMART | Smart / List |
| HDMI OUT | HDMI Out | RDS AV INPUT | AV / Input / RDS |
| 1 | Scene 1 | NETFLIX SEARCH | Red / Netflix / Search |
| 2 | Scene 2 | APP REPEAT | Green / APP / Repeat |
| 3 | Scene 3 | YouTube REPEAT A-B | Yellow / YouTube / Repeat |
| 4 | Scene 4 | Prime Video RANDOM | Blue / Prime Video / Random |
| + VOLUME | Volume+ | + VOL | Vol + |
| VOLUME − | Volume - | VOL − | Vol - |
| MUTE | Mute | DIMMER MUTE | Mute / Dimmer |
| POP-UP/MENU | Pop-Up Menu | HOME MENU | Menu / Home |
| TOP MENU | Top Menu | TOP MENU D.MENU | D.Menu / Top |
| INFO | Info | ANGLE INFO | Info / Angle |
| OPTION | Option | OPT-TOOLS SETUP | Setup / OPT / |
| RETURN | Return | RETURN BACK | Back / Return |
| ON SCREEN | On Screen | SIZE ZOOM | Zoom / Size |
| ENTER | Enter | OK | OK |

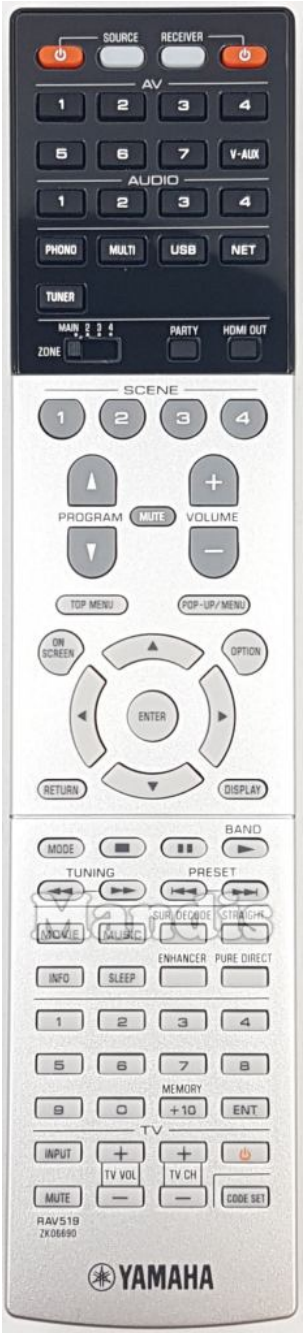


| Original | | Replacement | | Original | | Replacement | |
|---|---|---|---|---|---|---|---|
| DISPLAY | Display | MEDIA DISPLAY | Display / Media | 4 | 4 | VIDEO 4 | 4 |
| | Up | | Up | 5 | 5 | TAPE 5 | 5 |
| | Down | | Down | 6 | 6 | TUNER 6 | 6 |
| | Right | | Right | 7 | 7 | AUX - HDD 7 | 7 |
| | Left | | Left | 8 | 8 | USB 8 | 8 |
| MODE | Mode | FORMAT PICTURE | Picture / Format | 9 | 9 | BLUETOOTH 9 | 9 |
| | Stop | HOLD | Stop / Hold | 0 | 0 | HDMI - SAT 0 | 0 |
| | Pause | STEP - FREEZE | Pause / Step / Freeze | MEMORY +10 | +10/Memory | -/-- GUIDE EPG | Guide / EPG / -/-- |
| BAND | Play/Band | SLOW | Play / Slow | ENT | ENT | PC FAV MARKER | Fav / Marker / PC |
| | << Tuning | TUNE- | << / Tune- | | | | |
| | Tuning >> | TUNE+ | >> / Tune+ | | | | |
| | I<< Preset | PRESET- | I<< / Preset- | | | | |
| | Preset >>I | PRESET+ | >>I / Preset+ | | | | |
| SLEEP | Sleep | TIMER SLEEP | Sleep / Timer | | | | |
| 1 | 1 | TV 1 | 1 | | | | |
| 2 | 2 | DVD 2 | 2 | | | | |
| 3 | 3 | CD - STB 3 | 3 | | | | |

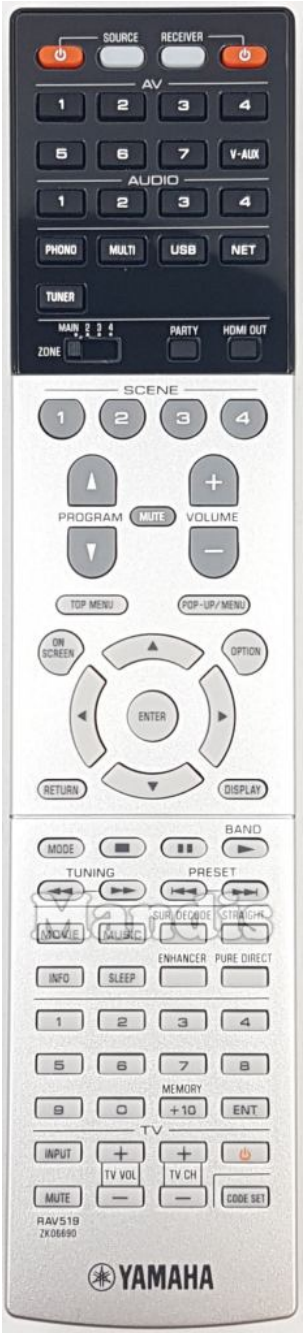


| Original | | Replacement | |
|---|---|---|---|
| | Power Receiver | | Power |
| | Power Source | SHIFT + | Shift + Power |
| 1 | AV1 | SHIFT + TV 1 | Shift + 1 |
| 2 | AV2 | SHIFT + DVD 2 | Shift + 2 |
| 3 | AV3 | SHIFT + CD - STB 3 | Shift + 3 |
| 4 | AV4 | SHIFT + VIDEO 4 | Shift + 4 |
| 5 | AV5 | SHIFT + TAPE 5 | Shift + 5 |
| 6 | AV6 | SHIFT + TUNER 6 | Shift + 6 |
| 7 | AV7 | SHIFT + AUX - HDD 7 | Shift + 7 |
| V-AUX | V-AUX | SHIFT + USB 8 | Shift + 8 |
| 1 | Audio 1 | SHIFT + BLUETOOTH 9 | Shift + 9 |
| 2 | Audio 2 | SHIFT + -/-- GUIDE EPG | Shift + Guide / EPG / -/-- |
| 3 | Audio 3 | SHIFT + HDMI - SAT 0 | Shift + 0 |
| 4 | Audio 4 | SHIFT + PC FAV MARKER | Shift + Fav / Marker / PC |
| PHONO | Phono | SHIFT + NETFLIX SEARCH | Shift + Red / Netflix / |
| USB | USB | SHIFT + Prime Video RANDOM | Shift + Blue / Prime |
| NET | Net | SHIFT + LIST SMART | Shift + Smart / List |

| Original | | Replacement | |
|---|---|---|---|
| TUNER | Tuner | SHIFT + YouTube REPEAT A-B | Shift + Yellow / YouTube / |
| PARTY | Party | LIST SMART | Smart / List |
| HDMI OUT | HDMI Out | RDS AV INPUT | AV / Input / RDS |
| 1 | Scene 1 | NETFLIX SEARCH | Red / Netflix / Search |
| 2 | Scene 2 | APP REPEAT | Green / APP / Repeat |
| 3 | Scene 3 | YouTube REPEAT A-B | Yellow / YouTube / Repeat |
| 4 | Scene 4 | Prime Video RANDOM | Blue / Prime Video / Random |
| + VOLUME | Volume+ | + VOL | Vol + |
| VOLUME − | Volume- | VOL − | Vol - |
| MUTE | Mute | DIMMER MUTE | Mute / Dimmer |
| TOP MENU | Top Menu | TOP MENU D.MENU | D.Menu / Top |
| POP-UP/MENU | Pop-Up Menu | HOME MENU | Menu / Home |
| ON SCREEN | On Screen | SIZE ZOOM | Zoom / Size |
| OPTION | Option | OPT-TOOLS SETUP | Setup / OPT / |
| RETURN | Return | RETURN BACK | Back / Return |
| DISPLAY | Display | MEDIA DISPLAY | Display / Media |
| | Up | | Up |

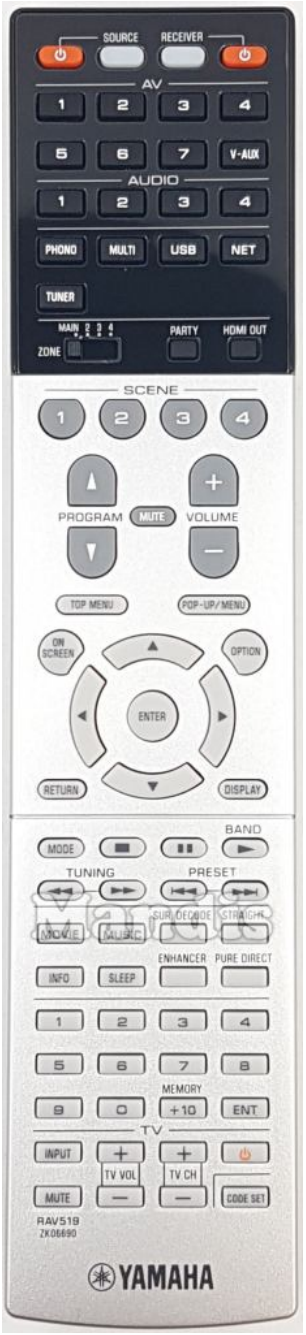


| Original | | Replacement | |
|---|---|---|---|
| | Down | | Down |
| | Right | | Right |
| | Left | | Left |
| ENTER | Enter | OK | OK |
| MODE | Mode | FORMAT PICTURE | Picture / Format |
| | Stop | HOLD | Stop / Hold |
| | Pause | STEP-FREEZE | Pause / Step / Freeze |
| BAND | Play/Band | SLOW | Play / Slow |
| | << Tuning | TUNE- | << / Tune- |
| | Tuning >> | TUNE+ | >> / Tune+ |
| | I<< Preset | PRESET- | I<< / Preset- |
| | Preset >>I | PRESET+ | >>I / Preset+ |
| INFO | Info | ANGLE INFO | Info / Angle |
| SLEEP | Sleep | TIMER SLEEP | Sleep / Timer |
| 1 | 1 | TV 1 | 1 |
| 2 | 2 | DVD 2 | 2 |
| 3 | 3 | CD-STB 3 | 3 |

| Original | | Replacement | |
|---|---|---|---|
| 4 | 4 | VIDEO 4 | 4 |
| 5 | 5 | TAPE 5 | 5 |
| 6 | 6 | TUNER 6 | 6 |
| 7 | 7 | AUX-HDD 7 | 7 |
| 8 | 8 | USB 8 | 8 |
| 9 | 9 | BLUETOOTH 9 | 9 |
| 0 | 0 | HDMI-SAT 0 | 0 |
| MEMORY +10 | +10/Memory | -/-- GUIDE EPG | Guide / EPG / -/-- |
| ENT | ENT | PC FAV MARKER | Fav / Marker / PC |