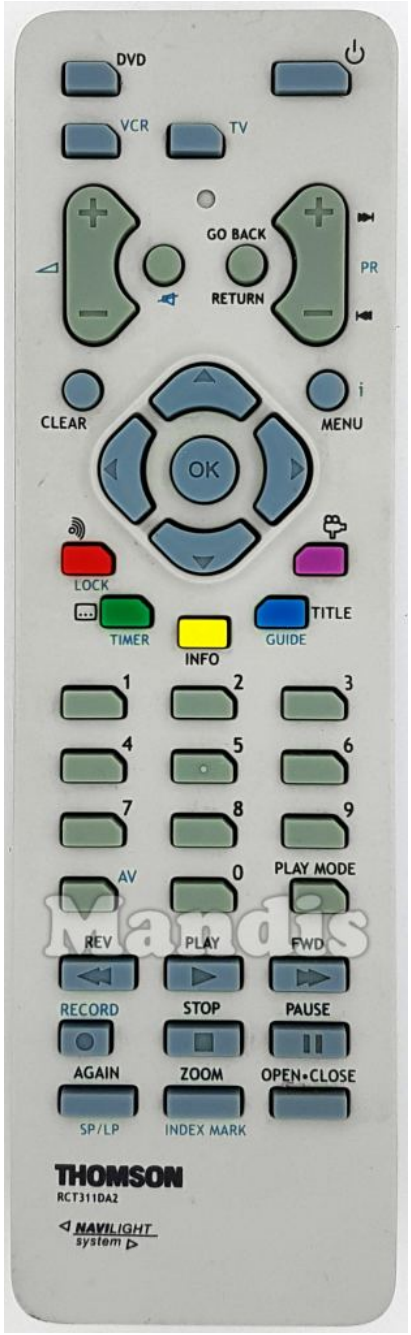

Original		Sustituto	
	Power		Power
	DVD	APP MEDIA	Media
	VCR	HOME SMART	Smart
	TV	SEARCH TV/R	TV/R
	Vol+	+ VOL	Vol +
	Vol-	VOL −	Vol -
	Mute	MUTE	Mute
GO BACK RETURN	Go Back/Return	RETURN BACK	Back
	>>I		>>I
	I<<		I<<
CLEAR	Clear	CLEAR EXIT	Exit
MENU	Menu/i	TOP MENU MENU	Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
OK	OK	OK	Ok

Original		Sustituto	
LOCK	Red/·))/Lock	A	Red
TIMER	Green/Timer/[...]	B	Green
INFO	Yellow/Info	C	Yellow
TITLE GUIDE	Blue/Guide	D	Blue
	Violet/Camera	FAV PRE-CH	Pre Ch
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
AV	AV	TIMER AV	AV
PLAY MODE	Play Mode	SHIFT + PLAY MODE	Shift + Play

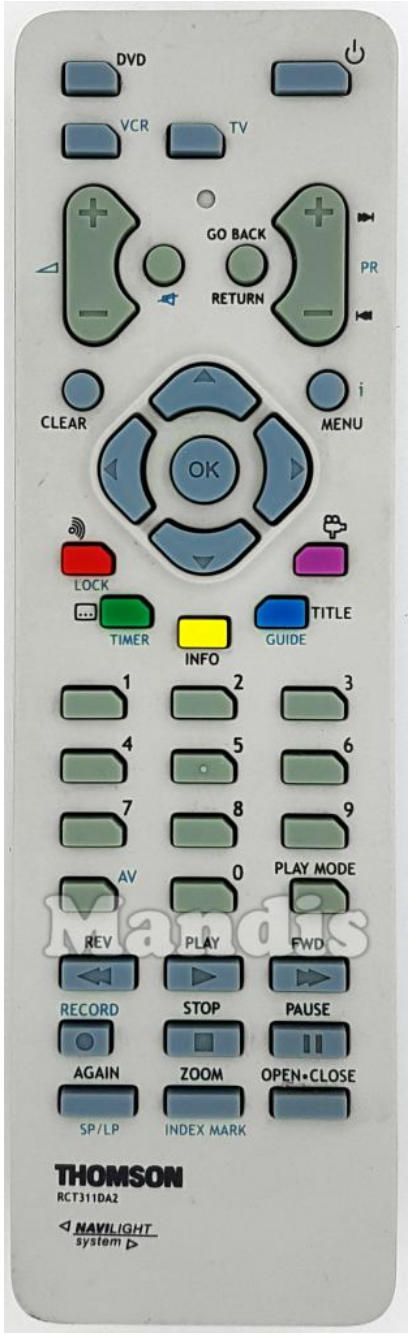

Original		Sustituto		Original	Sustituto
REV	<<		<<		
PLAY	Play	PLAY MODE	Play		
FWD	>>		>>		
RECORD	Record	REC MODE	Rec		
STOP	Stop		Stop		
PAUSE	Pause		Pause		
AGAIN SP/LP	Again/SP/LP	SETTINGS OPT	Options		
ZOOM INDEX MARK	Zoom/Index	DISPLAY INFO	Info		
OPEN•CLOSE	Open/Close	ZOOM	Eject		

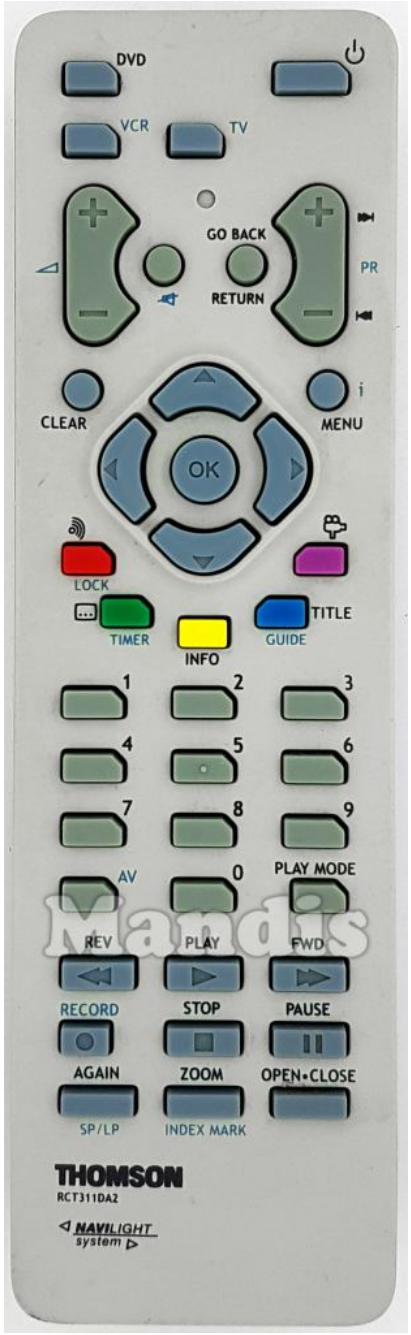

Original		Sustituto	
	Power		Power
	DVD	APP MEDIA	Media
	VCR	HOME SMART	Smart
	TV	SEARCH TV/R	TV/R
	Vol+	+ VOL	Vol +
	Vol-	VOL −	Vol -
	Mute	MUTE	Mute
GO BACK RETURN	Go Back/Return	RETURN BACK	Back
	PR+	+ CH	Ch +
	PR-	CH −	Ch -
CLEAR	Clear	CLEAR EXIT	Exit
MENU	Menu/i	TOP MENU MENU	Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
OK	OK	OK	Ok

Original		Sustituto	
LOCK	Red/·))/Lock	A	Red
TIMER	Green/Timer/[...]	B	Green
INFO	Yellow/Info	C	Yellow
TITLE GUIDE	Blue/Guide	D	Blue
	Violet/Camera	FAV PRE-CH	Pre Ch
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
AV	AV	TIMER AV	AV
PLAY MODE	Play Mode	SHIFT + PLAY MODE ▶	Shift + Play

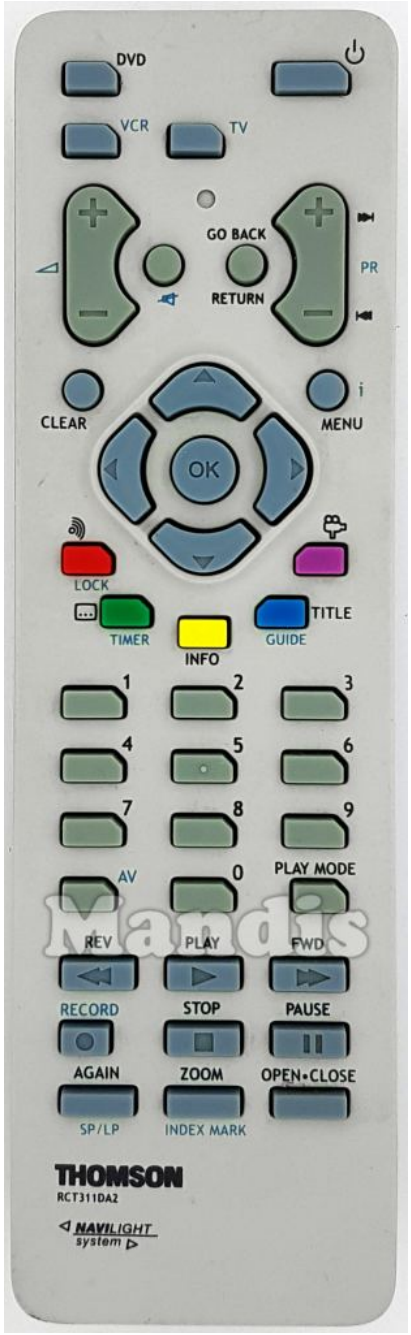

Original		Sustituto		Original	Sustituto
REV	<<		<<		
PLAY	Play	PLAY MODE	Play		
FWD	>>		>>		
RECORD	Record	REC MODE	Rec		
STOP	Stop		Stop		
PAUSE	Pause		Pause		
AGAIN SP/LP	Again/SP/LP	SETTINGS OPT	Options		
ZOOM INDEX MARK	Zoom/Index	DISPLAY INFO	Info		
OPEN•CLOSE	Open/Close	ZOOM	Eject		

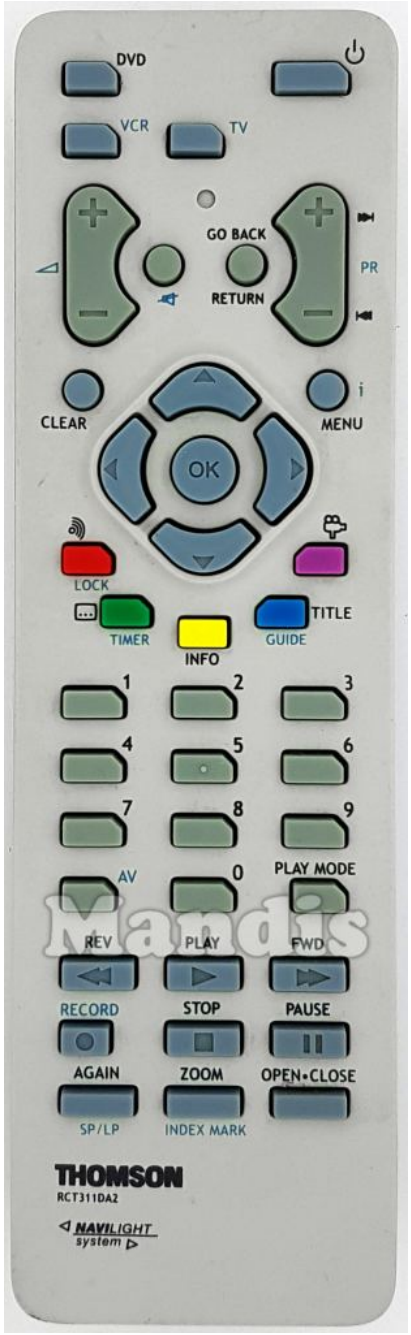

Original		Sustituto	
	Power		Power
	DVD	APP MEDIA	Media
	VCR	HOME SMART	Smart
	TV	SEARCH TV/R	TV/R
	Vol+	+ VOL	Vol +
	Vol-	VOL −	Vol -
	Mute	MUTE	Mute
GO BACK RETURN	Go Back/Return	RETURN BACK	Back
	PR+	+ CH	Ch +
	PR-	CH −	Ch -
CLEAR	Clear	CLEAR EXIT	Exit
MENU	Menu/i	TOP MENU MENU	Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
OK	OK	OK	Ok

Original		Sustituto	
LOCK	Red/·))/Lock	A	Red
TIMER	Green/Timer/[...]	B	Green
INFO	Yellow/Info	C	Yellow
TITLE GUIDE	Blue/Guide	D	Blue
	Violet/Camera	FAV PRE-CH	Pre Ch
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
AV	AV	TIMER AV	AV
REV	<<	<<	<<

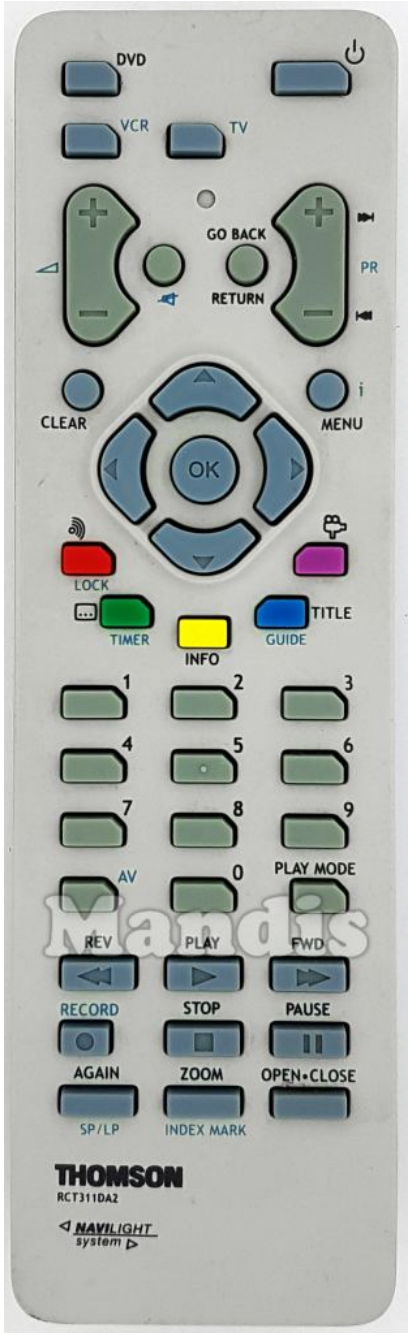

Original		Sustituto		Original		Sustituto	
PLAY	Play	PLAY MODE	Play				
FWD	>>		>>				
RECORD	Record	REC MODE	Rec				
STOP	Stop		Stop				
PAUSE	Pause		Pause				