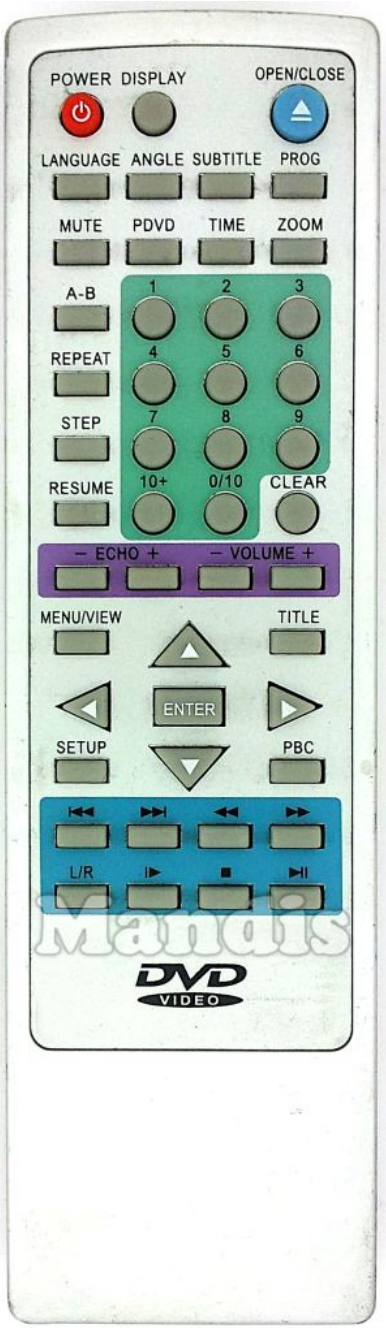

Original		Sustituto	
POWER	Power		Power
DISPLAY	Display	MEDIA DISPLAY	Display / Media
OPEN/CLOSE	Open/Close	SURROUND	Eject / Surround
LANGUAGE	Language	LANG I/II AUDIO	Audio / Lang I/II
ANGLE	Angle	ANGLE INFO	Info / Angle
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
PROG	Prog	PROGRAM TV/RADIO	TV/Radio /
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
PDVD	PDVD	RDS AV INPUT	AV / Input / RDS
TIME	Time	TIMER SLEEP	Sleep / Timer
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
4	4	VIDEO 4	4

Original		Sustituto	
5	5	TAPE 5	5
6	6	TUNER 6	6
STEP	Step	SHIFT + STEP-FREEZE	Shift + Pause / Step /
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
RESUME	Resume	LIST SMART	Smart / List
10+	10+	-/-- GUIDE EPG	Guide / EPG / -/--
0/10	0/10	HDMI-SAT 0	0
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
ECHO-	Echo-	CH PAGE	CH- / Page-
ECHO+	Echo+	CH PAGE	CH+ / Page+
VOLUME-	Volume-	VOL	Vol -
VOLUME+	Volume+	VOL	Vol +
MENU/VIEW	Menu/View	HOME MENU	Menu / Home
UP	Up		Up
TITLE	Title	TITLE SOUND	Sound / Title

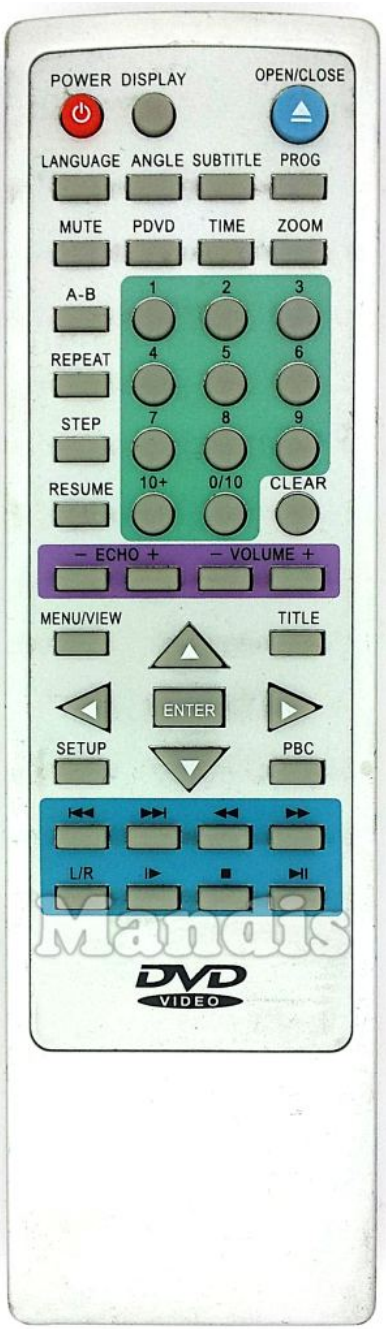

Original		Sustituto		Original		Sustituto	
	Left		Left				
ENTER	Enter	OK	OK				
	Right		Right				
SETUP	Setup	OPT-TOOLS SETUP	Setup / OPT /				
	Down		Down				
PBC	PBC	FORMAT PICTURE	Picture / Format				
	I<<	PRESET-	I<< / Preset-				
	>>I	PRESET+	>>I / Preset+				
	<<	TUNE-	<< / Tune-				
	>>	TUNE+	>> / Tune+				
L/R	L/R	GOTO TEXT	Text / Goto				
	I>	STEP-FREEZE	Pause / Step / Freeze				
	Stop	HOLD	Stop / Hold				
	Play/Pause	SLOW	Play / Slow				