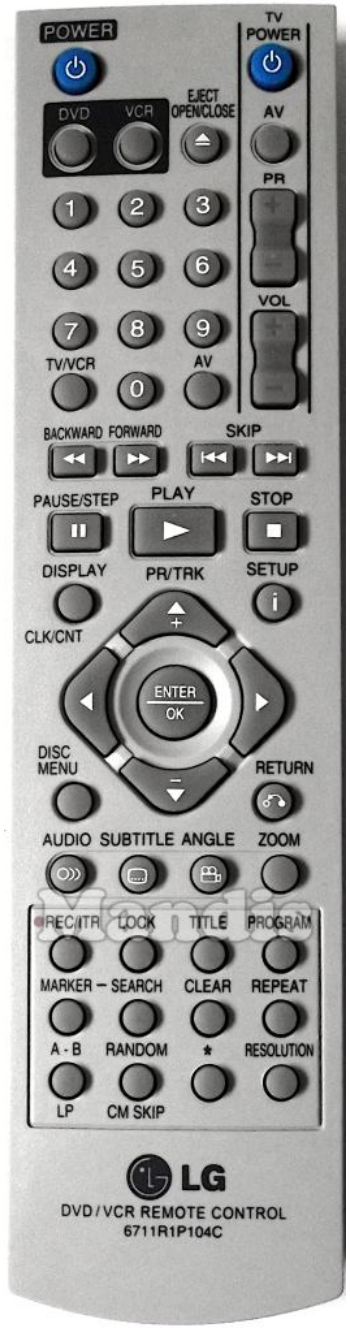

Original		Sustituto	
POWER	Power		Power
EJECT OPEN/CLOSE	Open/Close	SURROUND	Eject / Surround
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
VOL	Vol + TV	+ VOL	Vol +
TV/VCR	TV/VCR	LIST SMART	Smart / List
0	0	HDMI-SAT 0	0
AV	AV	RDS AV INPUT	AV / Input / RDS
	Vol - TV	VOL –	Vol -
BACKWARD	Backward	TUNE-	<< / Tune-

Original		Sustituto	
FORWARD	Forward	TUNE+	>> / Tune+
	Skip I<<	PRESET-	I<< / Preset-
	Skip >>I	PRESET+	>>I / Preset+
PAUSE/STEP	Pause/Step	STEP-FREEZE	Pause / Step / Freeze
PLAY	Play	SLOW	Play / Slow
STOP	Stop	HOLD	Stop / Hold
DISPLAY	Display / CLK/CN	MEDIA DISPLAY	Display / Media
PR/TRK	Up/+ PR/TRK	CH PAGE +	CH+ / Page+
PR/TRK	Up/+ PR/TRK		Up
SETUP	i / Setup	OPT-TOOLS SETUP	Setup / OPT /
	Left		Left
ENTER OK	OK/Enter	OK	OK
	Right		Right
DISC MENU	Disc Menu	TOP MENU D.MENU	D.Menu / Top
	Down/- PR/TRK	CH PAGE –	CH- / Page-
	Down/- PR/TRK		Down
RETURN	Return	RETURN BACK	Back / Return

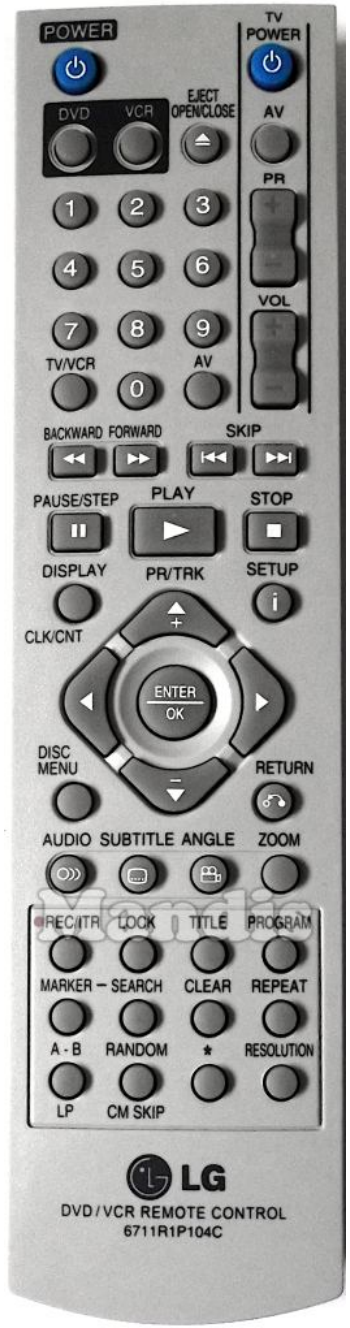

Original		Sustituto		Original	Sustituto
AUDIO	O))/Audio	LANG I/II AUDIO	Audio / Lang I/II		
SUBTITLE	[...]/Subtitl	EQ SUBTITLE	Subtitle / EQ		
ANGLE	Camera/Angle	ANGLE INFO	Info / Angle		
ZOOM	Zoom	SIZE ZOOM	Zoom / Size		
REC/ITR	Rec/ITR	REC MODE	Rec / Rec Mode		
LOCK	Lock	GOTO TEXT	Text / Goto		
TITLE	Title	TITLE SOUND	Sound / Title		
PROGRAM	Program	PROGRAM TV/RADIO	TV/Radio /		
MARKER	Marker	PC FAV MARKER	Fav / Marker / PC		
SEARCH	Search	NETFLIX SEARCH	Red / Netflix / Search		
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear		
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat		
A-B LP	A-B/LP	YouTube REPEAT A-B	Yellow / YouTube / Repeat		
RANDOM CM SKIP	Random/CM	Prime Video RANDOM	Blue / Prime Video / Random		
*	*	TIMER SLEEP	Sleep / Timer		
RESOLUTION	Resolution	FORMAT PICTURE	Picture / Format		

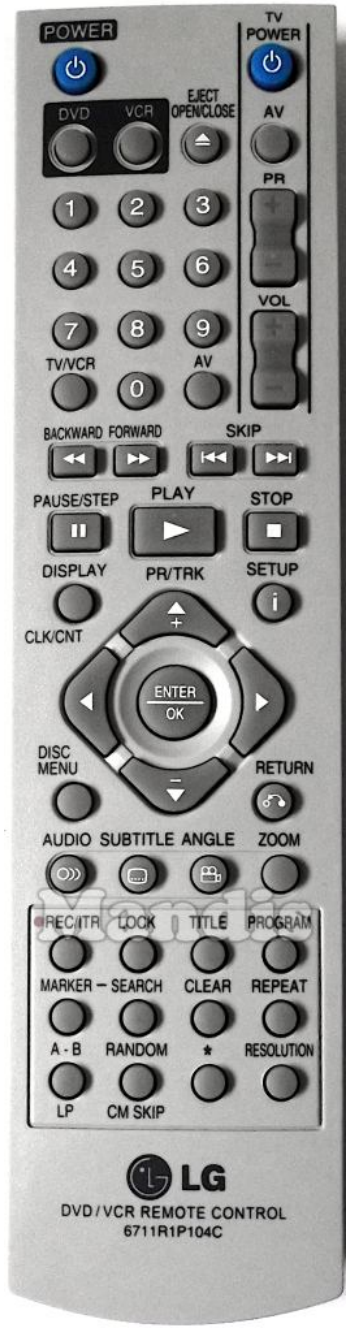

Original		Sustituto	
POWER	Power VCR		Power
EJECT OPEN/CLOSE	Eject VCR	SURROUND	Eject / Surround
1	1 VCR	TV 1	1
2	2 VCR	DVD 2	2
3	3 VCR	CD-STB 3	3
4	4 VCR	VIDEO 4	4
5	5 VCR	TAPE 5	5
6	6 VCR	TUNER 6	6
7	7 VCR	AUX-HDD 7	7
8	8 VCR	USB 8	8
9	9 VCR	BLUETOOTH 9	9
VOL	Vol + TV	VOL +	Vol +
0	0 VCR	HDMI-SAT 0	0
	Vol - TV	VOL −	Vol -
BACKWARD	<< Backward	TUNE-	<< / Tune-
FORWARD	>> Forward	TUNE+	>> / Tune+
PAUSE/STEP	Pause/Step VCR	STEP-FREEZE	Pause / Step / Freeze

Original		Sustituto	
PLAY	Play VCR	SLOW	Play / Slow
STOP	Stop VCR	HOLD	Stop / Hold
DISPLAY	Display VCR	MEDIA DISPLAY	Display / Media
SETUP i	i / Setup VCR	OPT-TOOLS SETUP	Setup / OPT /
AUDIO	O)) / Audio VCR	LANG I/II AUDIO	Audio / Lang I/II
REC/ITR	Rec/ITR	REC MODE	Rec / Rec Mode
SEARCH	Search VCR	NETFLIX SEARCH	Red / Netflix / Search
CLEAR	Clear VCR	CLEAR EXIT CANCEL	Exit / Cancel / Clear
REPEAT	Repeat VCR	APP REPEAT	Green / APP / Repeat
A-B LP	A-B/LP VCR	YouTube REPEAT A-B	Yellow / YouTube / Repeat
RANDOM CM SKIP	Random/CM Skip	Prime Video RANDOM	Blue / Prime Video / Random

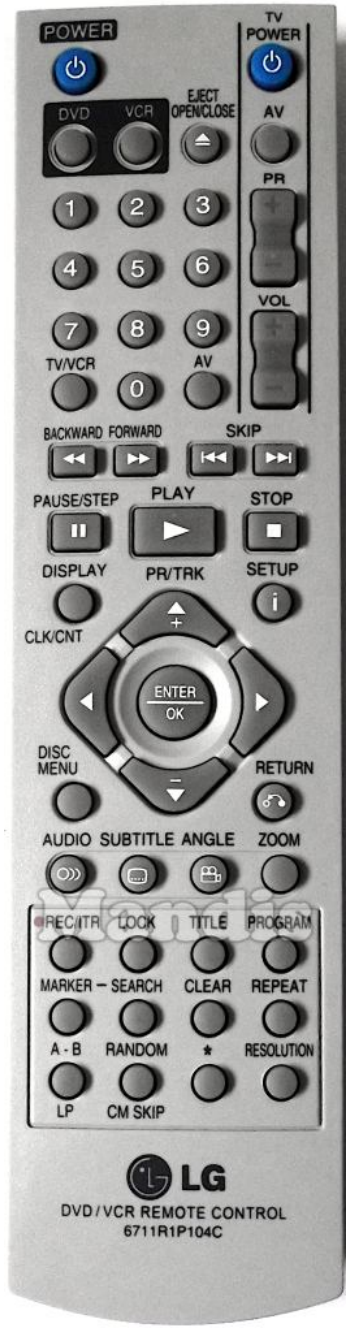

Original		Sustituto		Original	Sustituto
TV POWER	Power TV		Power		
AV	AV TV	RDS AV INPUT	AV / Input / RDS		
PR	PR+ TV	CH PAGE +	CH+ / Page+		
	PR- TV	CH PAGE −	CH- / Page-		
VOL	Vol + TV	VOL +	Vol +		
TV/VCR	TV/ VCR	PROGRAM TV/ RADIO	TV/ Radio /		
	Vol - TV	VOL −	Vol -		