Mandis shop

Sharp RRMCGA187WJSA

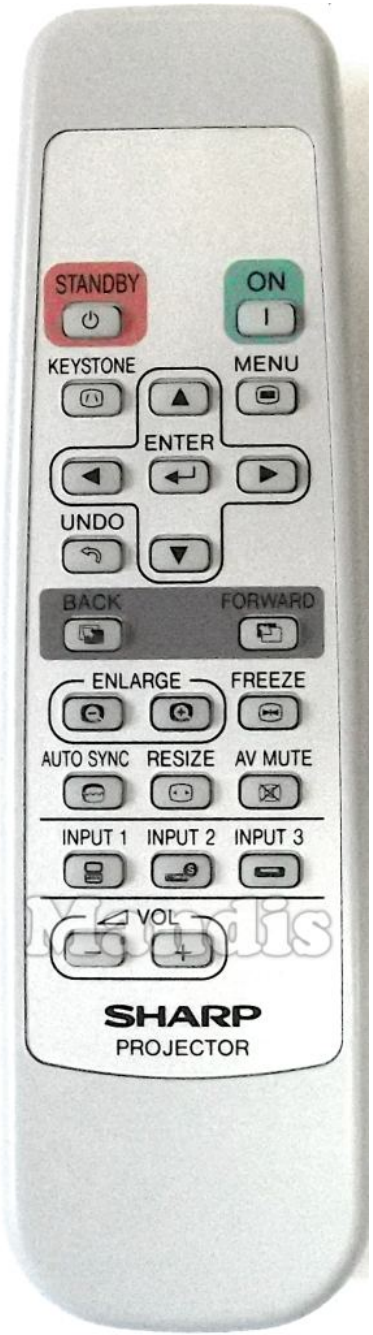

Original		Rechange	
STANDBY	Standby		Power
ON	On	Shift +	Shift + Power
KEYSTONE	Keystone	Shift +	Shift + Up
MENU	Menu	Menu	Menu
UNDO	Undo	Video Comp	Comp / Video
	Up		Up
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter	Enter	Enter
BACK	Back	Source	Source
FORWARD	Forward	Mode	Mode
ARGE	Enlarge+	Play +	+ / Play
ENLAF	Enlarge-	Stop −	- / Stop
FREEZE	Freeze	Timer Freeze	Freeze / Timer
AUTO SYNC	Auto Sync	Auto	Auto
RESIZE	Re-size	Aspect Eco	Eco / Aspect

Original		Rechange	
INPUT 1	Input 1	Focus Volt	Volt / Focus
INPUT 2	Input 2	Info Help	Help / Info
INPUT 3	Input 3	Invert 3D	3D / Invert
VOL +	Vol +	Page▲ Vol	Vol + / Page +
VOL −	Vol -	Page▼ Vol	Vol - / Page -
AV MUTE	AV Mute	Mute Blank	Blank / Mute

https://mandis.fr/Sharp-RRMCGA187WJSA-telecommande-remplacement-pour-Sharp-RRMCGA187WJSA.htm