Original	Replacement	Original	Replacement
Tuner	SHIFT + TUNER 6 Shift + 6	9	BLUETOOTH 9 9
Tape	SHIFT + TAPE 5 Shift + 5	Mono/ST	HOME MENU Menu / Home
TV	SHIFT + TV 1 Shift + 1	0	HDMI-SAT 0 0
V-CD	SHIFT + DVD 2 Shift + 2	Volume-	VOL − Vol -
CD	SHIFT + CD-STB 3 Shift + 3	Volume+	+ VOL Vol +
DCC	SHIFT + USB 8 Shift + 8	Mute	DIMMER MUTE Mute / Dimmer
VCR1	SHIFT + VIDEO 4 Shift + 4	FR. Direct	TOP MENU D.MENU D. Menu / Top
VCR 2	SHIFT + AUX-HDD 7 Shift + 7	Preset-	PRESET- I << / Preset-
1	TV 1 1	Preset+	PRESET+ >>I / Preset+
2	DVD 2 2	Sleep	TIMER SLEEP Sleep / Timer
3	CD-STB 3 3	Display	MEDIA DISPLAY Display / Media
Standby	Power	Tuning-	TUNE- << / Tune-
4	VIDEO 4 4	Tuning+	TUNE+ >> / Tune+
5	TAPE 5 5	Vol TV-	SHIFT + VOL − Shift + Vol -
6	TUNER 6 6	Vol TV+	SHIFT + + VOL Shift + Vol +
7	AUX-HDD 7 7	Center Mode	OK OK
8	USB 8 8	Center Up	Up

Original	Replacement	Original	Replacement
Rear Up	Right		
Test Tone	Text / Goto		
Center Down	Down		
Rear Down	Left		
Delay	Setup / OPT /		
Dolby Pro Logi	Sound / Title		
3 Stereo	Audio / Lang I/II		
Hall	Subtitle / EQ		
Surr. Off	Eject / Surround		

Original	Replacement	Original	Replacement
Tuner	SHIFT + TUNER 6 Shift + 6	8	USB 8 8
Tape	SHIFT + TAPE 5 Shift + 5	9	BLUETOOTH 9 9
TV	SHIFT + TV 1 Shift + 1	Disc Down	CH PAGE – CH- / Page-
V-CD	SHIFT + DVD 2 Shift + 2	0	HDMI-SAT 0 0
CD	SHIFT + CD-STB 3 Shift + 3	Volume-	VOL – Vol -
DCC	SHIFT + USB 8 Shift + 8	Volume+	+ VOL Vol +
VCR 1	SHIFT + VIDEO 4 Shift + 4	Mute	DIMMER MUTE Mute / Dimmer
VCR 2	SHIFT + AUX-HDD 7 Shift + 7	Play	SLOW Play / Slow
1	TV 1 1	I<	PRESET- I<< / Preset-
2	DVD 2 2	>I	PRESET+ >>I / Preset+
3	CD-STB 3 3	Sleep	TIMER SLEEP Sleep / Timer
Standby	Power	Stop	HOLD Stop / Hold
4	VIDEO 4 4	Display	MEDIA DISPLAY Display / Media
5	TAPE 5 5	<<	TUNE- << / Tune-
6	TUNER 6 6	Pause	STEP-FREEZE Pause / Step / Freeze
Disc Up	+ CH PAGE CH+ / Page+	>>	TUNE+ >> / Tune+
7	AUX-HDD 7 7	Center Mode	OK OK

Original	Replacement	Original	Replacement
Center Up	Up		
Rear Up	Right		
Test Tone	Text / Goto		
Center Down	Down		
Rear Down	Left		
Delay	Setup / OPT /		
Dolby Pro Logi	Sound / Title		
3 Stereo	Audio / Lang I/II		
Hall	Subtitle / EQ		
Surr. Off	Eject / Surround		

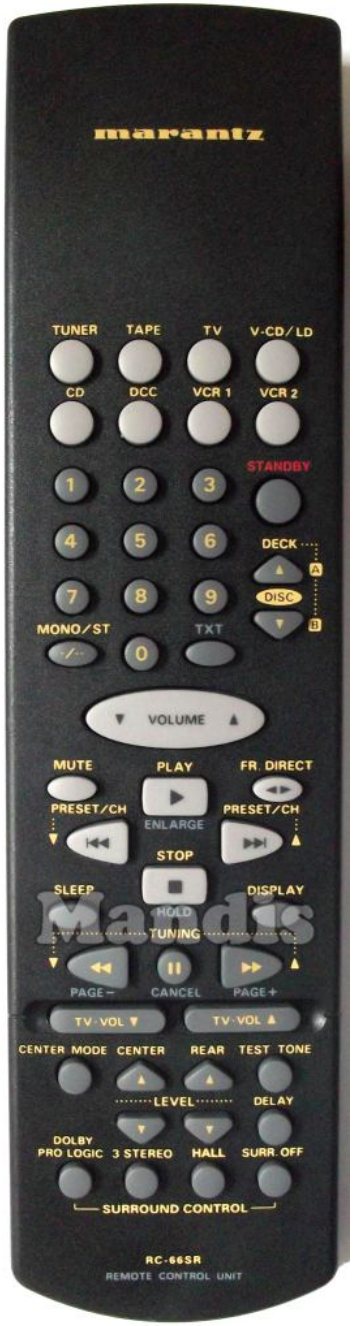

Original	Replacement	Original	Replacement
Tuner	SHIFT + TUNER 6 Shift + 6	8	USB 8 8
Tape	SHIFT + TAPE 5 Shift + 5	9	BLUETOOTH 9 9
TV	SHIFT + TV 1 Shift + 1	Disc Down	CH PAGE − CH- / Page-
V-CD	SHIFT + DVD 2 Shift + 2	0	HDMI-SAT 0 0
CD	SHIFT + CD-STB 3 Shift + 3	Volume-	VOL − Vol -
DCC	SHIFT + USB 8 Shift + 8	Volume+	+ VOL Vol +
VCR 1	SHIFT + VIDEO 4 Shift + 4	Mute	DIMMER MUTE Mute / Dimmer
VCR 2	SHIFT + AUX-HDD 7 Shift + 7	Play	SLOW Play / Slow
1	TV 1 1	I<	PRESET- I<< / Preset-
2	DVD 2 2	>I	PRESET+ >>I / Preset+
3	CD-STB 3 3	Sleep	TIMER SLEEP Sleep / Timer
Standby	Power	Stop	HOLD Stop / Hold
4	VIDEO 4 4	Display	MEDIA DISPLAY Display / Media
5	TAPE 5 5	<<	TUNE- << / Tune-
6	TUNER 6 6	Pause	STEP-FREEZE Pause / Step / Freeze
Disc Up	+ CH PAGE CH+ / Page+	>>	TUNE+ >> / Tune+
7	AUX-HDD 7 7	Center Mode	OK OK

Original	Replacement	Original	Replacement
CENTER Center Up	Up		
REAR Rear Up	Right		
TEST TONE Test Tone	GOTO TEXT Text / Goto		
Center Down	Down		
Rear Down	Left		
DELAY Delay	OPT-TOOLS SETUP Setup / OPT /		
DOLBY PRO LOGIC Dolby Pro Logi	TITLE SOUND Sound / Title		
3 STEREO 3 Stereo	LANG I/II AUDIO Audio / Lang I/II		
HALL Hall	EQ SUBTITLE Subtitle / EQ		
SURR.OFF Surr.Off	SURROUND Eject / Surround		

Original		Replacement	
TUNER	Tuner	SHIFT + TUNER 6	Shift + 6
TAPE	Tape	SHIFT + TAPE 5	Shift + 5
TV	TV	SHIFT + TV 1	Shift + 1
V-CD/LD	V-CD	SHIFT + DVD 2	Shift + 2
CD	CD	SHIFT + CD-STB 3	Shift + 3
DCC	DCC	SHIFT + USB 8	Shift + 8
VCR 1	VCR1	SHIFT + VIDEO 4	Shift + 4
VCR 2	VCR 2	SHIFT + AUX-HDD 7	Shift + 7
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3
STANDBY	Standby		Power
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8

Original		Replacement	
9	9	BLUETOOTH 9	9
MONO/ST -/--	-/--	GUIDE EPG	Guide / EPG / -/--
0	0	HDMI-SAT 0	0
TXT	TXT	GOTO TEXT	Text / Goto
VOLUME	Rcvr Volume-	SHIFT + VOL −	Shift + Vol -
VOLUME	Rcvr Volume+	SHIFT + VOL +	Shift + Vol +
MUTE	Rcvr Mute	SHIFT + DIMMER MUTE	Shift + Mute / Dimmer
MUTE	TV Mute	DIMMER MUTE	Mute / Dimmer
PLAY ENLARGE	Enlarge	SIZE ZOOM	Zoom / Size
PRESET/CH	CH Down	CH PAGE −	CH- / Page-
PRESET/CH	CH Up	CH PAGE +	CH+ / Page+
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
STOP HOLD	Hold	HOLD	Stop / Hold
DISPLAY	Display	MEDIA DISPLAY	Display / Media
PAGE-	Page-	SHIFT + CH PAGE −	Shift + CH- /
CANCEL	Cancel	CLEAR EXIT CANCEL	Exit / Cancel / Clear
PAGE+	Page+	SHIFT + CH PAGE +	Shift + CH+ / Page+

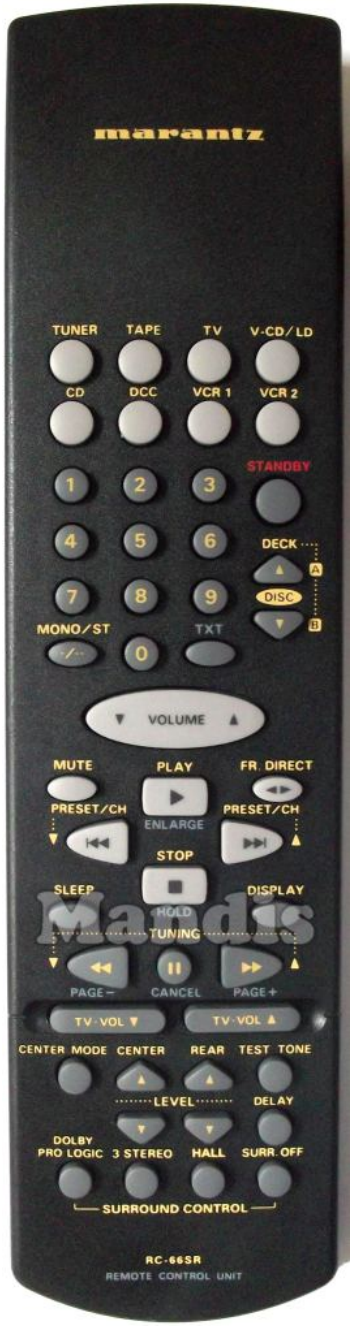

Original	Replacement	Original	Replacement
Vol TV +	Vol +		
Vol TV -	Vol -		
Center Mode	OK		
Center Up	Up		
Rear Up	Right		
Test Tone	SHIFT + GOTO TEXT Shift + Text /		
Center Down	Down		
Rear Down	Left		
Delay	OPT-TOOLS SETUP Setup / OPT /		
Dolby Pro Logi	TITLE SOUND Sound / Title		
3 Stereo	LANG I/II AUDIO Audio / Lang I/II		
Hall	EQ SUBTITLE Subtitle / EQ		
Surr. Off	SURROUND Eject / Surround		