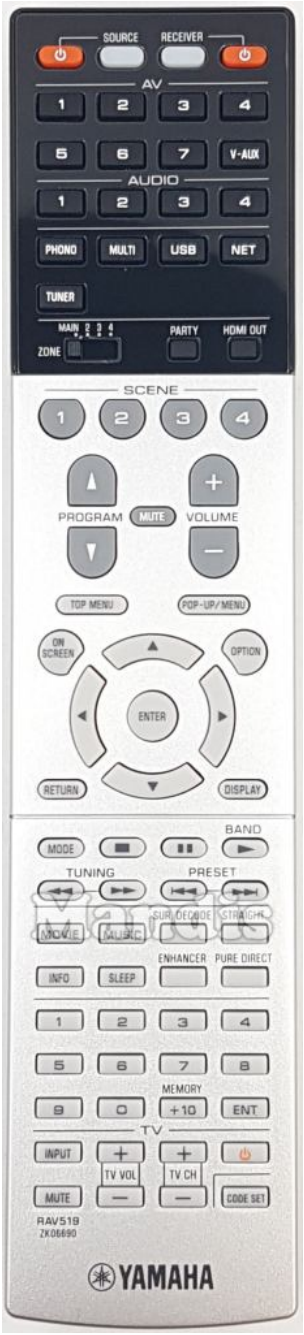

Original	Replacement
Power Receiver	Power
Power Source	Shift + Power
AV1	Shift + 1
AV2	Shift + 2
AV3	Shift + 3
AV4	Shift + 4
AV5	Shift + 5
AV6	Shift + 6
AV7	Shift + 7
V-AUX	Shift + 8
Audio 1	Shift + 9
Audio 2	Shift + Guide / EPG / -/--
Audio 3	Shift + 0
Audio 4	Shift + Fav / Marker / PC
Phono	Shift + Red / Netflix /
Multi	Shift + Green / APP /
USB	Shift + Blue / Prime Video / Random

Original	Replacement
Net	Shift + Smart / List
Tuner	Shift + Yellow / YouTube /
Party	Smart / List
HDMI Out	AV / Input / RDS
Scene 1	Red / Netflix / Search
Scene 2	Green / APP / Repeat
Scene 3	Yellow / YouTube / Repeat
Scene 4	Blue / Prime Video / Random
Program Up	CH+ / Page+
Program Down	CH- / Page-
Volume+	Vol +
Volume-	Vol -
Mute	Mute / Dimmer
Top Menu	D.Menu / Top
Pop-Up Menu	Menu / Home
On Screen	Zoom / Size
Option	Setup / OPT / Tools

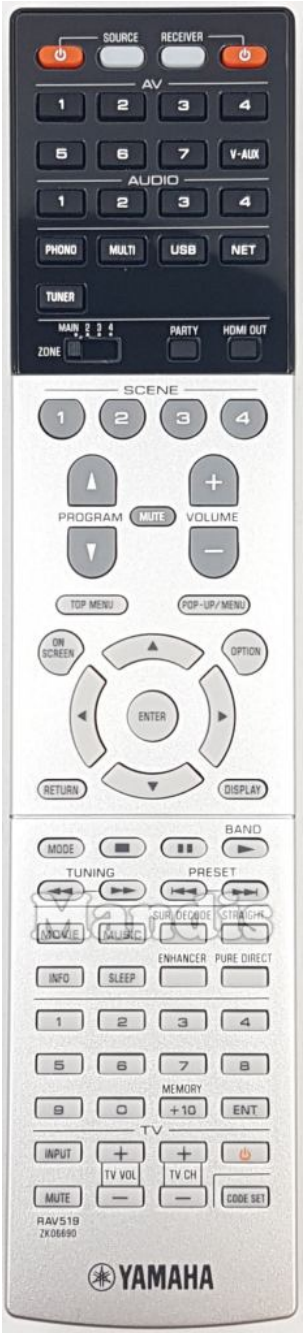

Original		Replacement	
RETURN	Return	RETURN BACK	Back / Return
DISPLAY	Display	MEDIA DISPLAY	Display / Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter	OK	OK
MODE	Mode	FORMAT PICTURE	Picture / Format
	Stop	HOLD	Stop / Hold
	Pause	STEP-FREEZE	Pause / Step / Freeze
BAND	Play/Band	SLOW	Play / Slow
	<< Tuning	TUNE-	<< / Tune-
	Tuning >>	TUNE+	>> / Tune+
	I<< Preset	PRESET-	I<< / Preset-
	Preset >>I	PRESET+	>>I / Preset+
MOVIE	Movie	EQ SUBTITLE	Subtitle / EQ
MUSIC	Music	LANG I/II AUDIO	Audio / Lang I/II

Original		Replacement	
SUR. DECODE	Sur Decode	SURROUND	Eject / Surround
STRAIGHT	Straight	TITLE SOUND	Sound / Title
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
ENHANCER	Enhancer	GOTO TEXT	Text / Goto
PURE DIRECT	Pure Direct	PROGRAM TV/RADIO	TV/Radio /
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--

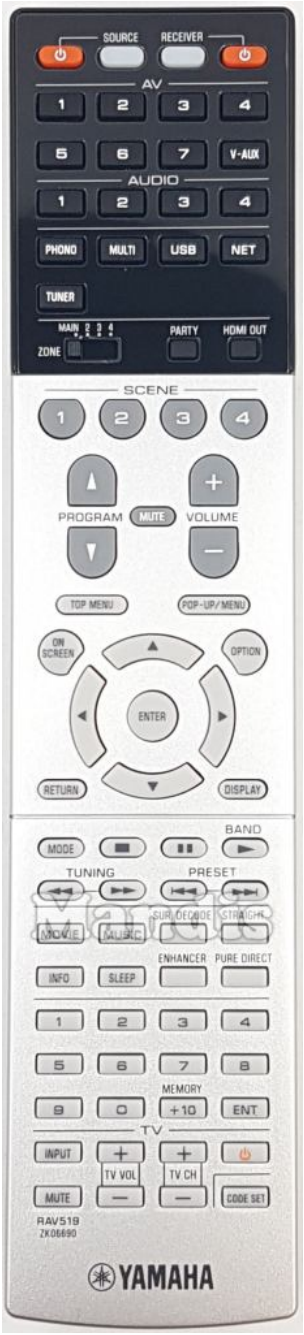

Original	Replacement	Original	Replacement
ENT.	Fav / Marker / PC		

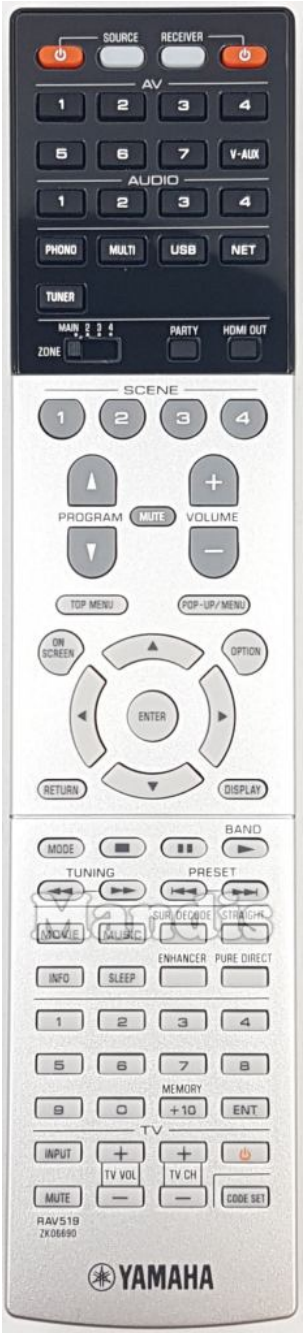

Original		Replacement	
	Power Receiver		Power
	Power Source	SHIFT +	Shift + Power
1	AV1	SHIFT + TV 1	Shift + 1
2	AV2	SHIFT + DVD 2	Shift + 2
3	AV3	SHIFT + CD-STB 3	Shift + 3
4	AV4	SHIFT + VIDEO 4	Shift + 4
5	AV5	SHIFT + TAPE 5	Shift + 5
6	AV6	SHIFT + TUNER 6	Shift + 6
7	AV7	SHIFT + AUX-HDD 7	Shift + 7
V-AUX	V-AUX	SHIFT + USB 8	Shift + 8
1	Audio 1	SHIFT + BLUETOOTH 9	Shift + 9
2	Audio 2	SHIFT + -/-- GUIDE EPG	Shift + Guide / EPG / -/--
3	Audio 3	SHIFT + HDMI-SAT 0	Shift + 0
4	Audio 4	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
PHONO	Phono	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
NET	Net	SHIFT + LIST SMART	Shift + Smart / List
USB	USB	SHIFT + Prime Video RANDOM	Shift + Blue / Prime Video / Random

Original		Replacement	
TUNER	Tuner	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /
PARTY	Party	LIST SMART	Smart / List
HDMI OUT	HDMI Out	RDS AV INPUT	AV / Input / RDS
1	Scene 1	NETFLIX SEARCH	Red / Netflix / Search
2	Scene 2	APP REPEAT	Green / APP / Repeat
3	Scene 3	YouTube REPEAT A-B	Yellow / YouTube / Repeat
4	Scene 4	Prime Video RANDOM	Blue / Prime Video / Random
	Mute	DIMMER MUTE	Mute / Dimmer
+ VOLUME	Volume+	+ VOL	Vol +
VOLUME −	Volume-	VOL −	Vol -
POP-UP/MENU	Pop-Up Menu	HOME MENU	Menu / Home
TOP MENU	Top Menu	TOP MENU D.MENU	D.Menu / Top
OPTION	Option	OPT-TOOLS SETUP	Setup / OPT /
DISPLAY	Display	MEDIA DISPLAY	Display / Media
RETURN	Return	RETURN BACK	Back / Return
ON SCREEN	On Screen	SIZE ZOOM	Zoom / Size
	Up		Up

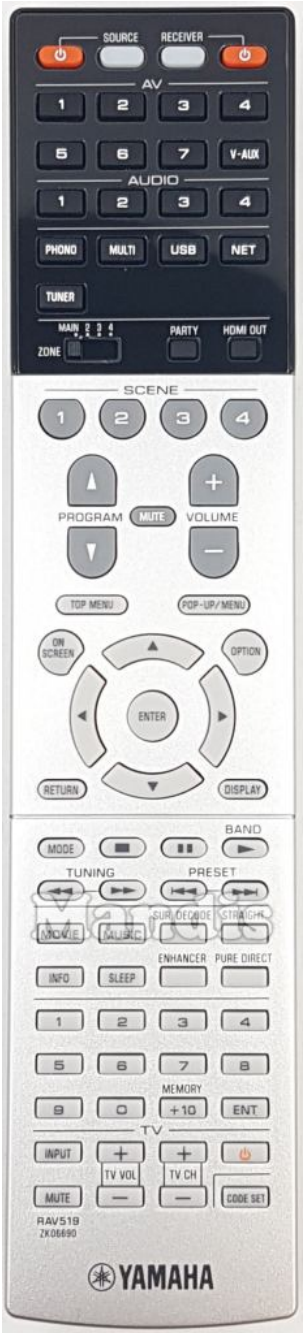

Original		Replacement	
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter	OK	OK
MODE	Mode	FORMAT PICTURE	Picture / Format
	Stop	HOLD	Stop / Hold
	Pause	STEP-FREEZE	Pause / Step / Freeze
BAND	Play/Band	SLOW	Play / Slow
	<< Tuning	TUNE-	<< / Tune-
	Tuning >>	TUNE+	>> / Tune+
	I<< Preset	PRESET-	I<< / Preset-
	Preset >>I	PRESET+	>>I / Preset+
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Replacement	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC

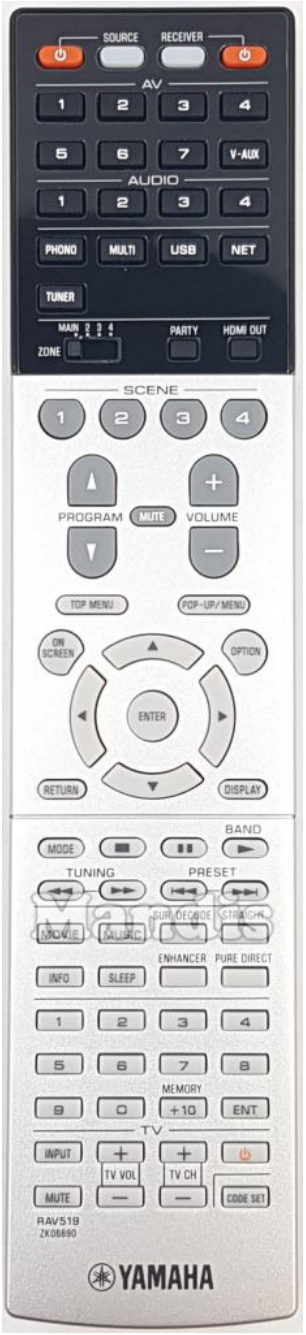

Original		Replacement	
	Power Receiver		Power
	Power Source	SHIFT +	Shift + Power
1	AV1	SHIFT + TV 1	Shift + 1
2	AV2	SHIFT + DVD 2	Shift + 2
3	AV3	SHIFT + CD - STB 3	Shift + 3
4	AV4	SHIFT + VIDEO 4	Shift + 4
5	AV5	SHIFT + TAPE 5	Shift + 5
6	AV6	SHIFT + TUNER 6	Shift + 6
7	AV7	SHIFT + AUX - HDD 7	Shift + 7
V-AUX	V-AUX	SHIFT + USB 8	Shift + 8
1	Audio 1	SHIFT + BLUETOOTH 9	Shift + 9
2	Audio 2	SHIFT + -/-- GUIDE EPG	Shift + Guide / EPG / -/--
3	Audio 3	SHIFT + HDMI - SAT 0	Shift + 0
4	Audio 4	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
PHONO	Phono	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
USB	USB	SHIFT + Prime Video RANDOM	Shift + Blue / Prime
NET	Net	SHIFT + LIST SMART	Shift + Smart / List

Original		Replacement	
TUNER	Tuner	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /
PARTY	Party	LIST SMART	Smart / List
HDMI OUT	HDMI Out	RDS AV INPUT	AV / Input / RDS
1	Scene 1	NETFLIX SEARCH	Red / Netflix / Search
2	Scene 2	APP REPEAT	Green / APP / Repeat
3	Scene 3	YouTube REPEAT A-B	Yellow / YouTube / Repeat
4	Scene 4	Prime Video RANDOM	Blue / Prime Video / Random
+ VOLUME	Volume+	+ VOL	Vol +
VOLUME −	Volume -	VOL −	Vol -
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
POP-UP/MENU	Pop-Up Menu	HOME MENU	Menu / Home
TOP MENU	Top Menu	TOP MENU D.MENU	D.Menu / Top
INFO	Info	ANGLE INFO	Info / Angle
OPTION	Option	OPT-TOOLS SETUP	Setup / OPT /
RETURN	Return	RETURN BACK	Back / Return
ON SCREEN	On Screen	SIZE ZOOM	Zoom / Size
ENTER	Enter	OK	OK

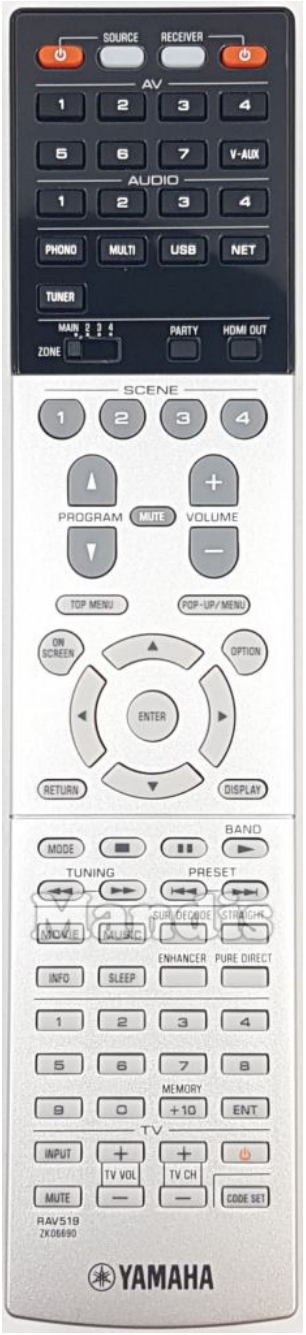

Original		Replacement		Original		Replacement	
DISPLAY	Display	MEDIA DISPLAY	Display / Media	4	4	VIDEO 4	4
	Up		Up	5	5	TAPE 5	5
	Down		Down	6	6	TUNER 6	6
	Right		Right	7	7	AUX - HDD 7	7
	Left		Left	8	8	USB 8	8
MODE	Mode	FORMAT PICTURE	Picture / Format	9	9	BLUETOOTH 9	9
	Stop	HOLD	Stop / Hold	0	0	HDMI - SAT 0	0
	Pause	STEP - FREEZE	Pause / Step / Freeze	MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
BAND	Play/Band	SLOW	Play / Slow	ENT	ENT	PC FAV MARKER	Fav / Marker / PC
	<< Tuning	TUNE-	<< / Tune-				
	Tuning >>	TUNE+	>> / Tune+				
	I<< Preset	PRESET-	I<< / Preset-				
	Preset >>I	PRESET+	>>I / Preset+				
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer				
1	1	TV 1	1				
2	2	DVD 2	2				
3	3	CD - STB 3	3				

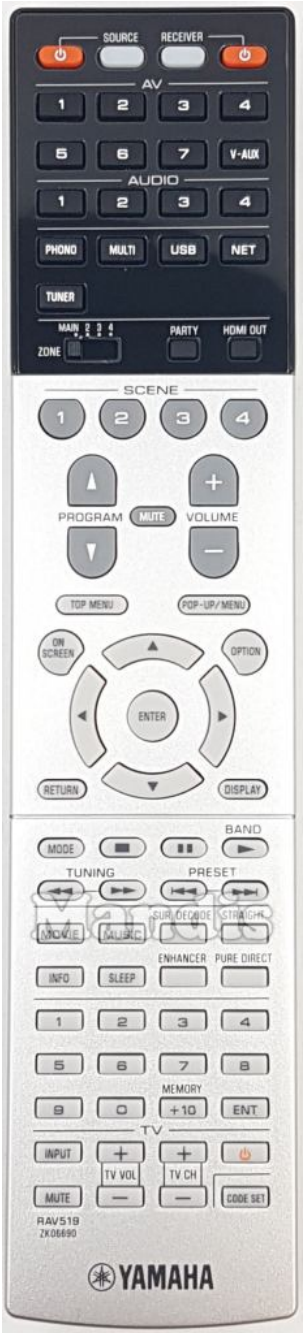

Original		Replacement	
	Power Receiver		Power
	Power Source	SHIFT +	Shift + Power
1	AV1	SHIFT + TV 1	Shift + 1
2	AV2	SHIFT + DVD 2	Shift + 2
3	AV3	SHIFT + CD - STB 3	Shift + 3
4	AV4	SHIFT + VIDEO 4	Shift + 4
5	AV5	SHIFT + TAPE 5	Shift + 5
6	AV6	SHIFT + TUNER 6	Shift + 6
7	AV7	SHIFT + AUX - HDD 7	Shift + 7
V-AUX	V-AUX	SHIFT + USB 8	Shift + 8
1	Audio 1	SHIFT + BLUETOOTH 9	Shift + 9
2	Audio 2	SHIFT + -/-- GUIDE EPG	Shift + Guide / EPG / -/--
3	Audio 3	SHIFT + HDMI - SAT 0	Shift + 0
4	Audio 4	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
PHONO	Phono	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
USB	USB	SHIFT + Prime Video RANDOM	Shift + Blue / Prime
NET	Net	SHIFT + LIST SMART	Shift + Smart / List

Original		Replacement	
TUNER	Tuner	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /
PARTY	Party	LIST SMART	Smart / List
HDMI OUT	HDMI Out	RDS AV INPUT	AV / Input / RDS
1	Scene 1	NETFLIX SEARCH	Red / Netflix / Search
2	Scene 2	APP REPEAT	Green / APP / Repeat
3	Scene 3	YouTube REPEAT A-B	Yellow / YouTube / Repeat
4	Scene 4	Prime Video RANDOM	Blue / Prime Video / Random
+ VOLUME	Volume+	+ VOL	Vol +
VOLUME −	Volume-	VOL −	Vol -
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
TOP MENU	Top Menu	TOP MENU D.MENU	D.Menu / Top
POP-UP/MENU	Pop-Up Menu	HOME MENU	Menu / Home
ON SCREEN	On Screen	SIZE ZOOM	Zoom / Size
OPTION	Option	OPT-TOOLS SETUP	Setup / OPT /
RETURN	Return	RETURN BACK	Back / Return
DISPLAY	Display	MEDIA DISPLAY	Display / Media
	Up		Up

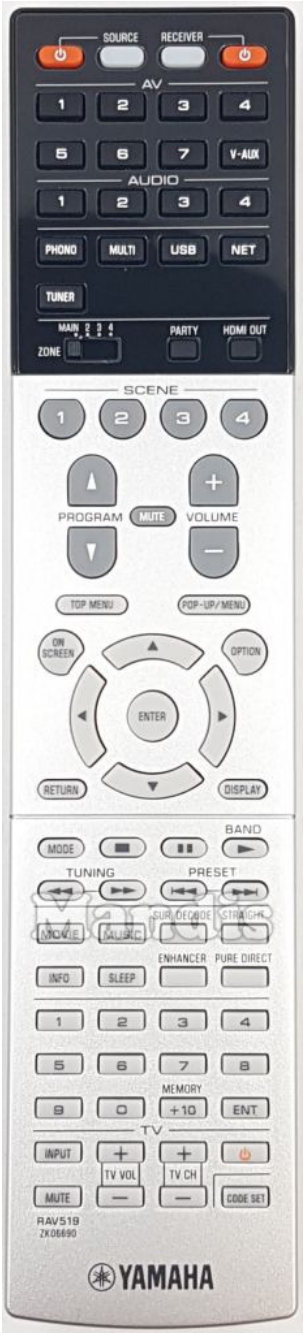

Original		Replacement	
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter	OK	OK
MODE	Mode	FORMAT PICTURE	Picture / Format
	Stop	HOLD	Stop / Hold
	Pause	STEP-FREEZE	Pause / Step / Freeze
BAND	Play/Band	SLOW	Play / Slow
	<< Tuning	TUNE-	<< / Tune-
	Tuning >>	TUNE+	>> / Tune+
	I<< Preset	PRESET-	I<< / Preset-
	Preset >>I	PRESET+	>>I / Preset+
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Replacement	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC