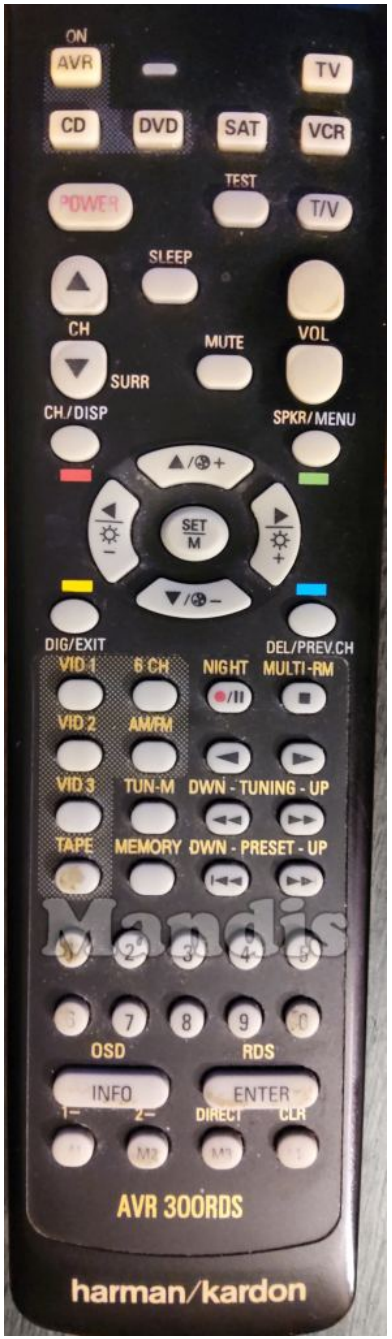

Original	Replacement
AVR On	Power
TV	Shift + 1
CD	Shift + 3
DVD	Shift + 2
Off	Shift + Power
Test	Text / Goto
Sleep	Sleep / Timer
Vol +	Vol +
Surr.	Eject / Surround
Mute	Mute / Dimmer
Vol -	Vol -
CH.	Info / Angle
Up	Up
SPKR / Menu	Menu / Home
Left	Left
Set	OK
Right	Right

Original	Replacement
Digital	Audio / Lang I/II
Down	Down
Delay	Back / Return
VID1	Shift + 4
6 CH.	Shift + 9
Night	Subtitle / EQ
Pause DVD	Shift + Pause / Step /
Stop DVD	Shift + Stop /
VID2	Shift + 7
AM/FM	Shift + 6
<< DVD	Shift + << /
Play DVD	Shift + Play /
VID3	Shift + 8
Tun-M	Smart / List
Tuning▼	<< / Tune-
Tuning ▲	>> / Tune+
>> DVD	Shift + >> / Tune+

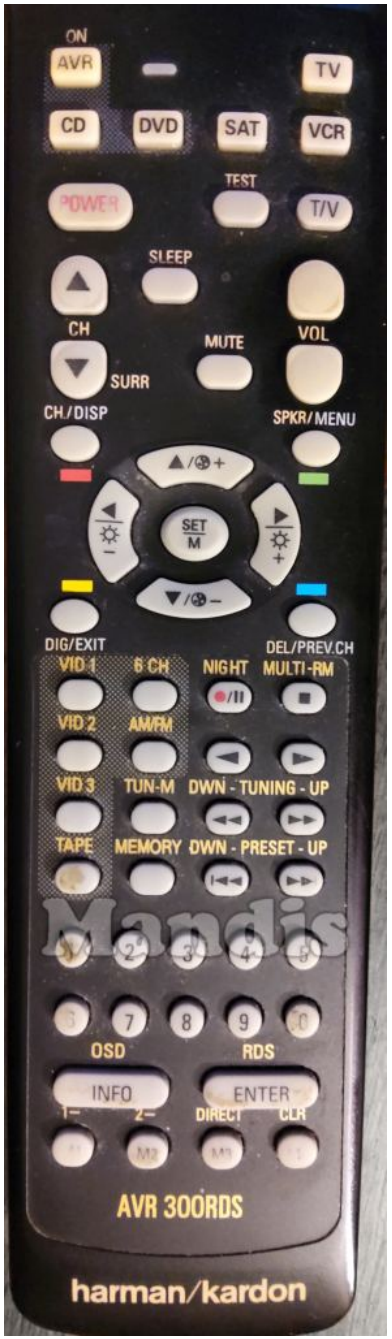

Original		Replacement	
TAPE	Tape	SHIFT + TAPE 5	Shift + 5
MEMORY	Memory	MEDIA DISPLAY	Display / Media
DOWN - PRESE	Preset ▼	PRESET-	I<< / Preset-
DOWN - PRESE	I<< DVD	SHIFT + PRESET-	Shift + I<< / Preset-
PRESET - UP	Preset ▲	PRESET+	>>I / Preset+
PRESET - UP	>>I DVD	SHIFT + PRESET+	Shift + >>I / Preset+
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - SAT 0	0
OSD INFO	OSD	CH+	CH+ / Page+

Original		Replacement	
RDS ENTER	RDS	CH PAGE +	CH+ / Page-
DIRECT	Direct	TITLE SOUND	Sound / Title
CLR	CLR	CLEAR EXIT CANCEL	Exit / Cancel / Clear

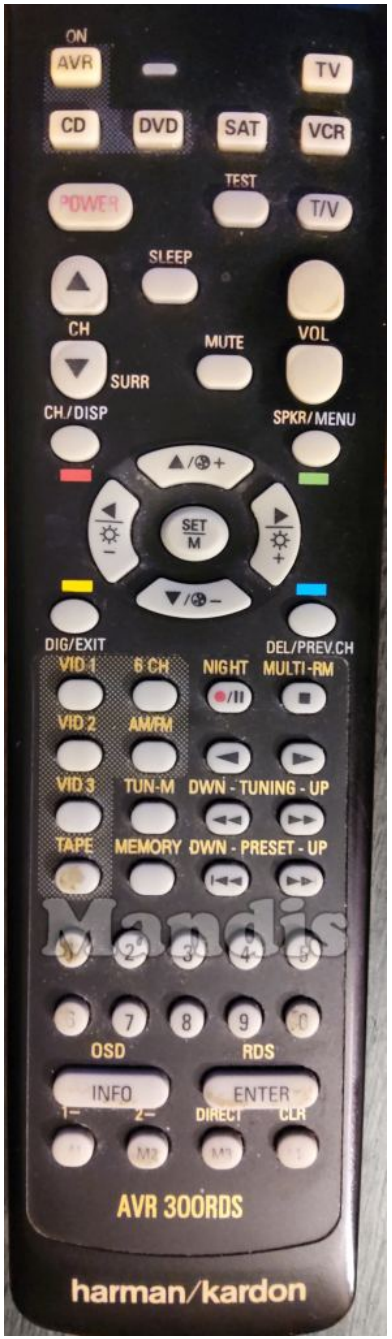

Original		Replacement	
DVD	Power On		Power
POWER	Power Off	SHIFT +	Shift + Power
VOL	Vol +	VOL +	Vol +
VOL	Vol -	VOL −	Vol -
CH./DISP	CH.	OPT-TOOLS SETUP	Setup / OPT /
▲/⊕+	Up	▲	Up
SPKR/MENU	SPKR/Menu	HOME MENU	Menu / Home
◀	Left	◀	Left
SET M	Set	OK	OK
▶	Right	▶	Right
DIG/EXIT	Digita	TOP MENU D.MENU	D. Menu / Top
▼/⊕−	Down	▼	Down
DEL/PREV.CH	Del	RETURN BACK	Back / Return
NIGHT ●/II	Night	TIMER SLEEP	Sleep / Timer
NIGHT ●/II	Pause	STEP-FREEZE II	Pause / Step / Freeze
MULTI-RM ■	Stop	HOLD ■	Stop / Hold
▶	Play	SLOW ▶	Play / Slow

Original		Replacement	
TUN-M	Tun-M	LIST SMART	Smart / List
DWN - TUNI	<<	TUNE-	<< / Tune-
TUNING - UP	>>	TUNE+	>> / Tune+
MEMORY	Memory	MEDIA DISPLAY	Display / Media
DWN - PRESE	Preset ▼	CH PAGE −	CH- / Page-
DWN - PRESE	I <<	PRESET-	I << / Preset-
PRESET - UP	Preset ▲	+ CH PAGE	CH+ / Page+
PRESET - UP	>>I	PRESET+	>>I / Preset+
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9

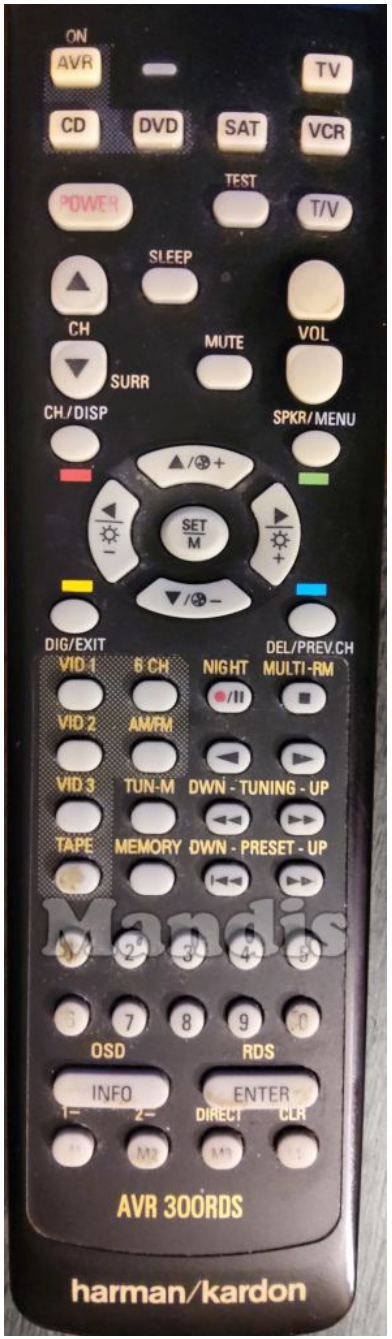

Original		Replacement		Original		Replacement	
	0		0				
	RDS		Eject / Surround				
	Direct		Sound / Title				
	CLR		Exit / Cancel / Clear				

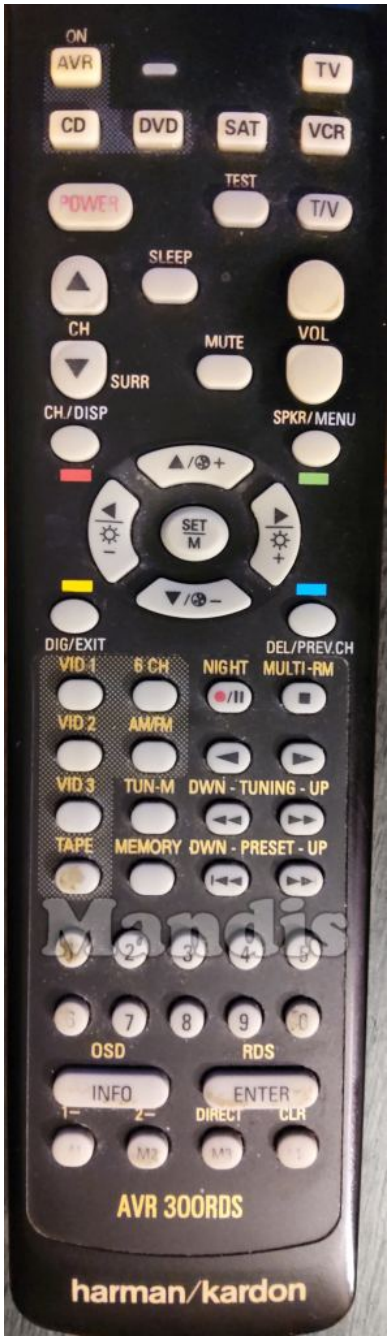

Original		Replacement	
CD	Power On		Power
POWER	Power Off	SHIFT +	Shift + Power
SPKR/MENU	SPKR/Menu	HOME MENU	Menu / Home
DEL/PREV.CH	Del	RETURN BACK	Back / Return
NIGHT	Pause	STEP - FREEZE	Pause / Step / Freeze
MULTI-RM	Stop	HOLD	Stop / Hold
	Play	SLOW	Play / Slow
TUN-M	Tun-M	LIST SMART	Smart / List
DWN - TUNI	<<	TUNE-	<< / Tune-
TUNING - UP	>>	TUNE+	>> / Tune+
MEMORY	Memory	MEDIA DISPLAY	Display / Media
DWN - PRESE	I <<	PRESET-	I << / Preset-
PRESET - UP	Preset ▲	Prime Video RANDOM	Blue / Prime Video / Random
PRESET - UP	>>I	PRESET+	>>I / Preset+
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3

Original		Replacement	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - SAT 0	0
RDS ENTER	RDS	SURROUND	Eject / Surround
DIRECT	Direct	TITLE SOUND	Sound / Title