# Mandis shop

Yamaha VQ086200

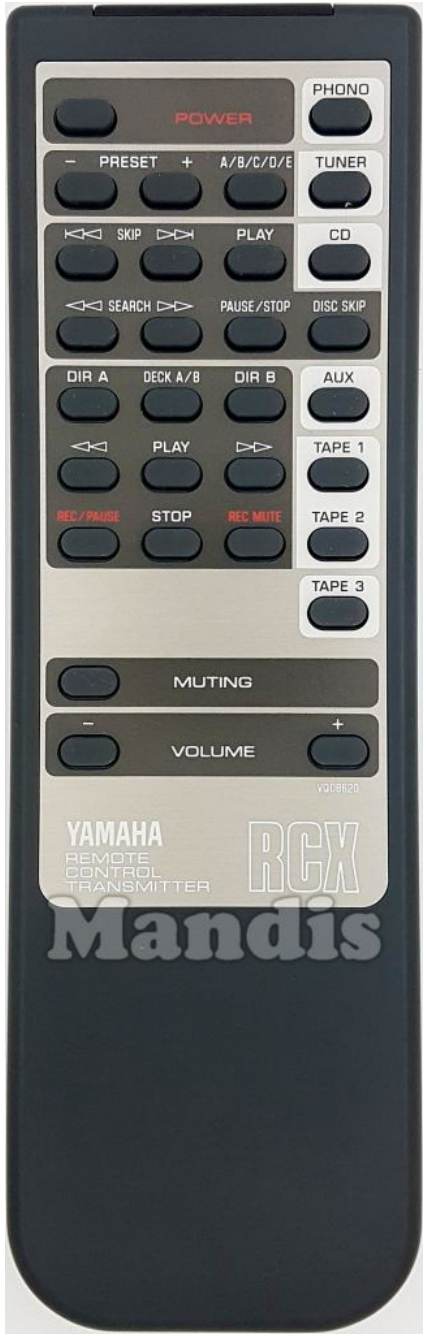


| Original | | Replacement | |
|---|---|---|---|
| POWER | Power | POWER | Power |
| PHONO | Phono | HOME SMART | Smart |
| TUNER | Tuner | OK | Ok |
| A/B/C/D/E | A/B/C/D/E | DISPLAY INFO | Info |
| PRESET + | Preset + | + CH | Ch + |
| PRESET − | Preset - | CH − | Ch - |
| CD | CD | APP MEDIA | Media |
| PLAY | Play CD | PLAY MODE ▶ | Play |
| SKIP ▷▷I | Skip >>I CD | ▷▷I | >>I |
| I◁◁ SKIP | I << Skip CD | I◁◁ | I << |
| SEARCH ▷▷ | Search >> CD | ▷▷ | >> |
| ◁◁ SEARCH | << Search CD | ◁◁ | << |
| PAUSE/STOP | Pause/Stop CD | II | Pause |
| DISC SKIP | Disc Skip CD | RETURN BACK | Back |
| AUX | AUX | A | Red |
| TAPE 1 | Tape 1 | B | Green |
| TAPE 2 | Tape 2 | C | Yellow |

| Original | | Replacement | |
|---|---|---|---|
| TAPE 3 | Tape 3 | D | Blue |
| DIR A | Dir A Tape | SETTINGS OPT | Options |
| DECK A/B | Deck A/B Tape | SOUND DUAL | Dual |
| DIR B | Dir B Tape | AD SUBT | Subt |
| ◁◁ | << Tape | SHIFT + ◁◁ | Shift + << |
| ▷▷ | >> Tape | SHIFT + ▷▷ | Shift + >> |
| PLAY | Play Tape | SHIFT + PLAY MODE ▶ | Shift + Play |
| REC/PAUSE | Rec/Pause Tape | REC MODE ● | Rec |
| STOP | Stop Tape | ■ | Stop |
| REC MUTE | Rec Mute Tape | SEARCH TV/R | TV/R |
| VOLUME + | Vol + | + VOL | Vol + |
| VOLUME − | Vol - | VOL − | Vol - |
| MUTING | Muting | MUTE | Mute |

https://mandis.tv/en/yamaha/1542-897-replacement-remote-control-for-yamaha-vq086200.htm