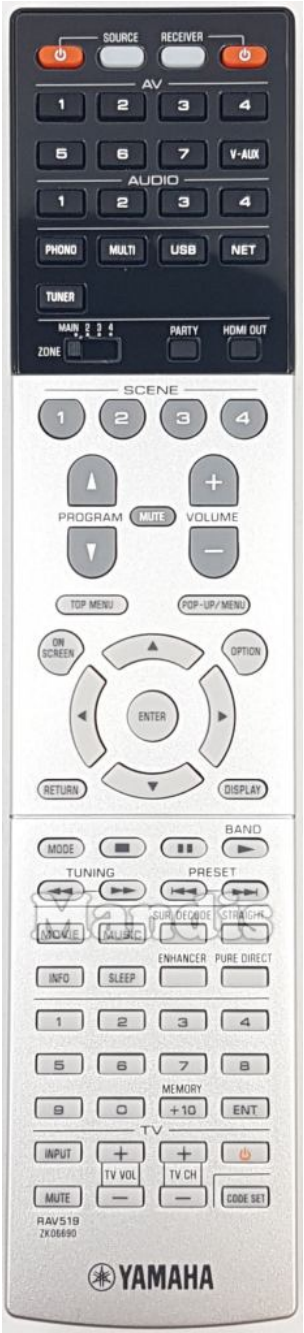

Original	Sustituto
Power Receiver	Power
Power Source	SHIFT + Power
AV1	SHIFT + 1 (TV)
AV2	SHIFT + 2 (DVD)
AV3	SHIFT + 3 (CD - STB)
AV4	SHIFT + 4 (VIDEO)
AV5	SHIFT + 5 (TAPE)
AV6	SHIFT + 6 (TUNER)
AV7	SHIFT + 7 (AUX - HDD)
V- AUX	SHIFT + 8 (USB)
Audio 1	SHIFT + 9 (BLUETOOTH)
Audio 2	SHIFT + GUIDE EPG (Shift + Guide / EPG / -/--)
Audio 3	SHIFT + 0 (HDMI - SAT)
Audio 4	SHIFT + FAV MARKER (Shift + Fav / Marker / PC)
Phono	SHIFT + NETFLIX SEARCH (Shift + Red / Netflix /
Multi	SHIFT + APP REPEAT (Shift + Green / APP /
USB	SHIFT + Prime Video RANDOM (Shift + Blue / Prime Video / Random

Original	Sustituto
Net	SHIFT + SMART (LIST) (Shift + Smart / List
Tuner	SHIFT + YouTube REPEAT A-B (Shift + Yellow / YouTube /
Party	SMART (LIST) (Smart / List
HDMI Out	AV INPUT (RDS) (AV / Input / RDS
Scene 1	NETFLIX SEARCH (Red / Netflix / Search
Scene 2	APP REPEAT (Green / APP / Repeat
Scene 3	YouTube REPEAT A-B (Yellow / YouTube / Repeat
Scene 4	Prime Video RANDOM (Blue / Prime Video / Random
Program Up	CH PAGE + (CH+ / Page+
Program Down	CH PAGE - (CH- / Page-
Volume+	VOL + (Vol +
Volume-	VOL - (Vol -
Mute	DIMMER MUTE (Mute / Dimmer
Top Menu	TOP MENU D.MENU (D. Menu / Top
Pop-Up Menu	HOME MENU (Menu / Home
On Screen	SIZE ZOOM (Zoom / Size
Option	OPT-TOOLS SETUP (Setup / OPT / Tools

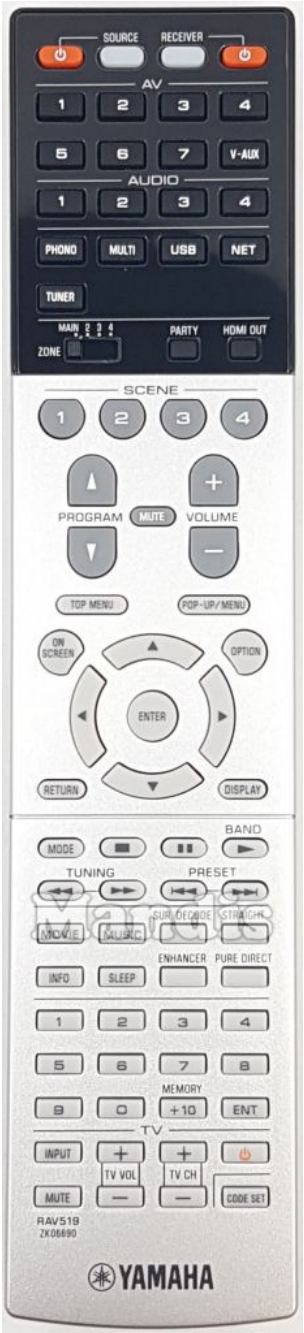

Original		Sustituto		Original		Sustituto	
RETURN	Return	RETURN BACK	Back / Return	SUR. DECODE	Sur Decode	SURROUND	Eject / Surround
DISPLAY	Display	MEDIA DISPLAY	Display / Media	STRAIGHT	Straight	TITLE SOUND	Sound / Title
▲	Up	▲	Up	INFO	Info	ANGLE INFO	Info / Angle
▼	Down	▼	Down	SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
▶	Right	▶	Right	ENHANCER	Enhancer	GOTO TEXT	Text / Goto
◀	Left	◀	Left	PURE DIRECT	Pure Direct	PROGRAM TV/RADIO	TV/Radio /
ENTER	Enter	OK	OK	1	1	TV 1	1
MODE	Mode	FORMAT PICTURE	Picture / Format	2	2	DVD 2	2
■	Stop	HOLD ■	Stop / Hold	3	3	CD-STB 3	3
❚❚	Pause	STEP-FREEZE ❚❚	Pause / Step / Freeze	4	4	VIDEO 4	4
BAND ►	Play/Band	SLOW ▶	Play / Slow	5	5	TAPE 5	5
TUNING ◀◀	<< Tuning	TUNE- ◀◀	<< / Tune-	6	6	TUNER 6	6
TUNING ▶▶	Tuning >>	TUNE+ ▶▶	>> / Tune+	7	7	AUX-HDD 7	7
PRESET ◀◀	I<< Preset	PRESET- ◀◀	I<< / Preset-	8	8	USB 8	8
PRESET ▶▶	Preset >>I	PRESET+ ▶▶	>>I / Preset+	9	9	BLUETOOTH 9	9
MOVIE	Movie	EQ SUBTITLE	Subtitle / EQ	0	0	HDMI-SAT 0	0
MUSIC	Music	LANG I/II AUDIO	Audio / Lang I/II	MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--

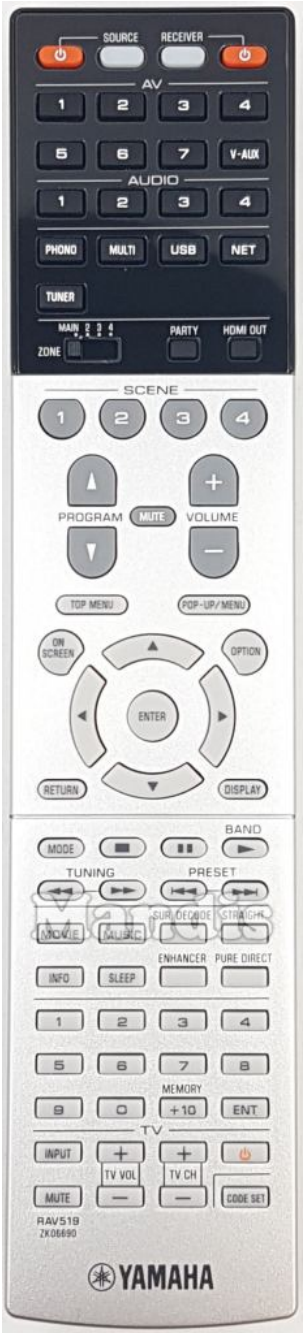

Original	Sustituto	Original	Sustituto
ENT.	Fav / Marker / PC		

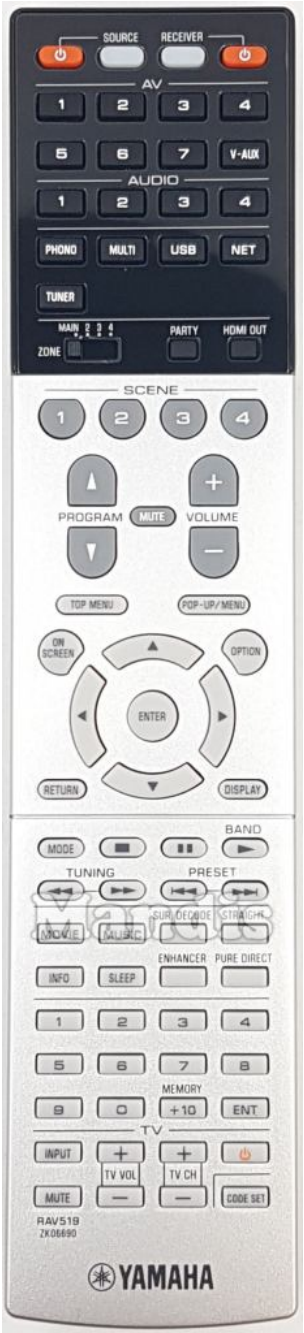

Original	Sustituto
Power Receiver	Power
Power Source	SHIFT + Power: Shift + Power
AV1	SHIFT + 1: Shift + 1
AV2	SHIFT + 2: Shift + 2
AV3	SHIFT + 3: Shift + 3
AV4	SHIFT + 4: Shift + 4
AV5	SHIFT + 5: Shift + 5
AV6	SHIFT + 6: Shift + 6
AV7	SHIFT + 7: Shift + 7
V-AUX	SHIFT + 8: Shift + 8
Audio 1	SHIFT + 9: Shift + 9
Audio 2	SHIFT + GUIDE EPG: Shift + Guide / EPG / -/--
Audio 3	SHIFT + 0: Shift + 0
Audio 4	SHIFT + FAV MARKER: Shift + Fav / Marker / PC
Phono	SHIFT + NETFLIX SEARCH: Shift + Red / Netflix /
Net	SHIFT + SMART: Shift + Smart / List
USB	SHIFT + Prime Video RANDOM: Shift + Blue / Prime Video / Random

Original	Sustituto
Tuner	SHIFT + YouTube REPEAT A-B: Shift + Yellow / YouTube /
Party	SMART: Smart / List
HDMI Out	AV INPUT: AV / Input / RDS
Scene 1	NETFLIX SEARCH: Red / Netflix / Search
Scene 2	APP REPEAT: Green / APP / Repeat
Scene 3	YouTube REPEAT A-B: Yellow / YouTube / Repeat
Scene 4	Prime Video RANDOM: Blue / Prime Video / Random
Mute	DIMMER MUTE: Mute / Dimmer
Volume+	VOL +: Vol +
Volume-	VOL -: Vol -
Pop-Up Menu	HOME MENU: Menu / Home
Top Menu	TOP MENU D.MENU: D.Menu / Top
Option	OPT-TOOLS SETUP: Setup / OPT /
Display	MEDIA DISPLAY: Display / Media
Return	RETURN BACK: Back / Return
On Screen	SIZE ZOOM: Zoom / Size
Up	Up

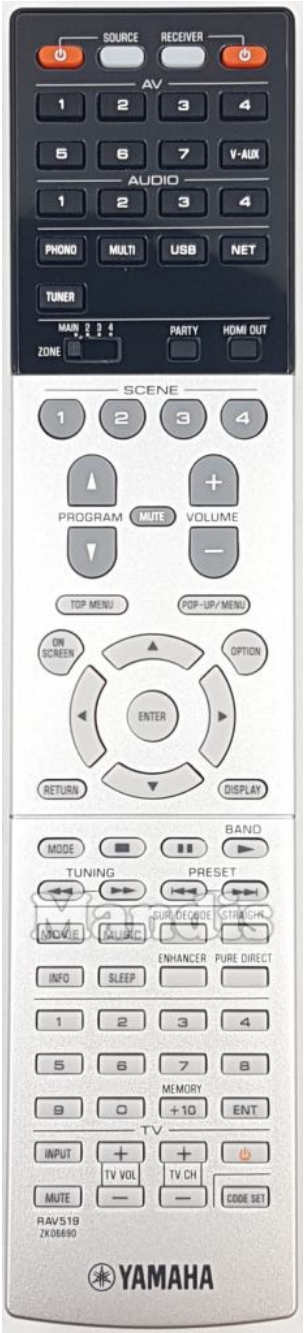

Original		Sustituto	
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter	OK	OK
MODE	Mode	FORMAT PICTURE	Picture / Format
	Stop	HOLD	Stop / Hold
	Pause	STEP-FREEZE	Pause / Step / Freeze
BAND	Play/Band	SLOW	Play / Slow
	<< Tuning	TUNE-	<< / Tune-
	Tuning >>	TUNE+	>> / Tune+
	I<< Preset	PRESET-	I<< / Preset-
	Preset >>I	PRESET+	>>I / Preset+
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Sustituto	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC

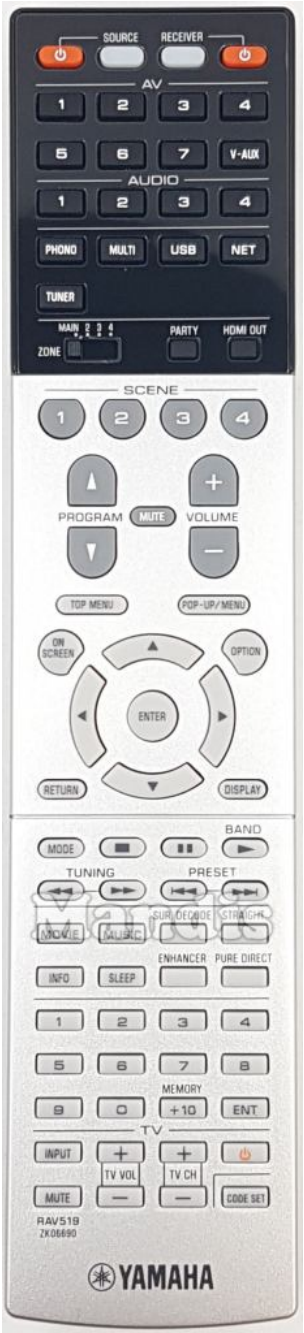

Original	Sustituto
Power Receiver	Power
Power Source	SHIFT + Power: Shift + Power
AV1	SHIFT + 1: Shift + 1
AV2	SHIFT + 2: Shift + 2
AV3	SHIFT + 3: Shift + 3
AV4	SHIFT + 4: Shift + 4
AV5	SHIFT + 5: Shift + 5
AV6	SHIFT + 6: Shift + 6
AV7	SHIFT + 7: Shift + 7
V-AUX	SHIFT + 8: Shift + 8
Audio 1	SHIFT + 9: Shift + 9
Audio 2	SHIFT + GUIDE EPG: Shift + Guide / EPG / -/--
Audio 3	SHIFT + 0: Shift + 0
Audio 4	SHIFT + FAV MARKER: Shift + Fav / Marker / PC
Phono	SHIFT + NETFLIX SEARCH: Shift + Red / Netflix /
USB	SHIFT + Prime Video RANDOM: Shift + Blue / Prime
NET	SHIFT + SMART: Shift + Smart / List

Original	Sustituto
TUNER	SHIFT + YouTube REPEAT A-B: Shift + Yellow / YouTube /
PARTY	SMART: Smart / List
HDMI OUT	AV INPUT: AV / Input / RDS
Scene 1	NETFLIX SEARCH: Red / Netflix / Search
Scene 2	APP REPEAT: Green / APP / Repeat
Scene 3	YouTube REPEAT A-B: Yellow / YouTube / Repeat
Scene 4	Prime Video RANDOM: Blue / Prime Video / Random
Volume+	VOL +: Vol +
Volume -	VOL -: Vol -
MUTE	DIMMER MUTE: Mute / Dimmer
POP-UP/MENU	HOME MENU: Menu / Home
TOP MENU	TOP MENU D.MENU: D.Menu / Top
INFO	ANGLE INFO: Info / Angle
OPTION	OPT-TOOLS SETUP: Setup / OPT /
RETURN	RETURN BACK: Back / Return
ON SCREEN	SIZE ZOOM: Zoom / Size
ENTER	OK: OK

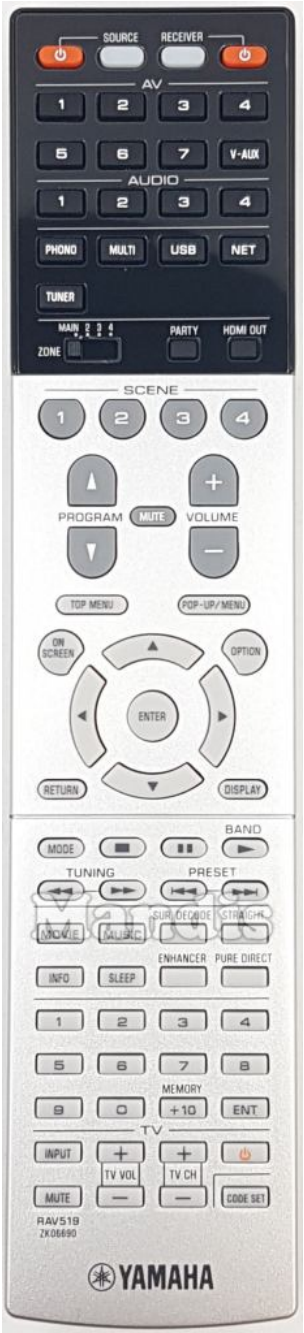

Original		Sustituto	
DISPLAY	Display	MEDIA DISPLAY	Display / Media
▲	Up	▲	Up
▼	Down	▼	Down
▶	Right	▶	Right
◀	Left	◀	Left
MODE	Mode	FORMAT PICTURE	Picture / Format
■	Stop	HOLD ■	Stop / Hold
❚❚	Pause	STEP-FREEZE ❚❚	Pause / Step / Freeze
BAND ▶	Play/Band	SLOW ▶	Play / Slow
◀◀	<< Tuning	TUNE- ◀◀	<< / Tune-
▶▶	Tuning >>	TUNE+ ▶▶	>> / Tune+
◀◀I	I << Preset	PRESET- ◀◀I	I << / Preset-
▶▶I	Preset >>I	PRESET+ ▶▶I	>>I / Preset+
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Sustituto	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC

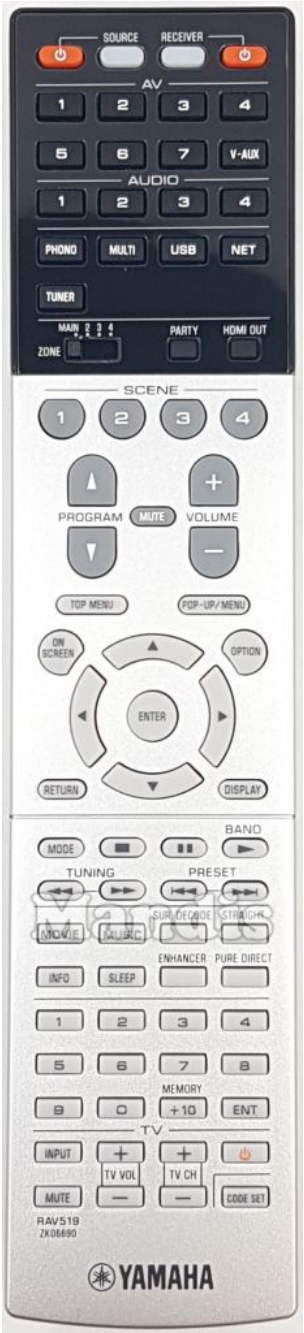

Original	Sustituto
Power Receiver	Power
Power Source	Shift + Power
AV1	Shift + 1
AV2	Shift + 2
AV3	Shift + 3
AV4	Shift + 4
AV5	Shift + 5
AV6	Shift + 6
AV7	Shift + 7
V-AUX	Shift + 8
Audio 1	Shift + 9
Audio 2	Shift + Guide / EPG / -/--
Audio 3	Shift + 0
Audio 4	Shift + Fav / Marker / PC
Phono	Shift + Red / Netflix /
USB	Shift + Blue / Prime
Net	Shift + Smart / List

Original	Sustituto
Tuner	Shift + Yellow / YouTube /
Party	Smart / List
HDMI Out	AV / Input / RDS
Scene 1	Red / Netflix / Search
Scene 2	Green / APP / Repeat
Scene 3	Yellow / YouTube / Repeat
Scene 4	Blue / Prime Video / Random
Volume+	Vol +
Volume-	Vol -
Mute	Mute / Dimmer
Top Menu	D.Menu / Top
Pop-Up Menu	Menu / Home
On Screen	Zoom / Size
Option	Setup / OPT /
Return	Back / Return
Display	Display / Media
Up	Up

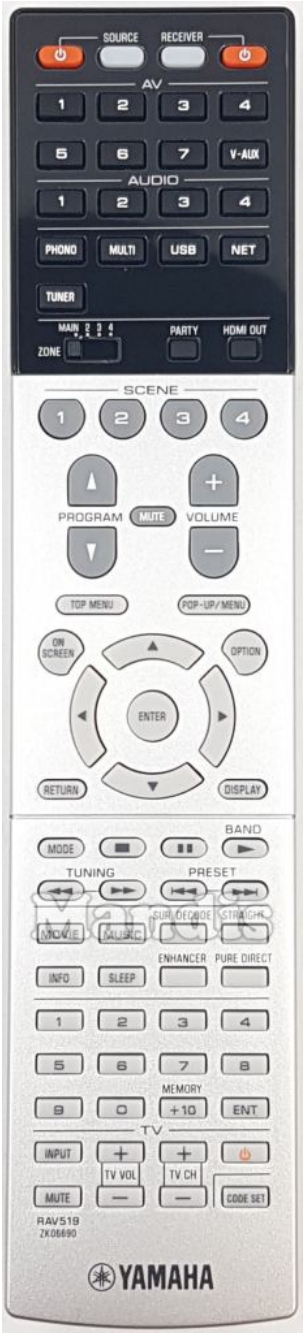

Original		Sustituto	
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter	OK	OK
MODE	Mode	FORMAT PICTURE	Picture / Format
	Stop	HOLD	Stop / Hold
	Pause	STEP-FREEZE	Pause / Step / Freeze
BAND	Play/Band	SLOW	Play / Slow
	<< Tuning	TUNE-	<< / Tune-
	Tuning >>	TUNE+	>> / Tune+
	I<< Preset	PRESET-	I<< / Preset-
	Preset >>I	PRESET+	>>I / Preset+
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Sustituto	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC