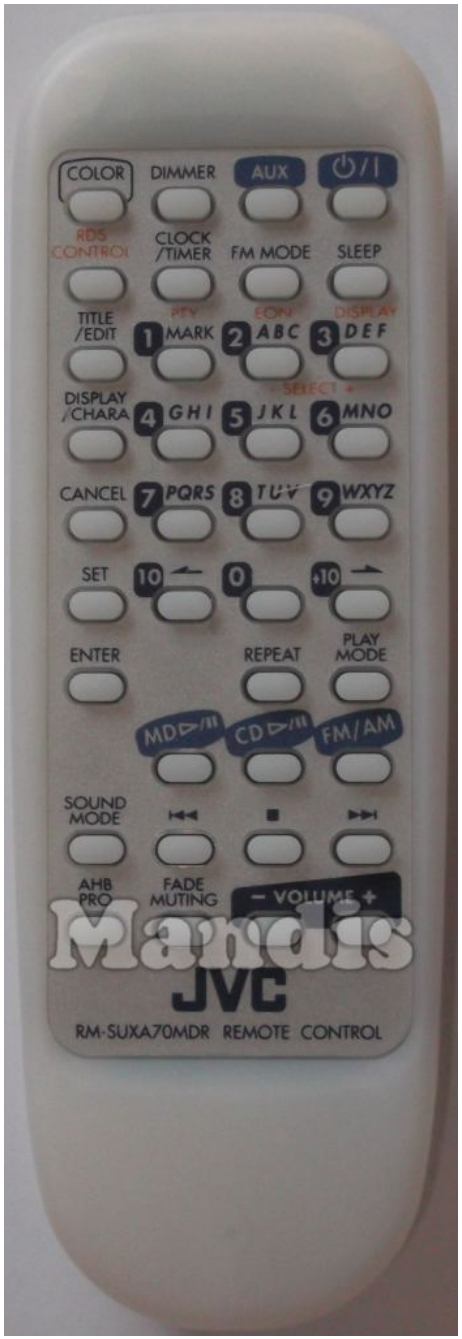

Original		Sustituto	
	Power		Power
	AUX	SHIFT + AUX - HDD 7	Shift + 7
	Dimmer	SHIFT + DIMMER MUTE	Shift + Mute / Dimmer
	2	DVD 2	2
	Color	OPT-TOOLS SETUP	Setup / OPT /
	3	CD - STB 3	3
	Clock/Timer	SHIFT + TIMER SLEEP	Shift + Sleep / Timer
	FM Mode	SHIFT + PROGRAM TV/ RADIO	Shift + TV/Radio / Program
	Sleep	TIMER SLEEP	Sleep / Timer
	1	TV 1	1
	EON	SHIFT + LIST SMART	Shift + Smart / List
	Display	MEDIA DISPLAY	Display / Media
	Select-	CH PAGE –	CH- / Page-
	Select+	+ CH PAGE	CH+ / Page+
	4	VIDEO 4	4
	PTY	NETFLIX SEARCH	Red / Netflix / Search
	5	TAPE 5	5

Original		Sustituto	
	6	TUNER 6	6
	7	AUX - HDD 7	7
	8	USB 8	8
	9	BLUETOOTH 9	9
	0	HDMI - SAT 0	0
	10	-/-- GUIDE EPG	Guide / EPG / -/--
	10+	PC FAV MARKER	Fav / Marker / PC
	Title/Edit	RETURN BACK	Back / Return
	Display/Chara	SIZE ZOOM	Zoom / Size
	Cancel	CLEAR EXIT CANCEL	Exit / Cancel / Clear
	Set	HOME MENU	Menu / Home
	Enter	OK	OK
	Repeat	APP REPEAT	Green / APP / Repeat
	Play Mode	LIST SMART	Smart / List
	MD Play/Pause	STEP - FREEZE II	Pause / Step / Freeze
	CD Play/Pause	SLOW ▶	Play / Slow
	FM/AM	PROGRAM TV/ RADIO	TV/Radio / Program

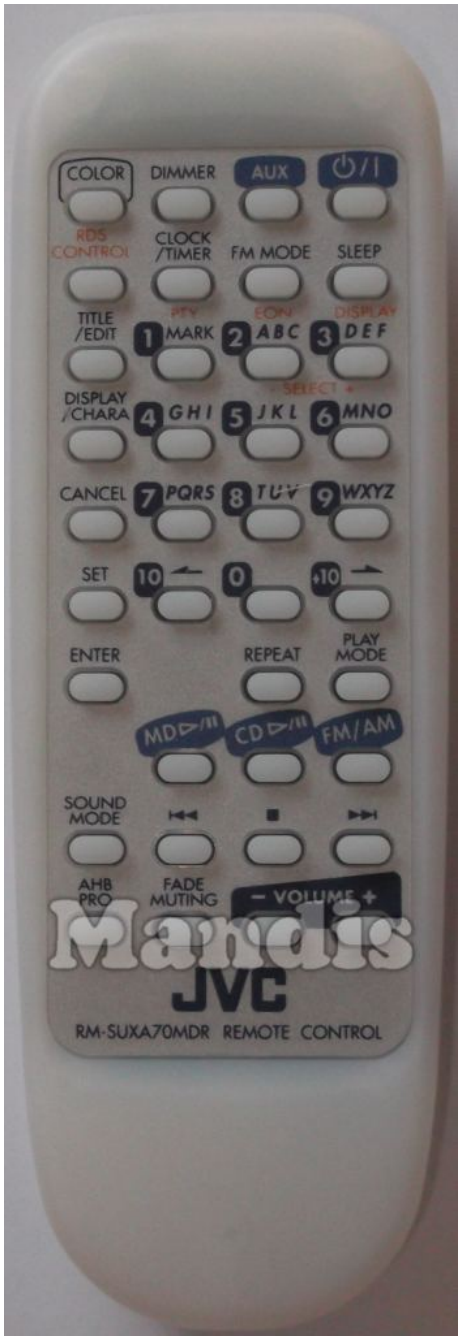

Original	Sustituto	Original	Sustituto
SOUND MODE Sound Mode	TITLE SOUND Sound / Title		
I<<	PRESET- I<< / Preset-		
Stop	HOLD Stop / Hold		
>>I	PRESET+ >>I / Preset+		
AHB PRO AHB PRO	EQ SUBTITLE Subtitle / EQ		
FADE MUTING Fade Muting	DIMMER MUTE Mute / Dimmer		
VOLU Vol -	VOL Vol -		
LUME + Vol +	+ VOL Vol +		