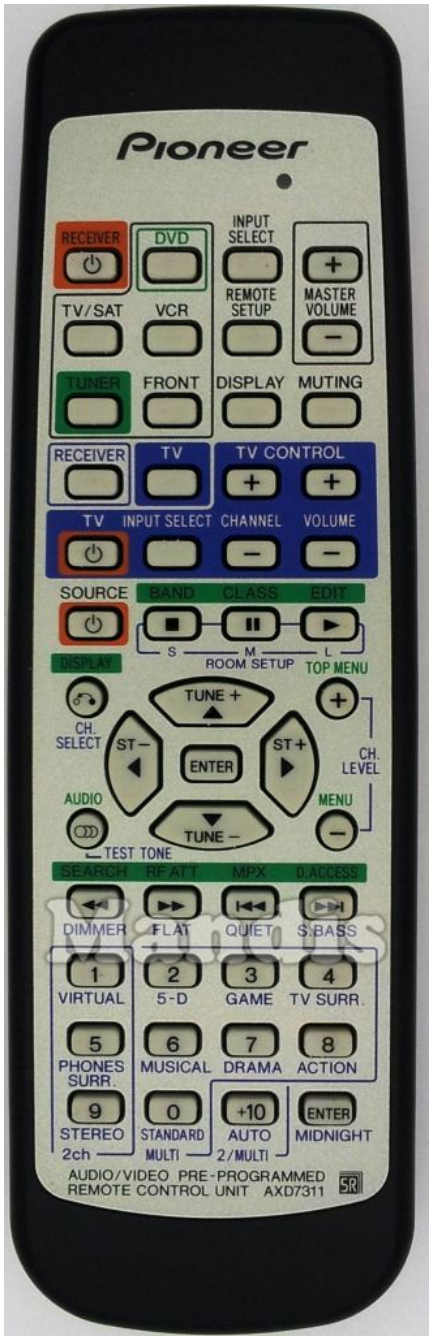

Original		Sustituto	
RECEIVER	Power Receiver		Power
DVD	DVD	SHIFT + DVD 2	Shift + 2
INPUT SELECT	Input Select	RDS AV INPUT	AV / Input / RDS
MASTER VOLUME +	Master	VOL +	Vol +
TV/SAT	TV/SAT	SHIFT + HDMI - SAT 0	Shift + 0
TV/SAT	TV/SAT	SHIFT + TV 1	Shift + 1
VCR	VCR	SHIFT + VIDEO 4	Shift + 4
REMOTE SETUP	Remote Setup	OPT-TOOLS SETUP	Setup / OPT /
MASTER VOLUME –	Master Volume-	VOL –	Vol -
TUNER	Tuner	SHIFT + TUNER 6	Shift + 6
FRONT	Front	TITLE SOUND	Sound / Title
DISPLAY	Display	MEDIA DISPLAY	Display / Media
MUTING	Muting	DIMMER MUTE	Mute / Dimmer
SOURCE	Power Source	SHIFT +	Shift + Power
BAND S	Room Setup S	SLOW ▶	Play / Slow
CLASS M	Room Setup M	STEP-FREEZE ⏸	Pause / Step / Freeze
EDIT L	Room Setup L	HOLD ■	Stop / Hold

Original		Sustituto	
DISPLAY CH. SELECT	CH Select	LIST SMART	Smart / List
TUNE +	Up/Tune+		Up
TOP MENU CH. LEVEL +	CH Level +	CH PAGE +	CH+ / Page+
ST–	Left/ST-		Left
ENTER	Enter	OK	OK
ST+	Right/ST+		Right
CH. LEVEL – MENU	CH Level -	CH PAGE –	CH- / Page-
AUDIO	Test Tone	GOTO TEXT	Text / Goto
TUNE –	Down/Tune-		Down
SEARCH DIMMER	Dimmer	TUNE- ◀◀	<< / Tune-
SEARCH DIMMER	Dimmer	SHIFT + DIMMER MUTE	Shift + Mute / Dimmer
RF ATT FLAT	Flat	TUNE+ ▶▶	>> / Tune+
MPX QUIET	Quiet	PRESET- ⏮	I<< / Preset-
D.ACCESS S.BASS	S. Bass	PRESET+ ⏭	>>I / Preset+
1 VIRTUAL	1/Virtual	TV 1	1
2 5-D	2/5-D	DVD 2	2
3 GAME	3/Game	CD - STB 3	3

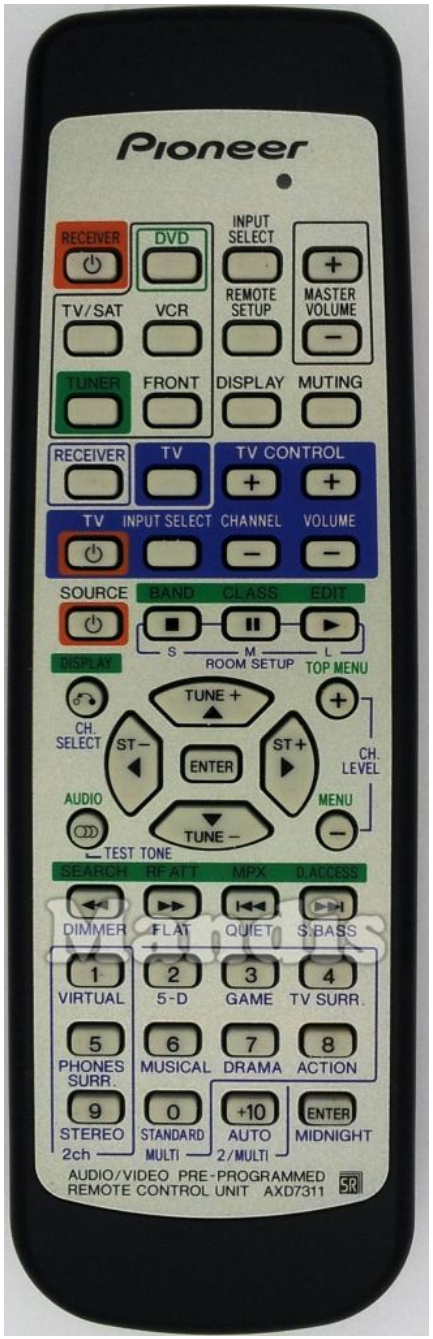

Original		Sustituto	
4 TV SURR.	4/Tv Surr	VIDEO 4	4
5 PHONES SURR.	5/Phones Surr	TAPE 5	5
6 MUSICAL	6/Musical	TUNER 6	6
7 DRAMA	7/Drama	AUX - HDD 7	7
8 ACTION	8/Action	USB 8	8
9 STEREO	9/Stereo	BLUETOOTH 9	9
0 STANDARD	0/Standard	HDMI - SAT 0	0
+10 AUTO	+10/Auto	-/-- GUIDE EPG	Guide / EPG / -/--
ENTER MIDNIGHT	Enter Down	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
ENTER MIDNIGHT	Midnight	PC FAV MARKER	Fav / Marker / PC
BAND S	STOP VCR	SHIFT + HOLD ■	Shift + Stop /
CLASS M	Pause VCR	SHIFT + STEP - FREEZE ⏸	Shift + Pause / Step /
EDIT L	Play VCR	SHIFT + SLOW ▶	Shift + Play /
TUNE +	Up VCR	SHIFT + ▲	Shift + Up
ST –	Left VCR	SHIFT + ◀	Shift + Left
ENTER	Enter VCR	SHIFT + OK	Shift + OK
ST +	Right VCR	SHIFT + ▶	Shift + Right

Original		Sustituto	
TUNE –	Down VCR	SHIFT + ▼	Shift + Down
SEARCH DIMMER	<< VCR	SHIFT + TUNE- ◀◀	Shift + << /
RF ATT FLAT	>> VCR	SHIFT + TUNE+ ▶▶	Shift + >> /
MPX QUIET	I << VCR	SHIFT + PRESET- ⏮	Shift + I << / Preset-
D.ACCESS S.BASS	>>I VCR	SHIFT + PRESET+ ⏭	Shift + >>I / Preset+

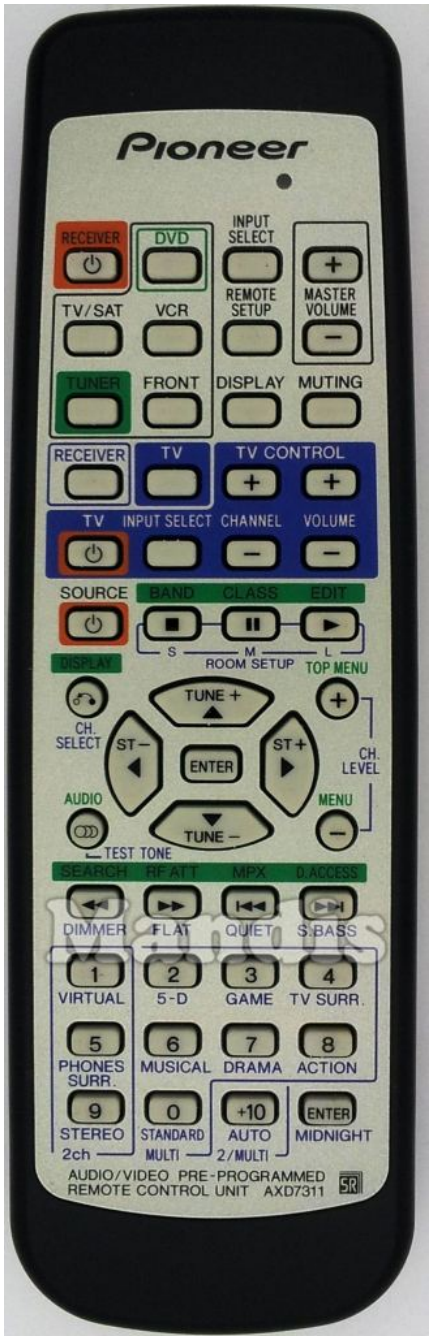

Original		Sustituto		Original		Sustituto	
DVD	DVD	SHIFT + DVD 2	Shift + 2	CH LEVEL MENU	Menu	HOME MENU	Menu / Home
TV/SAT	TV/SAT	SHIFT + HDMI - SAT 0	Shift + 0	AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
TV/SAT	TV/SAT	SHIFT + TV 1	Shift + 1	TUNE –	Down		Down
VCR	VCR	SHIFT + VIDEO 4	Shift + 4	SEARCH DIMMER	<<	TUNE-	<< / Tune-
TUNER	Tuner	SHIFT + TUNER 6	Shift + 6	RFATT FLAT	>>	TUNE+	>> / Tune+
SOURCE	Power Source		Power	MPX QUIET	I<<	PRESET-	I<< / Preset-
BAND S	Stop	HOLD	Stop / Hold	D.ACCESS S.BASS	>>I	PRESET+	>>I / Preset+
CLASS M	Pause	STEP - FREEZE	Pause / Step / Freeze	1 VIRTUAL	1	TV 1	1
EDIT L	Play	SLOW	Play / Slow	2 5-D	2	DVD 2	2
DISPLAY CH. SELECT	Back/CH Select/Display	RETURN BACK	Back / Return	3 GAME	3	CD - STB 3	3
DISPLAY CH. SELECT	Back/CH Select/Display	MEDIA DISPLAY	Display / Media	4 TV SURR.	4	VIDEO 4	4
TUNE +	Up		Up	5 PHONES SURR.	5	TAPE 5	5
TOP MENU CH. LEVEL	Top Menu	TOP MENU D.MENU	D. Menu / Top	6 MUSICAL	6	TUNER 6	6
ST –	Left		Left	7 DRAMA	7	AUX - HDD 7	7
ENTER	Enter	OK	OK	8 ACTION	8	USB 8	8
ENTER	Enter	PC FAV MARKER	Fav / Marker / PC	9 STEREO	9	BLUETOOTH 9	9
ST +	Right		Right	0 STANDARD	0	HDMI - SAT 0	0

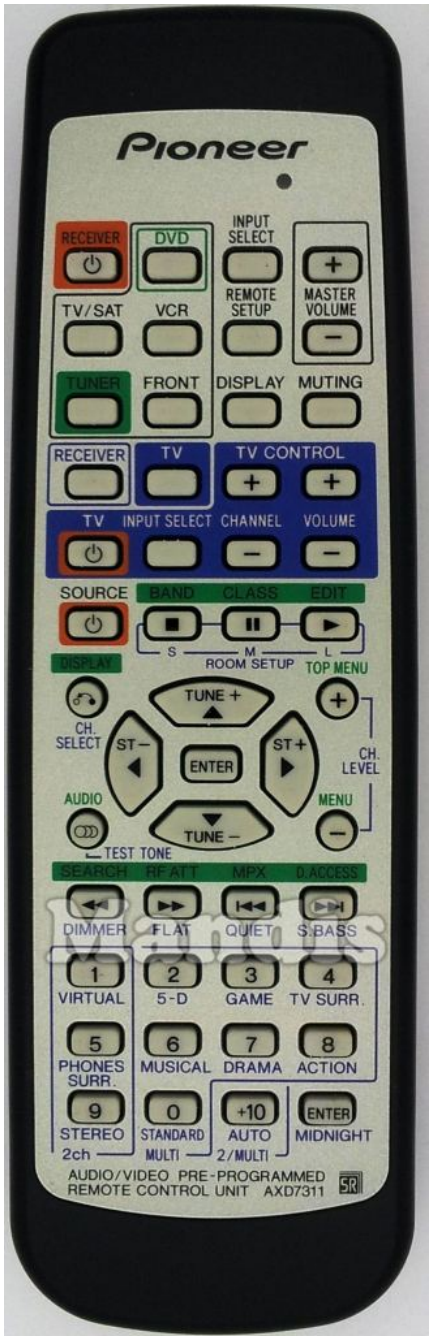

Original	Sustituto	Original	Sustituto
+10 AUTO +10	GUIDE EPG Gui de / EPG / -/--		

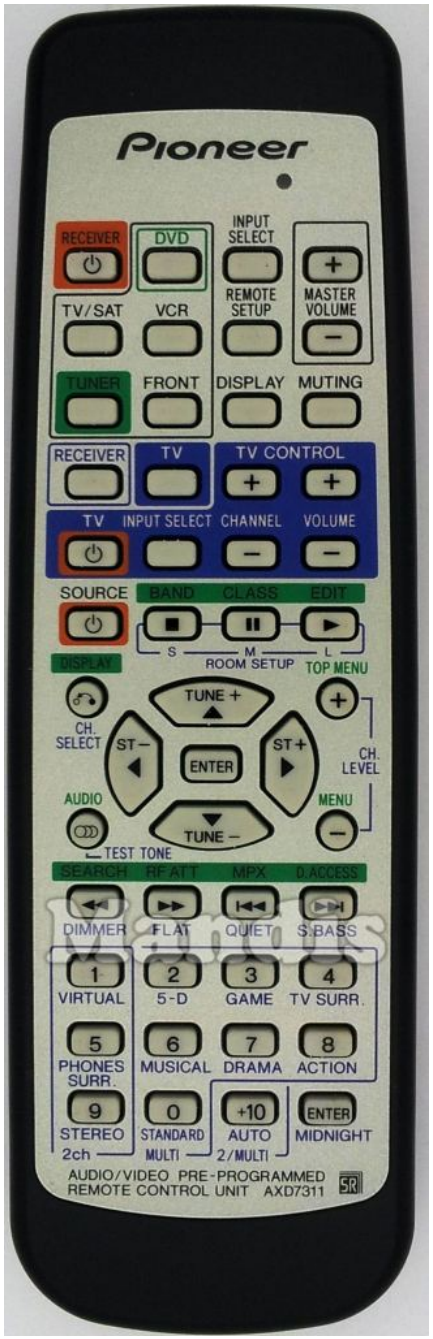

Original		Sustituto	
DVD	DVD	SHIFT + DVD 2	Shift + 2
INPUT SELECT	Input Select	RDS AV INPUT	AV / Input / RDS
TV/SAT	TV/SAT	SHIFT + TV 1	Shift + 1
TV/SAT	TV/SAT	SHIFT + HDMI - BAT 0	Shift + 0
VCR	VCR	SHIFT + VIDEO 4	Shift + 4
TUNER	Tuner	SHIFT + TUNER 6	Shift + 6
CHANNEL +	Channel +	CH PAGE +	CH+ / Page+
VOLUME +	Volume+	VOL +	Vol +
CHANNEL -	Channel -	CH PAGE –	CH- / Page-
VOLUME –	Volume-	VOL –	Vol -
SOURCE	Power	Power	Power
DISPLAY CH. SELECT	Back	RETURN BACK	Back / Return
TUNE +	Up	Up	Up
TOP MENU CH. LEVEL +	CH Level +/Top	HOME MENU	Menu / Home
ST –	Left	Left	Left
ENTER	Enter	OK	OK
ENTER	Enter	PC FAV MARKER	Fav / Marker / PC

Original		Sustituto	
ST +	Right		Right
CH LEVEL MENU –	CH Level - / Menu	TOP MENU D.MENU	D. Menu / Top
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
TUNE –	Down		Down
1 VIRTUAL	1	TV 1	1
2 5-D	2	DVD 2	2
3 GAME	3	CD - STB 3	3
4 TV SURR.	4	VIDEO 4	4
5 PHONES SURR.	5	TAPE 5	5
6 MUSICAL	6	TUNER 6	6
7 DRAMA	7	AUX - HDD 7	7
8 ACTION	8	USB 8	8
9 STEREO	9	BLUETOOTH 9	9
0 STANDARD	0	HDMI - BAT 0	0
+10 AUTO	+10	-/-- GUIDE EPG	Guide / EPG / -/--

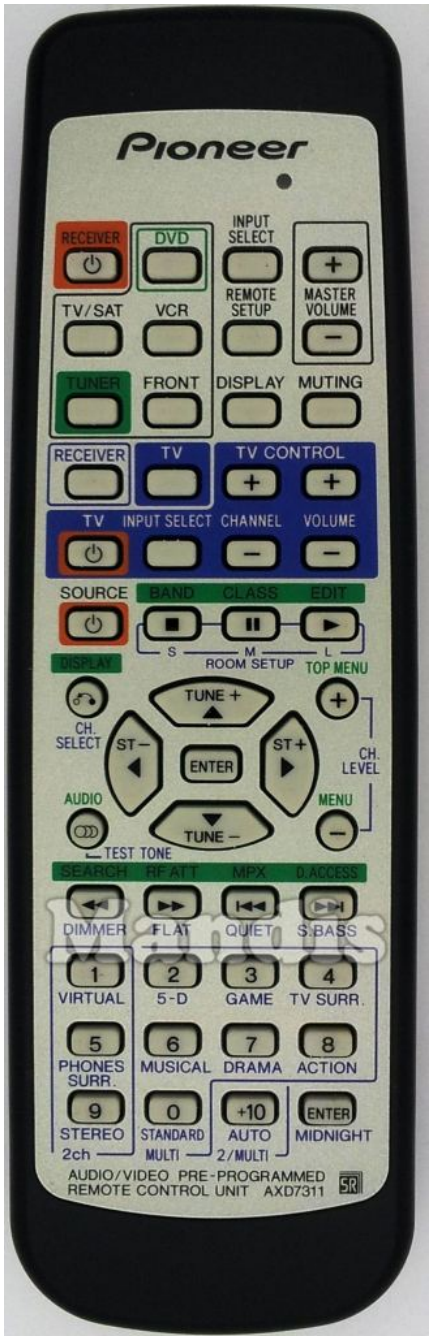

Original		Sustituto	
DVD	DVD	SHIFT + DVD 2	Shift + 2
MASTER VOLUME +	Master	VOL +	Vol +
TV/SAT	TV/SAT	SHIFT + HDMI - SAT 0	Shift + 0
TV/SAT	TV/SAT	SHIFT + TV 1	Shift + 1
VCR	VCR	SHIFT + VIDEO 4	Shift + 4
MASTER VOLUME –	Master Volume-	VOL –	Vol -
TUNER	Tuner	SHIFT + TUNER 6	Shift + 6
DISPLAY	Display	MEDIA DISPLAY	Display / Media
MUTING	Muting	DIMMER MUTE	Mute / Dimmer
SOURCE	Power Source		Power
BAND	Band	TOP MENU D.MENU	D.Menu / Top
CLASS	Class	OPT-TOOLS SETUP	Setup / OPT /
EDIT	Edit	GOTO TEXT	Text / Goto
TUNE +	Tune+	TUNE+	>> / Tune+
TUNE +	Tune+		Up
ST –	ST-	PRESET-	I<< / Preset-
ST –	ST-		Left

Original		Sustituto	
ENTER	Enter	OK	OK
ST +	ST+	PRESET+	>>I / Preset+
ST +	ST+		Right
CH LEVEL MENU	Menu	HOME MENU	Menu / Home
TUNE –	Tune-	TUNE-	<< / Tune-
TUNE –	Tune-		Down
SEARCH DIMMER	Search	NETFLIX SEARCH	Red / Netflix / Search
RF ATT FLAT	RF ATT	APP REPEAT	Green / APP / Repeat
MPX QUIET	MPX	YouTube REPEAT A-B	Yellow / YouTube / Repeat
D.ACCESS S.BASS	D.Access	Prime Video RANDOM	Blue / Prime Video / Random
1 VIRTUAL	1	TV 1	1
2 5-D	2	DVD 2	2
3 GAME	3	CD - STB 3	3
4 TV SURR.	4	VIDEO 4	4
5 PHONES SURR.	5	TAPE 5	5
6 MUSICAL	6	TUNER 6	6
7 DRAMA	7	AUX - HDD 7	7

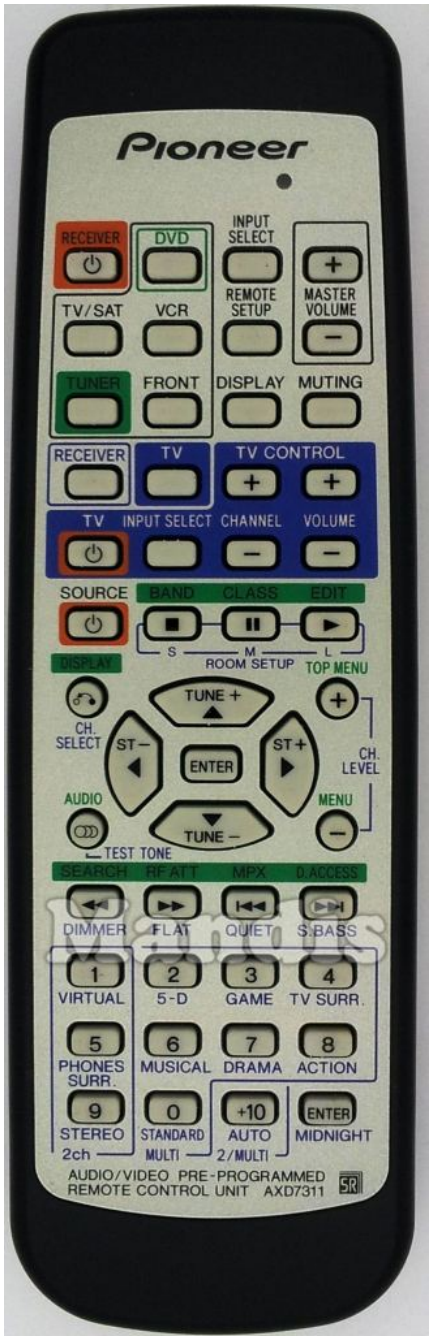

Original		Sustituto		Original		
8 ACTION	8	USB 8	8			
9 STEREO	9	BLUETOOTH 9	9			
0 STANDARD	0	HDMI - SAT 0	0			