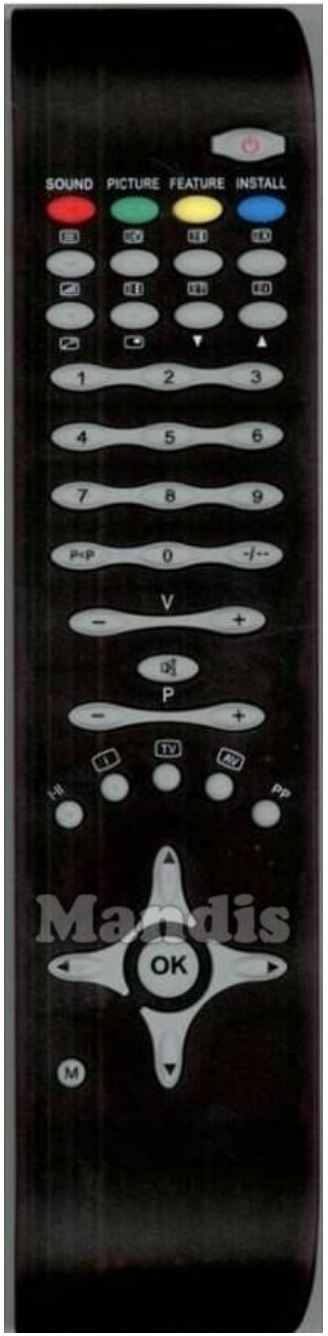

Original		Sustituto	
	Power		Power
SOUND	Red/ Sound	A	Red
PICTURE	Green/ Picture	B	Green
FEATURE	Yellow/ Feature	C	Yellow
INSTALL	Blue/ Install	D	Blue
	[≡]	REPEAT TEXT	Text
	[≡O]	SETTINGS OPT	Options
	[≡+]	PICTURE FORMAT	Format
	[≡X]	HOME SMART	Smart
	[. ≡] / [/ ■]	AD SUBT	Subt
	[≡♦] / [■]	APP MEDIA	Media
	[≡?] / ↓	ECO 3D	3D
	[≡i] / ↑	DISC NAV LIST	List
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4

Original		Sustituto	
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
P<P	P<P	FAV PRE-CH	Pre Ch
-/--	-/--	-/-- GUIDE	Guide
V +	Vol +	+ VOL	Vol +
V -	Vol -	VOL −	Vol -
	Mute	MUTE	Mute
P +	P+	+ CH	Ch +
P -	P-	CH −	Ch -
I-II	I-II	SOUND DUAL	Dual
[i]	[i]	DISPLAY INFO	Info
TV	TV	SEARCH TV/R	TV/R
AV	AV	TIMER AV	AV

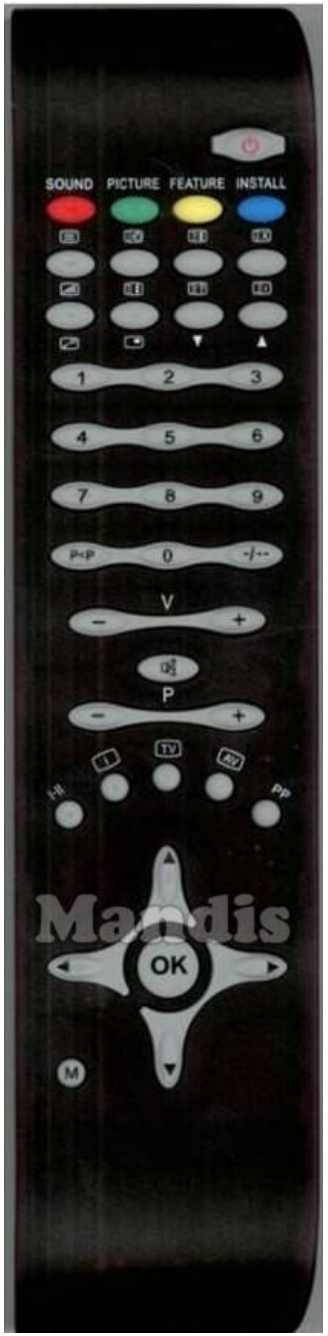

Original		Sustituto	
	PP		Back
	Up		Up
	Down		Down
	Ri ght		Ri ght
	Lef t		Lef t
	OK		Ok
	M		Menu

Original	Sustituto