Mandis shop

Sony RMT-DPF1

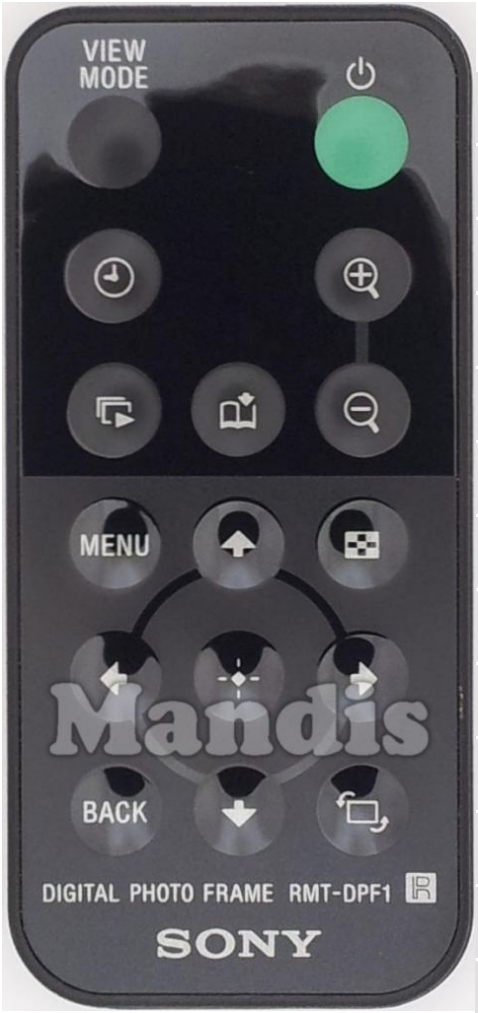


| Original | Sustituto | Original | Sustituto |
|---|---|---|---|
| Standby | Power | | |
| View Mode | Source | | |
| Time | 8 / A-B | | |
| Folders | 7 / Rep | | |
| [ I ] | 9 / Disp | | |
| Zoom+ | + | | |
| Zoom- | - | | |
| Menu | 2 / Menu | | |
| [+] | 0 / Zoom | | |
| Back | 3 / Exit | | |
| ↔ | -- / Sear | | |
| Up | Up | | |
| Down | Down | | |
| Right | Right | | |
| Left | Left | | |
| OK | OK | | |
| | | | |