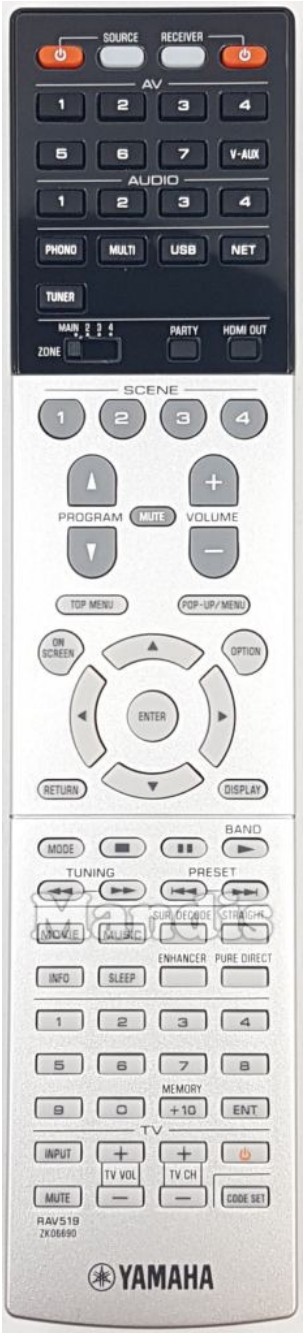

Original		Rechange	
	Power Receiver		Power
	Power Source	SHIFT +	Power
1	AV1	SHIFT + TV 1	Shift + 1
2	AV2	SHIFT + DVD 2	Shift + 2
3	AV3	SHIFT + CD - STB 3	Shift + 3
4	AV4	SHIFT + VIDEO 4	Shift + 4
5	AV5	SHIFT + TAPE 5	Shift + 5
6	AV6	SHIFT + TUNER 6	Shift + 6
7	AV7	SHIFT + AUX - HDD 7	Shift + 7
V-AUX	V-AUX	SHIFT + USB 8	Shift + 8
1	Audio 1	SHIFT + BLUETOOTH 9	Shift + 9
2	Audio 2	SHIFT + -/-- GUIDE EPG	Shift + Guide / EPG / -/--
3	Audio 3	SHIFT + HDMI - SAT 0	Shift + 0
4	Audio 4	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
PHONO	Phono	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
MULTI	Multi	SHIFT + APP REPEAT	Shift + Green / APP /
USB	USB	SHIFT + Prime Video RANDOM	Shift + Blue / Prime Video / Random

Original		Rechange	
NET	Net	SHIFT + LIST SMART	Shift + Smart / List
TUNER	Tuner	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /
PARTY	Party	LIST SMART	Smart / List
HDMI OUT	HDMI Out	RDS AV INPUT	AV / Input / RDS
1	Scene 1	NETFLIX SEARCH	Red / Netflix / Search
2	Scene 2	APP REPEAT	Green / APP / Repeat
3	Scene 3	YouTube REPEAT A-B	Yellow / YouTube / Repeat
4	Scene 4	Prime Video RANDOM	Blue / Prime Video / Random
PROGRAM	Program Up	+ CH PAGE	CH+ / Page+
PROGRAM	Program Down	CH PAGE −	CH- / Page-
+ VOLUME	Volume+	+ VOL	Vol +
VOLUME −	Volume-	VOL −	Vol -
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
TOP MENU	Top Menu	TOP MENU D.MENU	D.Menu / Top
POP-UP/MENU	Pop-Up Menu	HOME MENU	Menu / Home
ON SCREEN	On Screen	SIZE ZOOM	Zoom / Size
OPTION	Option	OPT-TOOLS SETUP	Setup / OPT / Tools

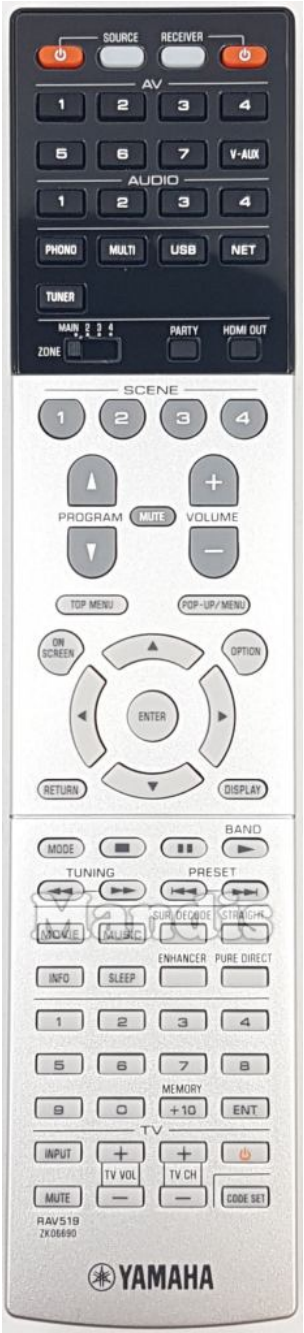

Original		Rechange		Original		Rechange	
RETURN	Return	RETURN BACK	Back / Return	SUR. DECODE	Sur Decode	SURROUND	Eject / Surround
DISPLAY	Display	MEDIA DISPLAY	Display / Media	STRAIGHT	Straight	TITLE SOUND	Sound / Title
▲	Up	▲	Up	INFO	Info	ANGLE INFO	Info / Angle
▼	Down	▼	Down	SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
▶	Right	▶	Right	ENHANCER	Enhancer	GOTO TEXT	Text / Goto
◀	Left	◀	Left	PURE DIRECT	Pure Direct	PROGRAM TV/RADIO	TV/Radio /
ENTER	Enter	OK	OK	1	1	TV 1	1
MODE	Mode	FORMAT PICTURE	Picture / Format	2	2	DVD 2	2
■	Stop	HOLD ■	Stop / Hold	3	3	CD-STB 3	3
❚❚	Pause	STEP-FREEZE ❚❚	Pause / Step / Freeze	4	4	VIDEO 4	4
BAND ▶	Play/Band	SLOW ▶	Play / Slow	5	5	TAPE 5	5
TUNING ◀◀	<< Tuning	TUNE- ◀◀	<< / Tune-	6	6	TUNER 6	6
TUNING ▶▶	Tuning >>	TUNE+ ▶▶	>> / Tune+	7	7	AUX-HDD 7	7
PRESET ⏮	I<< Preset	PRESET- ⏮	I<< / Preset-	8	8	USB 8	8
PRESET ⏭	Preset >>I	PRESET+ ⏭	>>I / Preset+	9	9	BLUETOOTH 9	9
MOVIE	Movie	EQ SUBTITLE	Subtitle / EQ	0	0	HDMI-SAT 0	0
MUSIC	Music	LANG I/II AUDIO	Audio / Lang I/II	MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--

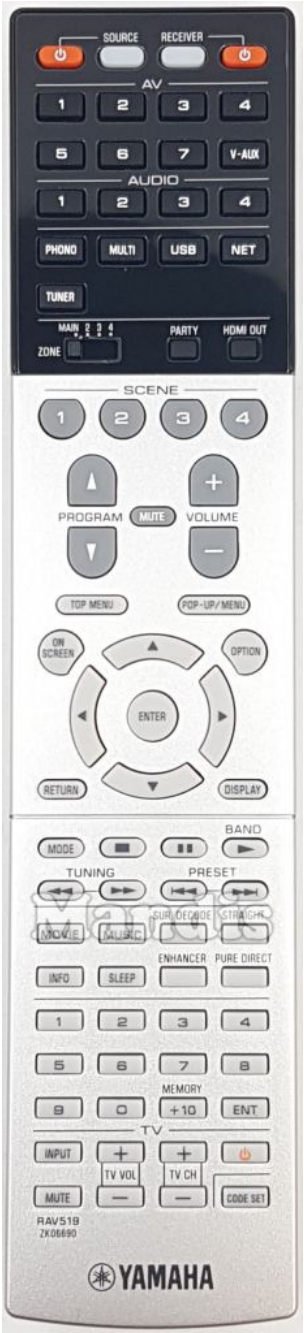

Original	Rechange	Original	Rechange
ENT.	Fav / Marker / PC		

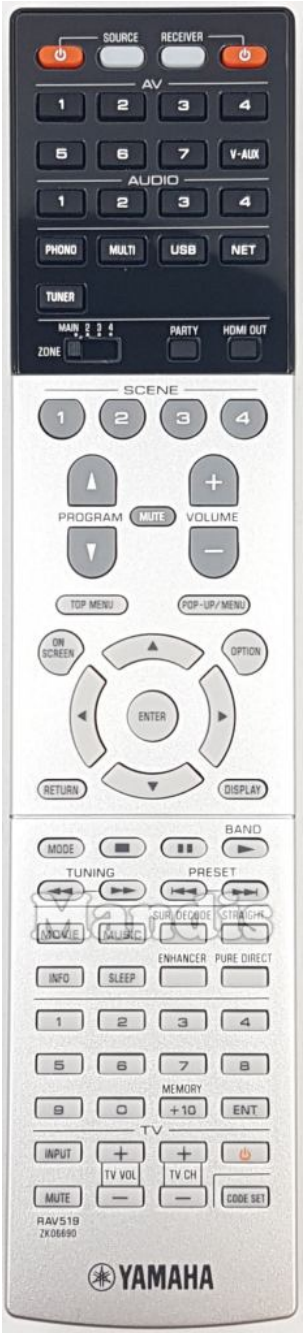

Original	Rechange
Power Receiver	Power
Power Source	SHIFT + Power — Shift + Power
AV1	SHIFT + 1 — Shift + 1
AV2	SHIFT + 2 — Shift + 2
AV3	SHIFT + 3 — Shift + 3
AV4	SHIFT + 4 — Shift + 4
AV5	SHIFT + 5 — Shift + 5
AV6	SHIFT + 6 — Shift + 6
AV7	SHIFT + 7 — Shift + 7
V-AUX	SHIFT + 8 — Shift + 8
Audio 1	SHIFT + 9 — Shift + 9
Audio 2	SHIFT + GUIDE EPG — Shift + Guide / EPG / -/--
Audio 3	SHIFT + 0 — Shift + 0
Audio 4	SHIFT + FAV MARKER — Shift + Fav / Marker / PC
Phono	SHIFT + NETFLIX SEARCH — Shift + Red / Netflix /
Net	SHIFT + SMART — Shift + Smart / List
USB	SHIFT + Prime Video RANDOM — Shift + Blue / Prime Video / Random

Original	Rechange
Tuner	SHIFT + YouTube REPEAT A-B — Shift + Yellow / YouTube /
Party	SMART — Smart / List
HDMI Out	AV INPUT — AV / Input / RDS
Scene 1	NETFLIX SEARCH — Red / Netflix / Search
Scene 2	APP REPEAT — Green / APP / Repeat
Scene 3	YouTube REPEAT A-B — Yellow / YouTube / Repeat
Scene 4	Prime Video RANDOM — Blue / Prime Video / Random
Mute	DIMMER MUTE — Mute / Dimmer
Volume+	VOL + — Vol +
Volume-	VOL - — Vol -
Pop-Up Menu	HOME MENU — Menu / Home
Top Menu	TOP MENU D.MENU — D.Menu / Top
Option	OPT-TOOLS SETUP — Setup / OPT /
Display	MEDIA DISPLAY — Display / Media
Return	RETURN BACK — Back / Return
On Screen	SIZE ZOOM — Zoom / Size
Up	Up

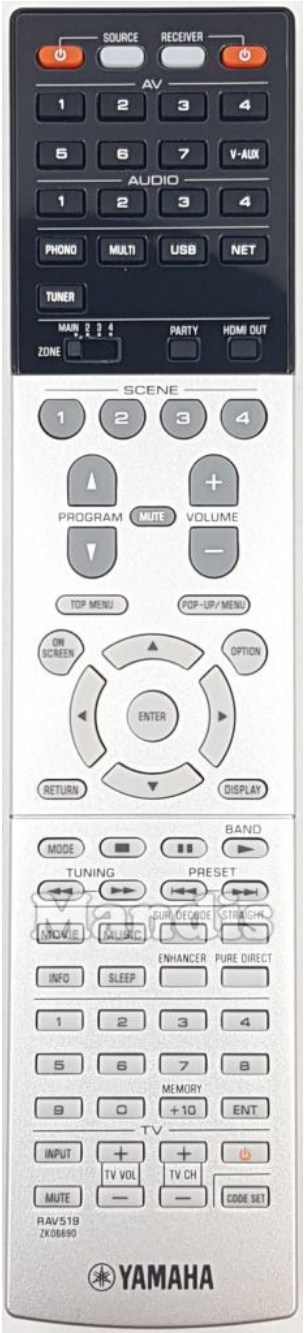

Original		Rechange	
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter	OK	OK
MODE	Mode	FORMAT PICTURE	Picture / Format
	Stop	HOLD	Stop / Hold
	Pause	STEP-FREEZE	Pause / Step / Freeze
BAND	Play/Band	SLOW	Play / Slow
	<< Tuning	TUNE-	<< / Tune-
	Tuning >>	TUNE+	>> / Tune+
	I<< Preset	PRESET-	I<< / Preset-
	Preset >>I	PRESET+	>>I / Preset+
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Rechange	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC

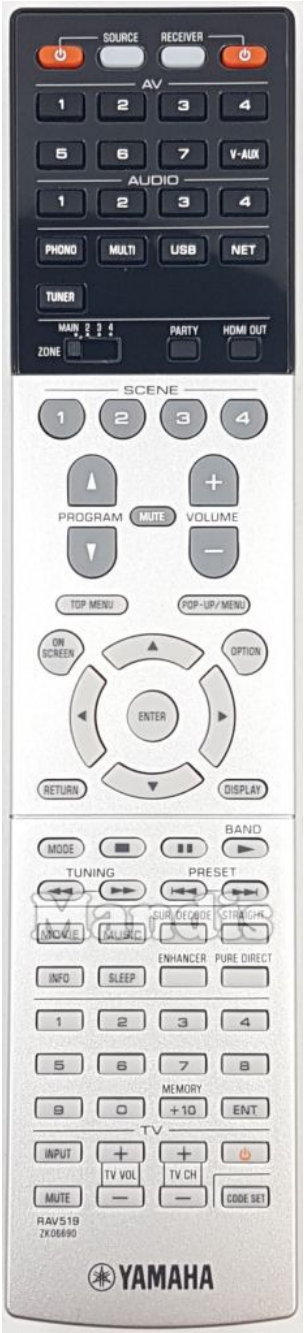

Original	Rechange
Power Receiver	Power
Power Source	SHIFT + Power: Shift + Power
AV1	SHIFT + 1: Shift + 1
AV2	SHIFT + 2: Shift + 2
AV3	SHIFT + 3: Shift + 3
AV4	SHIFT + 4: Shift + 4
AV5	SHIFT + 5: Shift + 5
AV6	SHIFT + 6: Shift + 6
AV7	SHIFT + 7: Shift + 7
V-AUX	SHIFT + 8: Shift + 8
Audio 1	SHIFT + 9: Shift + 9
Audio 2	SHIFT + GUIDE EPG: Shift + Guide / EPG / -/--
Audio 3	SHIFT + 0: Shift + 0
Audio 4	SHIFT + FAV MARKER: Shift + Fav / Marker / PC
Phono	SHIFT + NETFLIX SEARCH: Shift + Red / Netflix /
USB	SHIFT + Prime Video RANDOM: Shift + Blue / Prime
NET	SHIFT + SMART: Shift + Smart / List

Original	Rechange
Tuner	SHIFT + YouTube REPEAT A-B: Shift + Yellow / YouTube /
Party	SMART: Smart / List
HDMI Out	AV INPUT: AV / Input / RDS
Scene 1	NETFLIX SEARCH: Red / Netflix / Search
Scene 2	APP REPEAT: Green / APP / Repeat
Scene 3	YouTube REPEAT A-B: Yellow / YouTube / Repeat
Scene 4	Prime Video RANDOM: Blue / Prime Video / Random
Volume+	VOL +: Vol +
Volume -	VOL -: Vol -
Mute	DIMMER MUTE: Mute / Dimmer
Pop-Up Menu	MENU: Menu / Home
Top Menu	D.MENU: D.Menu / Top
Info	INFO: Info / Angle
Option	SETUP: Setup / OPT /
Return	BACK: Back / Return
On Screen	ZOOM: Zoom / Size
Enter	OK: OK

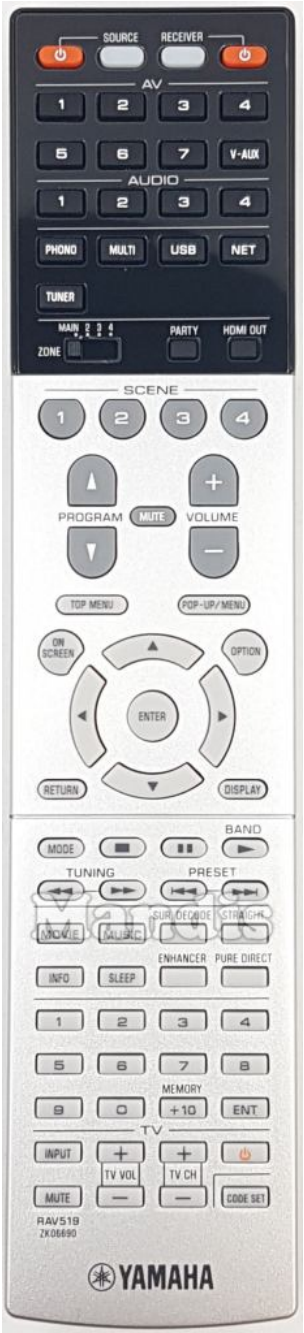

Original		Rechange	
DISPLAY	Display	MEDIA DISPLAY	Display / Media
▲	Up	▲	Up
▼	Down	▼	Down
▶	Right	▶	Right
◀	Left	◀	Left
MODE	Mode	FORMAT PICTURE	Picture / Format
■	Stop	HOLD ■	Stop / Hold
❚❚	Pause	STEP-FREEZE ❚❚	Pause / Step / Freeze
BAND ►	Play/Band	SLOW ▶	Play / Slow
◄◄	<< Tuning	TUNE- ◄◄	<< / Tune-
►►	Tuning >>	TUNE+ ►►	>> / Tune+
►◄	I<< Preset	PRESET- ►◄	I<< / Preset-
►►I	Preset >>I	PRESET+ ►►I	>>I / Preset+
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Rechange	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC

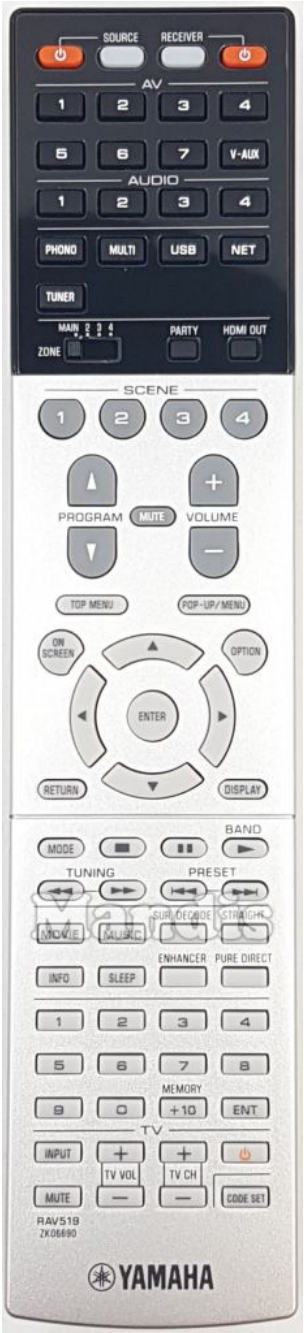

Original		Rechange	
	Power Receiver		Power
	Power Source	SHIFT +	Power
1	AV1	SHIFT +	TV 1
2	AV2	SHIFT +	DVD 2
3	AV3	SHIFT +	CD-STB 3
4	AV4	SHIFT +	VIDEO 4
5	AV5	SHIFT +	TAPE 5
6	AV6	SHIFT +	TUNER 6
7	AV7	SHIFT +	AUX-HDD 7
V-AUX	V-AUX	SHIFT +	USB 8
1	Audio 1	SHIFT +	BLUETOOTH 9
2	Audio 2	SHIFT +	-/-- GUIDE EPG
3	Audio 3	SHIFT +	HDMI-SAT 0
4	Audio 4	SHIFT +	PC FAV MARKER
PHONO	Phono	SHIFT +	NETFLIX SEARCH
USB	USB	SHIFT +	Prime Video RANDOM
NET	Net	SHIFT +	LIST SMART

Original		Rechange	
TUNER	Tuner	SHIFT +	YouTube REPEAT A-B
PARTY	Party		LIST SMART
HDMI OUT	HDMI Out		RDS AV INPUT
1	Scene 1		NETFLIX SEARCH
2	Scene 2		APP REPEAT
3	Scene 3		YouTube REPEAT A-B
4	Scene 4		Prime Video RANDOM
+ VOLUME	Volume+		+ VOL
VOLUME −	Volume-		VOL −
MUTE	Mute		DIMMER MUTE
TOP MENU	Top Menu		TOP MENU D.MENU
POP-UP/MENU	Pop-Up Menu		HOME MENU
ON SCREEN	On Screen		SIZE ZOOM
OPTION	Option		OPT-TOOLS SETUP
RETURN	Return		RETURN BACK
DISPLAY	Display		MEDIA DISPLAY
▲	Up		▲

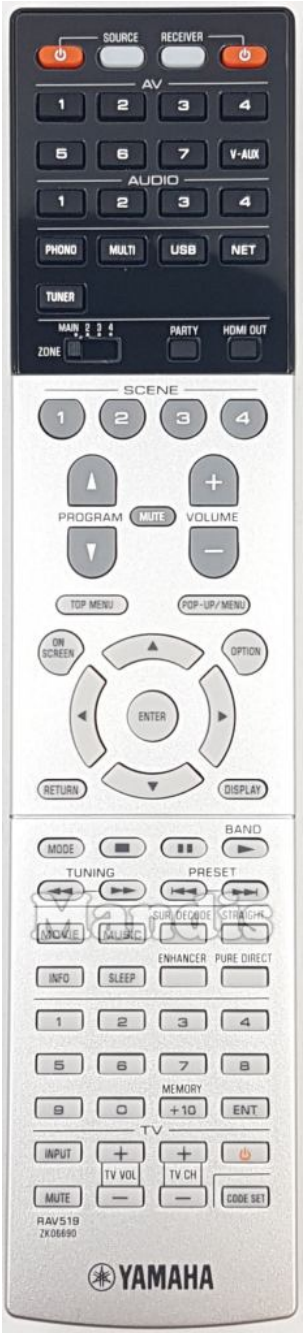

Original		Rechange	
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter	OK	OK
MODE	Mode	FORMAT PICTURE	Picture / Format
	Stop	HOLD	Stop / Hold
	Pause	STEP-FREEZE	Pause / Step / Freeze
BAND	Play/Band	SLOW	Play / Slow
	<< Tuning	TUNE-	<< / Tune-
	Tuning >>	TUNE+	>> / Tune+
	I<< Preset	PRESET-	I<< / Preset-
	Preset >>I	PRESET+	>>I / Preset+
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Rechange	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC