Mandis shop

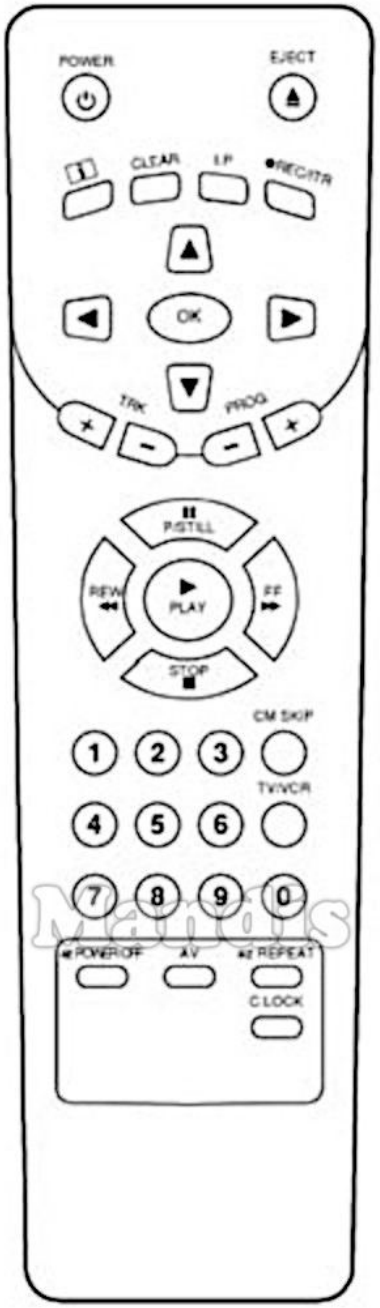

Original		Rechange	
POWER	Power		Power
EJECT	Eject	SURROUND	Eject / Surround
i	i	ANGLE INFO	Info / Angle
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
LP	LP	HOME MENU	Menu / Home
REC/ITR	Rec / ITR	REC MODE	Rec / Rec Mode
	Up		Up
	Left		Left
OK	OK	OK	OK
	Right		Right
	Down		Down
P/STILL	P/Still	STEP-FREEZE	Pause / Step / Freeze
REW	Rew	TUNE-	<< / Tune-
PLAY	Play	SLOW	Play / Slow
FF	FF	TUNE+	>> / Tune+
STOP	Stop	HOLD	Stop / Hold
1	1	TV 1	1

Original		Rechange	
2	2	DVD 2	2
3	3	CD-STB 3	3
CM SKIP	CM Skip	MEDIA DISPLAY	Display / Media
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
TV/VCR	TV / VCR	LIST SMART	Smart / List
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
POWER OFF	ez Power Off	DIMMER MUTE	Mute / Dimmer
AV	AV	RDS AV INPUT	AV / Input / RDS
REPEAT	ez Repeat	APP REPEAT	Green / APP / Repeat
C.LOCK	C. Lock	TOP MENU D.MENU	D. Menu / Top

https://mandis.tv/fr/Busky/1061395-telecommande-remplacement-pour-Busky-X20N.htm