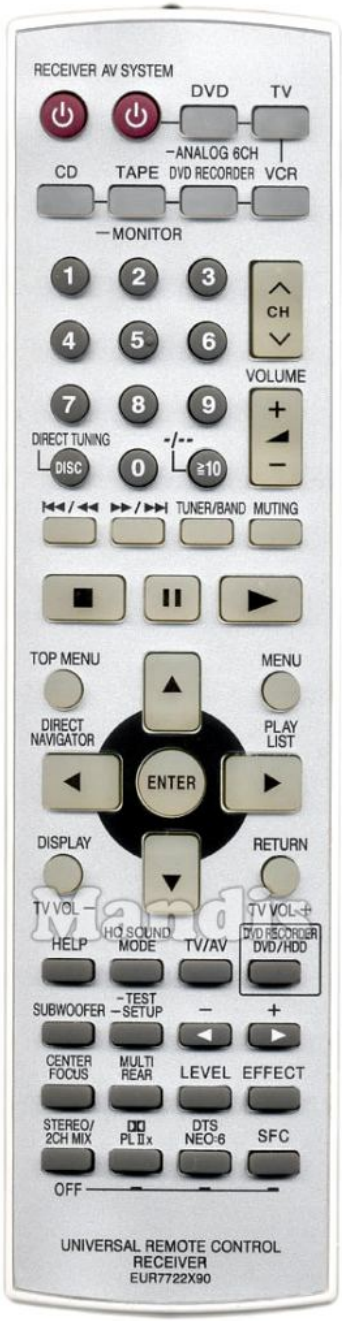

Original		Rechange	
RECEIVER	Power Receiver		Power
DVD -ANALOG 6CH	DVD / Analog 6CH	SHIFT + DVD 2	Shift + 2
TV	TV	SHIFT + TV 1	Shift + 1
CD	CD	SHIFT + CD - STB 3	Shift + 3
TAPE -MONITOR	Tape / Monitor	SHIFT + TAPE 5	Shift + 5
DVD RECORDER	DVD Recorder	SHIFT + AUX - HDD 7	Shift + 7
VCR	VCR	SHIFT + VIDEO 4	Shift + 4
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
VOLUME +	Volume+	+ VOL	Vol +

Original		Rechange	
DIRECT TUNING DISC	Disc / Direct Tuning	LIST SMART	Smart / List
0	0	HDMI - SAT 0	0
-/-- ≧10	≧10 / -/--	-/-- GUIDE EPG	Guide / EPG / -/--
	Volume-	VOL −	Vol -
⏮/◀◀	⏮ / ◀◀	TUNE- ◀◀	◀◀ / Tune-
▶▶/⏭	▶▶ / ⏭	TUNE+ ▶▶	▶▶ / Tune+
TUNER/BAND	Tuner / Band	MEDIA DISPLAY	Display / Media
TUNER/BAND	Tuner / Band	SHIFT + TUNER 6	Shift + 6
MUTING	Muting	DIMMER MUTE	Mute / Dimmer
▲	Up	▲	Up
MENU PLAY LIST	Menu / Play List	HOME MENU	Menu / Home
◀	Left	◀	Left
ENTER	Enter	OK	OK
▶	Right	▶	Right
▼	Down	▼	Down
SUBWOOFER	Subwoofer	EQ SUBTITLE	Subtitle / EQ
-TEST -SETUP	Test / Setup	OPT-TOOLS SETUP	Setup / OPT / Tools

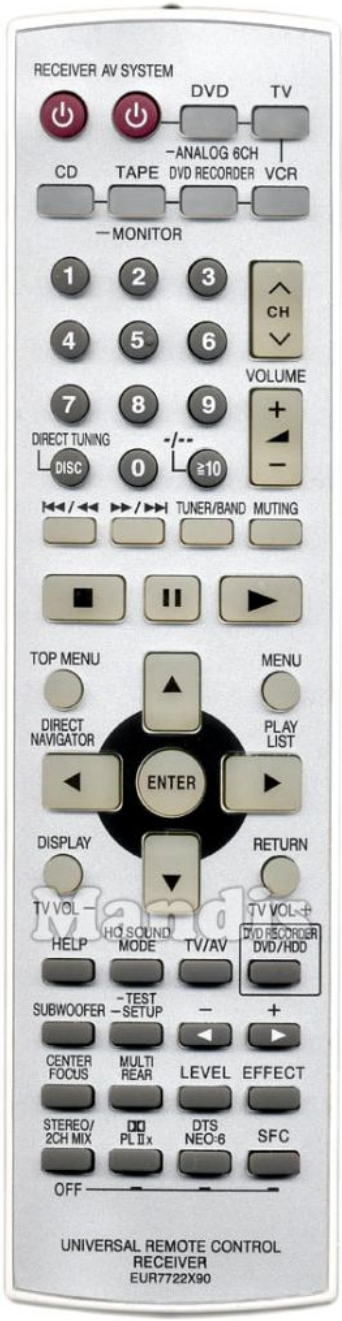

Original		Rechange		Original	Rechange
	◄ / -		CH- / Page-		
	► / +		CH+ / Page+		
MULTI REAR	Multi Rear	TOP MENU D.MENU	D. Menu / Top		
LEVEL	Level	ANGLE INFO	Info / Angle		
EFFECT	Effect	TITLE SOUND	Sound / Title		
STEREO/ 2CH MIX OFF	Stereo / 2CH Mx OFF	NETFLIX SEARCH	Red / Netflix / Search		
PL IIx	Dolby PL IIx	APP REPEAT	Green / APP / Repeat		
DTS NEO:6	DTS	YouTube REPEAT A-B	Yellow / YouTube / Repeat		
SFC	SFC	Prime Video RANDOM	Blue / Prime Video / Random		